



INSTALLATION GUIDE

CONNECT 4 (EU)



JUUNOO CONNECT 4


Technical data sheet

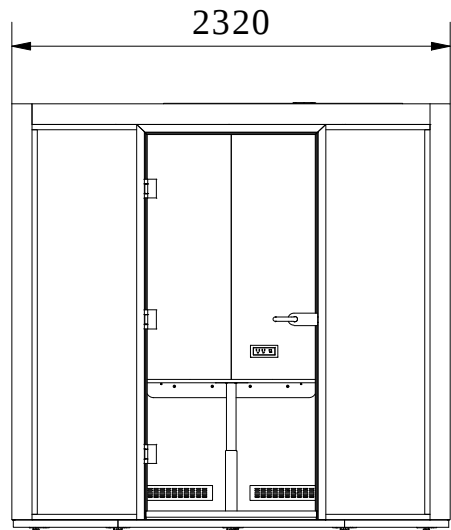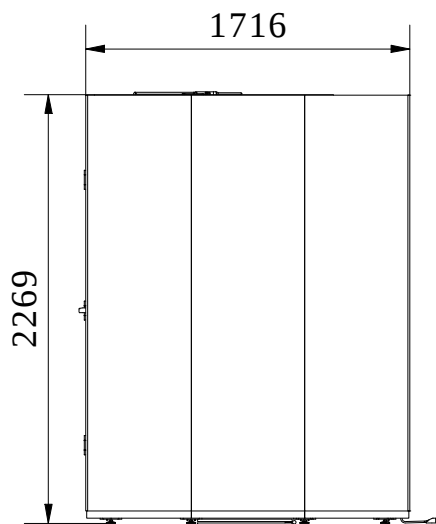

Exterior dimensions	(W x D x H) 2320 mm x 1716 mm x 2270 mm
Height tolerance for leveling feet	±12.7 mm
Interior dimensions	(W x D x H) 2110 mm x 1563 mm x 2088 mm
Doorway	(W x H) 890 mm x 2035 mm
Desktop dimensions	(W x D) 720 mm x 1120 mm
Desk height	740 mm
Acoustics	30 dB
Airflow	Multiple fans refresh air every 60 seconds
Lighting	Adjustable light dimmer up to 4000 lm
Power usage	100 W ~ (0.1 kwh) while in use / 1.2 W standby
Power requirements	230V, earthed plug
Power cord length	2134 mm
Table outlets	2 power socket, 1 USB-A, 1 USB-C
Capacity (person)	4
Total weight	Bruto 760 kg / netto 610 kg
Warranty coverage	2-year warranty


JUUNOO CONNECT 4

Tools included for install




TX 15

Torx bit 15




TX 20

Torx bit 20 (SPAX)



H 4

Hex bit 4



H 5

Hex bit 5




**METRIC
H 1.5**

Allen key H1.5

Tools needed for install




Allen key set



PH 1

Philips bit 1




PH 2


Philips bit 2




Drill Bit Ø3mm

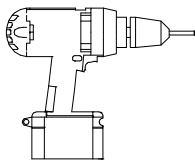


Power drill




Mallet




Cutter



Ruler




Laser



Spirit level




Gloves

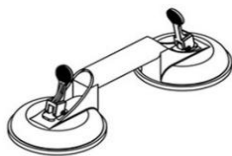


Suction cups




Inflatable shim x2

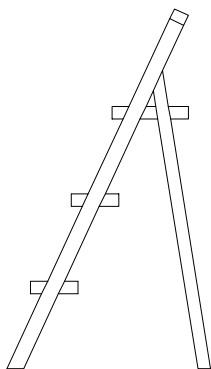


Stepping stool

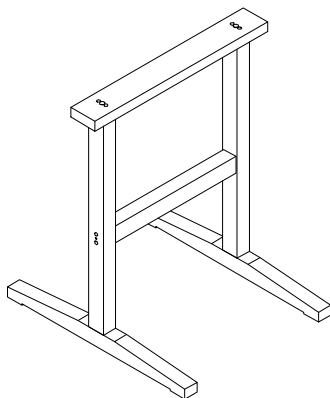


Sawhorse x2

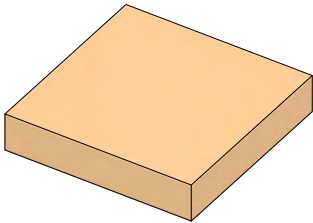


BOX SMALL PARTS
780 BOX CON 4 EU

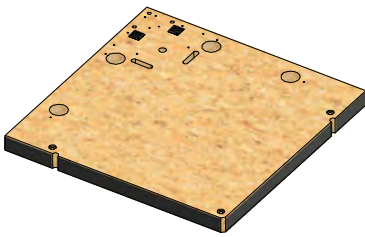


4X
FLOORPLATE A
710 A 552 552 201

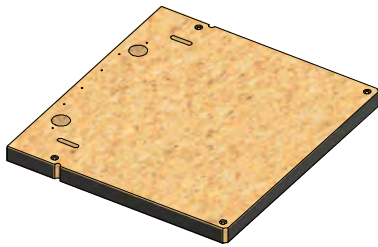


4X
FLOORPLATE B
710 P 600 552 201

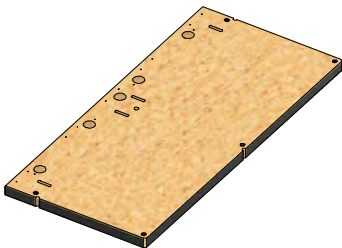


2X
FLOORPLATE C
710 A 1200 552 201

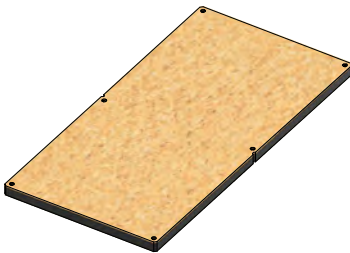


1X
FLOORPLATE E
710 P 1200 600 201

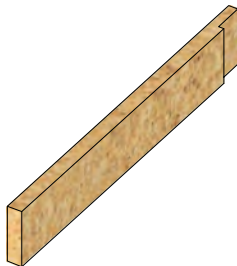


2X
TABLE SUPPORT BRACKET
780 598 100 200

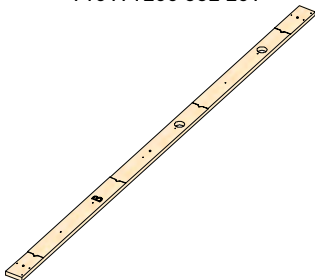

1X
TOP BEAM BACK
751 PLW B 2138 X4

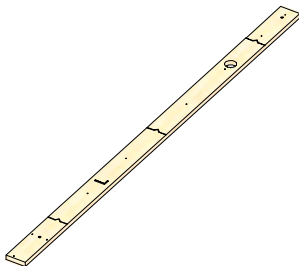

1X
TOP BEAM LEFT
751 PLW L 1067 X2

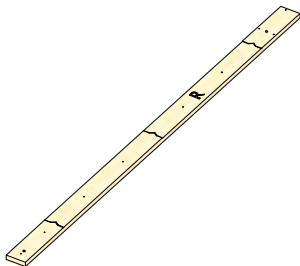

1X
TOP BEAM RIGHT
751 PLW R 1067 X2




3X
EXTERIOR BASECLICK PANEL A
721 2200 002 A T




3X
EXTERIOR BASECLICK PANEL B
721 2200 002 B T



4X
EXTERIOR BASECLICK PANEL C
721 2200 002 C T

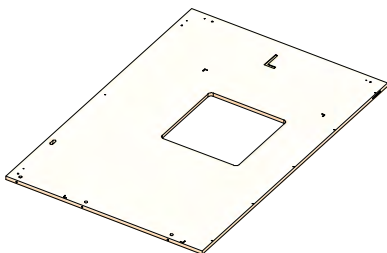


1X
BIRCH CEILING PANEL LEFT
752 CON4 L 018 222

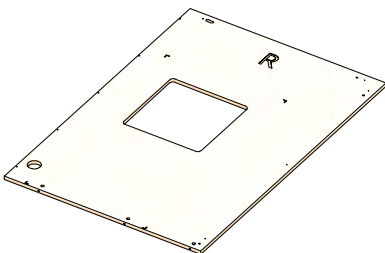


1X
BIRCH CEILING PANEL RIGHT
752 CON4 R 018 222




2X
VENTILIGHT 60 BOX
790 010 060 v2

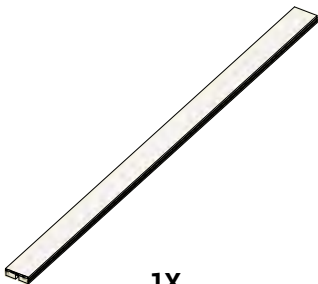

1X
FACADE BEAM HOR
751 HOR X4 2105 502

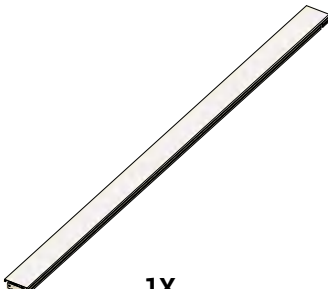


1X
FACADE BEAM LEFT
751 VER L 2200 502

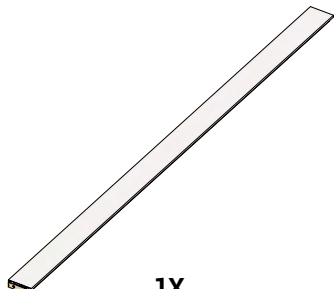

1X
FACADE BEAM RIGHT
751 VER R 2200 502




1X
TABLE TOP

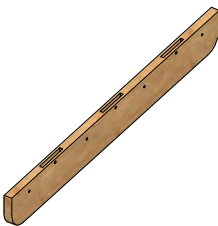

1X
TABLE SUPPORT PANEL



1X
ADJUSTABLE TABLE LEG
780 900 012

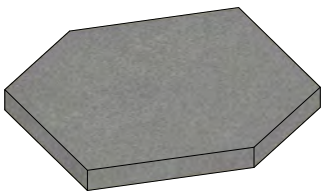

30X
HEXAGON FOAM PANELS
720 P 50 465 660 304



5X
'SOFT BOB' CARPET TILE
711 930 972 310



1 X G
FELT PANEL "G"
722 G 00 T



1 X A
FELT PANEL "A"
722 A 00 T





1 X C
FELT PANEL "C"
722 C 00 T





1 X H
FELT PANEL "H"
722 H 00 T





2 X E
FELT PANEL "E"
722 E 00 T

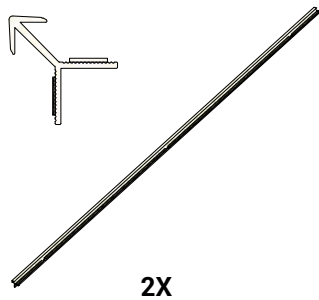



2X
CORNER FINISH PROFILE
500 JN 2200 502 G

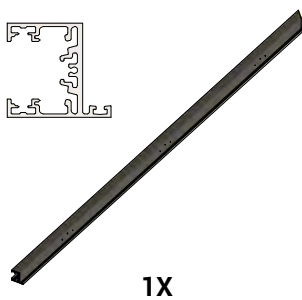

1X
VERTICAL DOOR HINGE PROFILE
733 V 2090 HI 501 DL

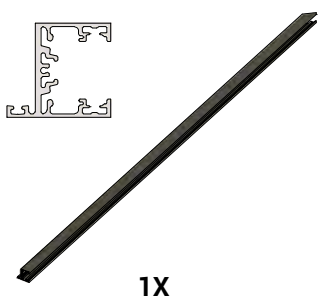

1X
VERTICAL DOOR LOCK PROFILE
733 V 2090 LO 501 DL

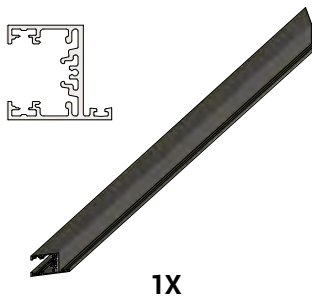


1X
HORIZONTAL DOOR PROFILE
733 HOR 1000 501



1X
DOOR BOTTOM PLINTH
732 DOOR 1000 501




2X
WINDOW BOTTOM PLINTH
732 X4 552 501

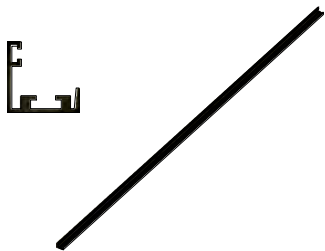


1X
TOP FACADE BASE PROFILE
L. 2104MM
731 HOR B 2104 501



1X
BOTTOM **LEFT** WINDOW
BASE PROFILE. 570MM
731 HOR B 0570 L 501

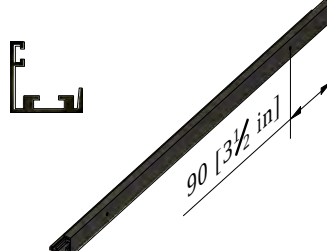


1X
BOTTOM **RIGHT** WINDOW
BASE PROFILE L. 570MM
731 HOR B 0570 R 501

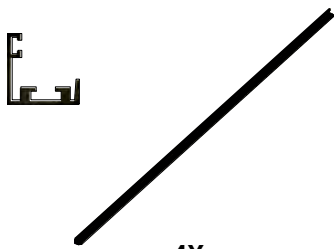


4X
VERTICAL BASE PROFILE
L. 2034 MM
731 VER B 2034 501



4X
VERTICAL CLICK PROFILE
L. 2034 MM
731 VER C 2034 501

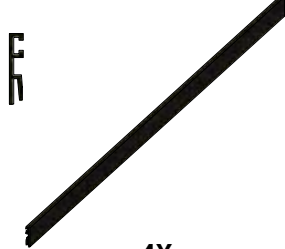


4X
HORIZONTAL WINDOW CLICK PROFILE
L. 557 MM
731 HOR C 0557 501

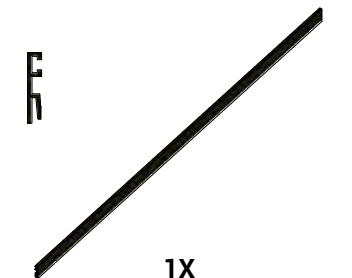


1X
HORIZONTAL DOOR CLICK PROFILE
L. 986 MM
731 HOR C 0986 501




1X
DROPSEAL KIT
734 904 501

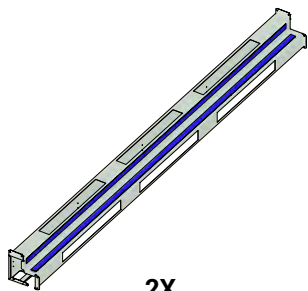


2X
CORNER MODULE
PT 75 2075

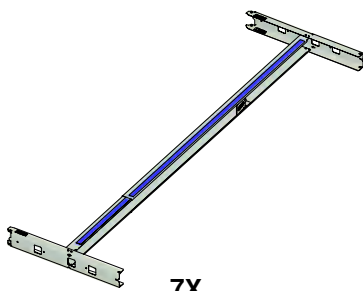


7X
I MODULE
IT 75 M

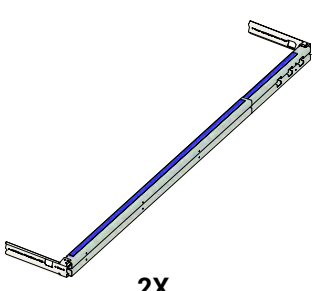


2X
C MODULE
CT 75 M

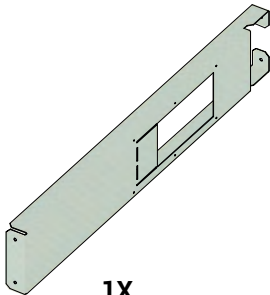

1X
OUTLET SUPPORT BRACKET
781 OUTLET CON

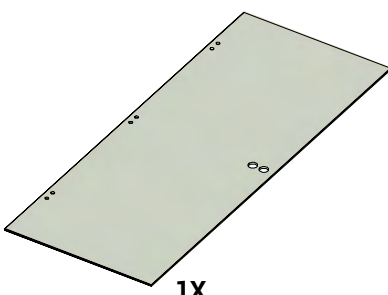

1X
GLASS LEAF DOOR
725 2035 910 10

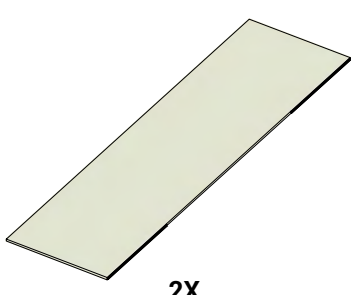


2X
GLASS LEAF WINDOW
725 2065 557 66.2 G




1X
CEILING SUPPORT PANEL
780 SUPPORT CEILING



36 X A
WOOD SCREW T20
Ø4 L16mm
635 040 016 T20




12 X B
WOOD SCREW T20
Ø4 L20mm
635 040 020 T20

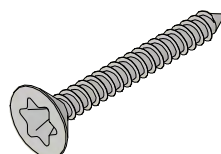

58 X D
WOOD SCREW T20
Ø4 L35mm
635 040 035 T20




4 X F
TRESPA SCREW T20
Ø4.8 L50 mm
637 048 050 T20 511

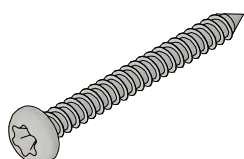


6 X G
METAL SCREW T15
Ø3.9 L38mm
630 039 0038 PAN T15




19 X H
METAL SCREW PH2 BLACK
Ø3.9 L13mm
630 039 013 PH2 BL




10 X I
METAL SCREW PH2
Ø3.5 L19mm
631 035 019 PH2

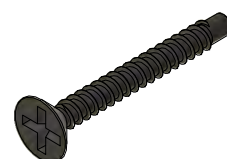


6 X J
METAL SCREW PH2 BLACK
Ø3.5 L35 mm
630 035 035 PH2 BL

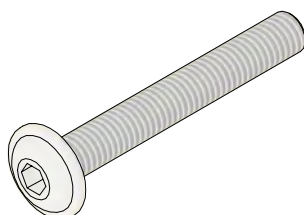


36 X L
HEX BOLT M6 H4 Ø6 L45mm
710 P9 45XM6 FLAT

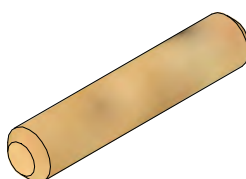


11 X M
WOOD DOWEL Ø8 L40mm
780 DOW 8 40 290

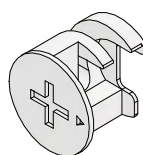


6 X O
RASTEX 15 - NO RIM Ø15
780 RASTEX 15

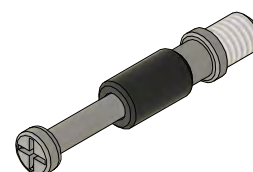


6 X P
RASTEX TWIST M6 Ø6 L30mm
780 TWISTER 30XM6

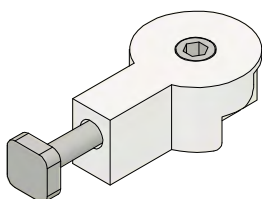


2 X Q
TABLETOP QUICK CONNECT
M8 L64mm
780 CON QUICK 35-64

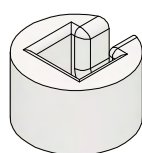


2 X R
TABLETOP QUICK CONNECT
CAP
780 CON QUICK CAP

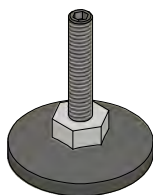


6X
LEVELING FOOT M10
710 P9 FOOT M10

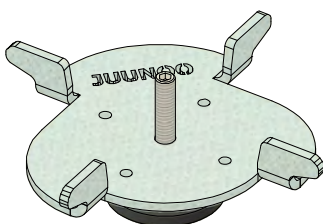


14X
JUUNOO LEVELPLATE + FOOT
710 A 150XM10 + FOOT

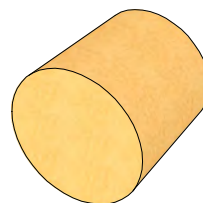

9X
CORK TAP
710 P9 CORK

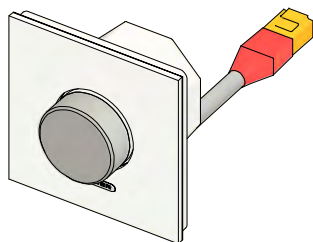


1X
DIMMER KIT V2
790 A DIM CON 002

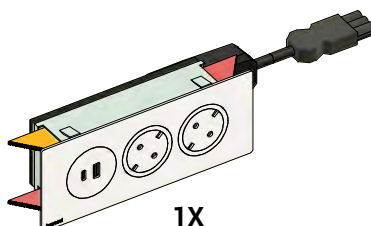


1X
LEGRAND OUTLET 2 PRONG US
USB A+C
790 001 015 EU W




1X 5m
POWER CABLE US + WIELAND(F)
790 000 012 W

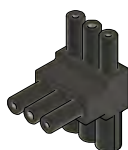


1X
WIELAND GST18-T SPLITTER
790 001 062

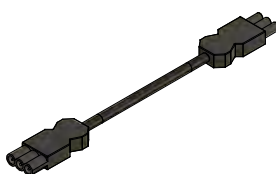


1X 1m
WIELAND CABLE M-F
790 001 065

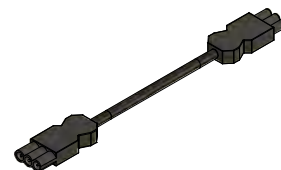


1X 4m
WIELAND CABLE M-F
790 001 066

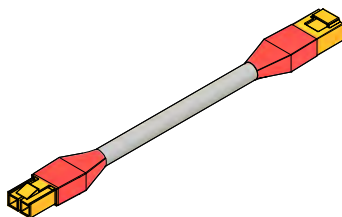


1X 3m
GRAY CABLE M-F RED
791 001 043 300 MF R

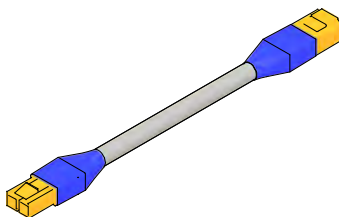


1X 2m
GRAY CABLE M-F BLUE
791 001 043 200 MF B

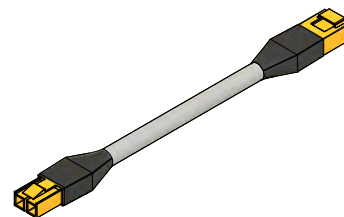


1X 2m
GRAY CABLE M-F BLACK
791 001 043 200 MF Z

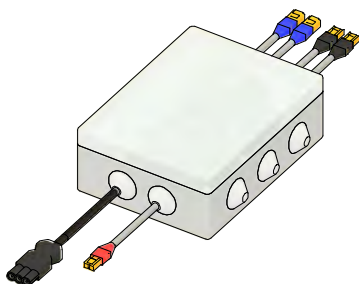


DIMMABLE JUNCTION BOX 2 VENTILIGHT
791 001 051 2V

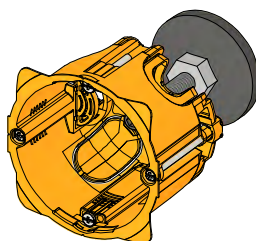


1X
LEGRAND WALL BOX + FOOT
790 001 003 + FOOT

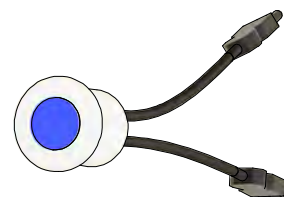


1X
MOVEMENT SENSOR KIT
790 A SENS1

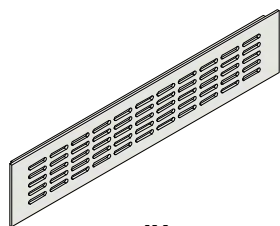


4X
VENTILATION GRID ANO
791 400 080 500

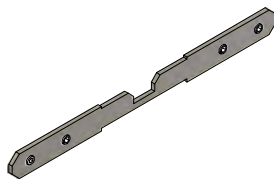


2X
L CONNECTION IRON
382 020 300 000

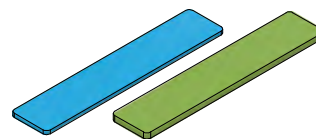

GLASS SHIM SET
6X [1MM-2MM] + 4X 5MM

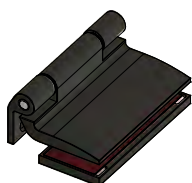

3X
GLASS DOOR HINGE
COLCOM 8674.62 BLACK MATTE
450 GST C8674 501

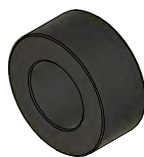


6X
O-RING BUSHING 18MM
450 GST C8674 BUSH S



GLASS DOOR CASE
DORMA 10.200 BLACK
451 GST 501



GLASS DOOR HANDLE
DORMA 10.314 BLACK
452 GST 501

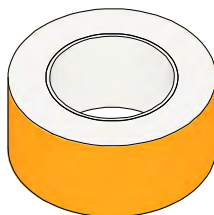

1 ROLL
CARPET TAPE
601 DBL 25 050 322






5m
INSULATING FOAM TAPE
T=4MM W=6MM
651 4PE 006 20 304




10m
INSULATING FOAM TAPE
T=1MM W=10MM
651 1PE 010 20 304


STEP 1.1

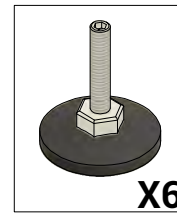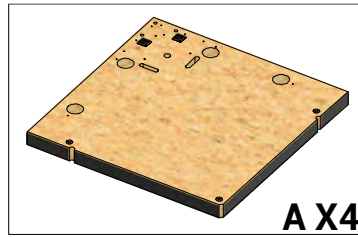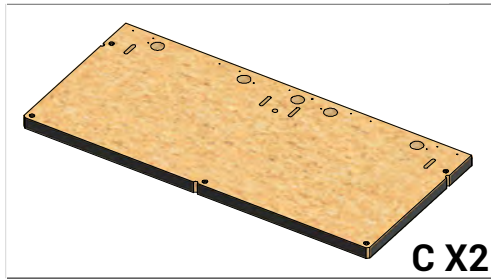

TOOLS NEEDED







TX 20

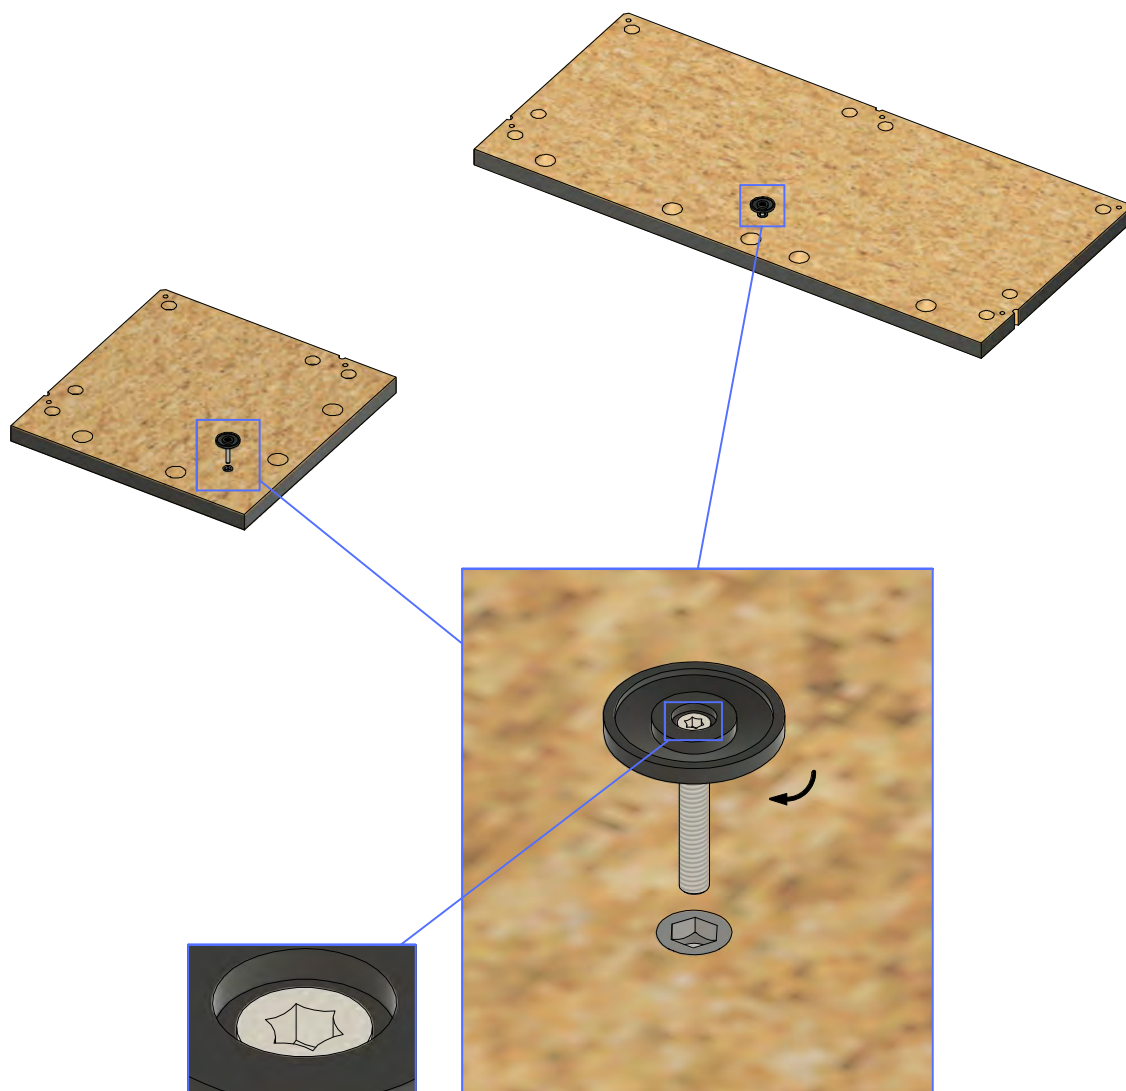



DO NOT TORQUE THE LEVELING FOOT. THREAD IN UNTIL JUST TIGHT.

STEP 1.2

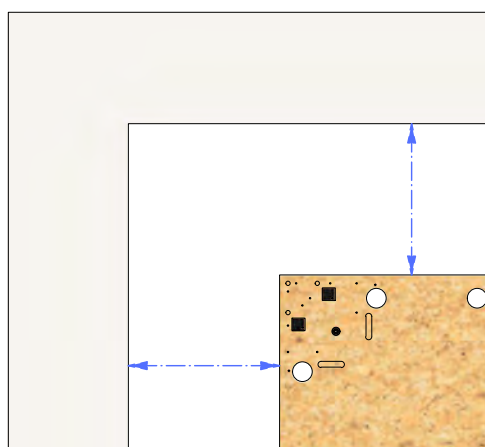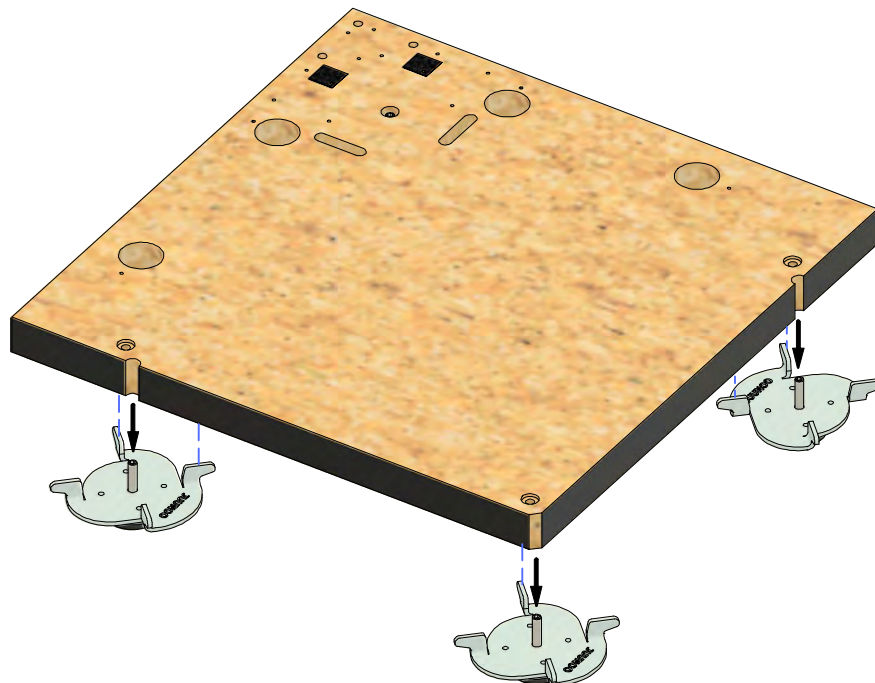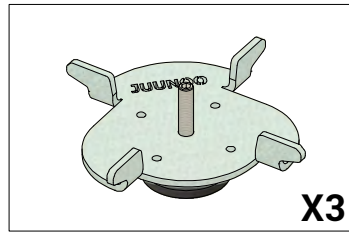
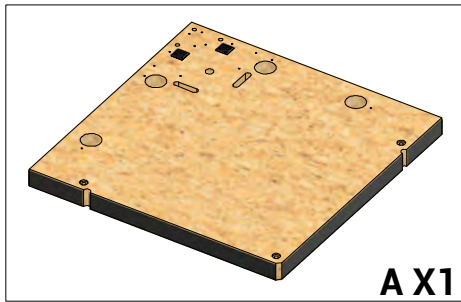


**MINIMUM 40 cm
AWAY FROM ARCHITECTURE**



STEP 1.3

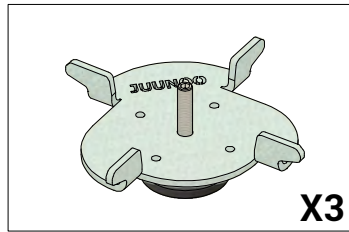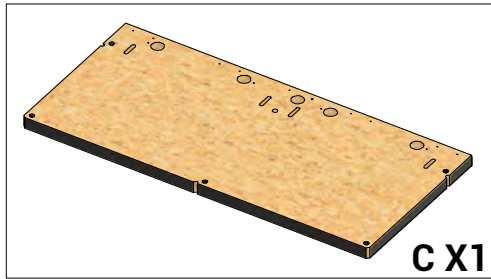



TOOLS NEEDED

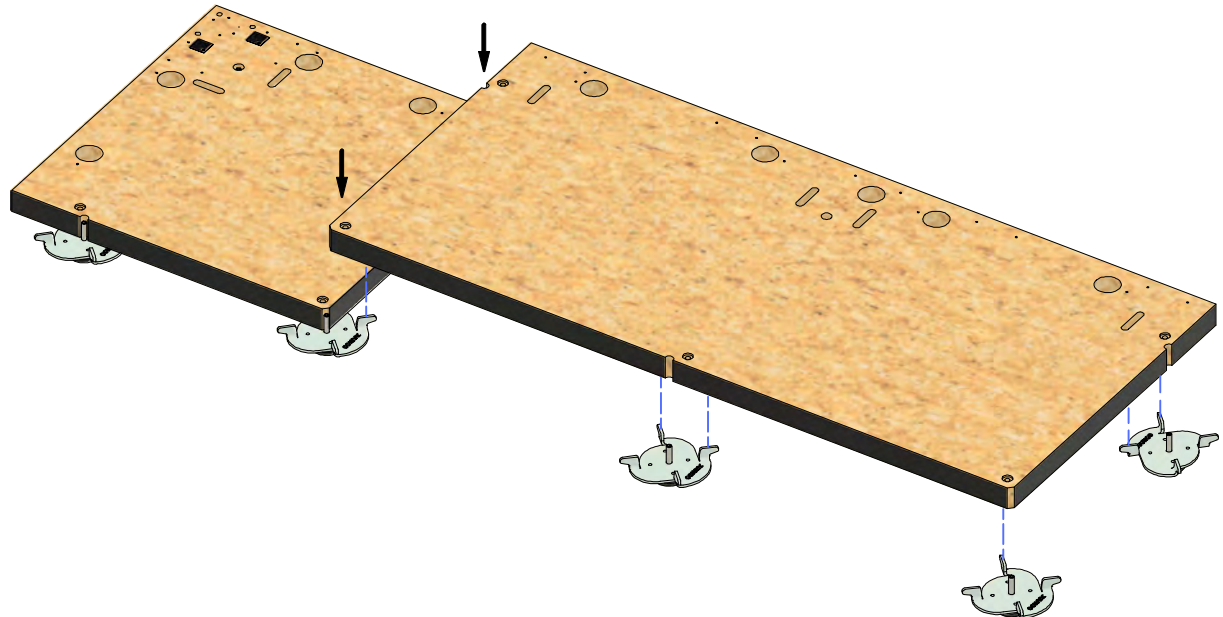






STEP 1.4

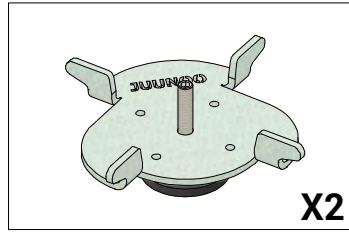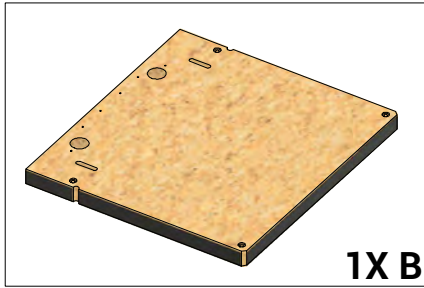



TOOLS NEEDED

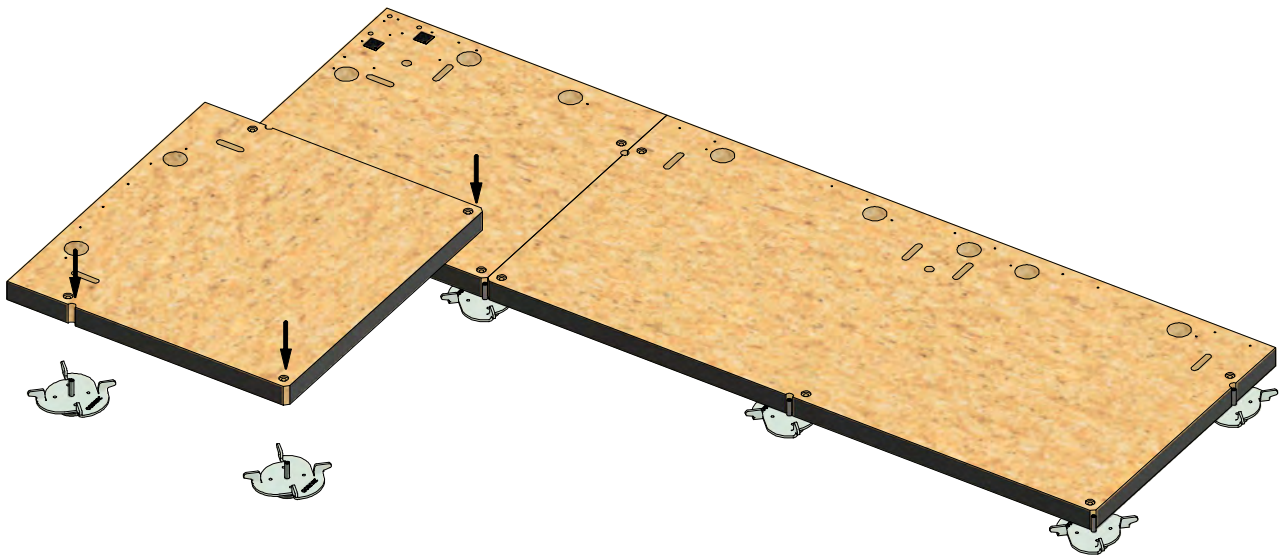

STEP 1.5

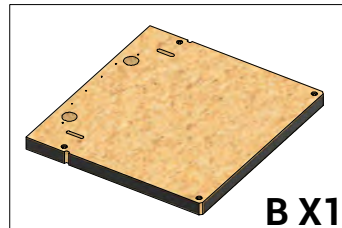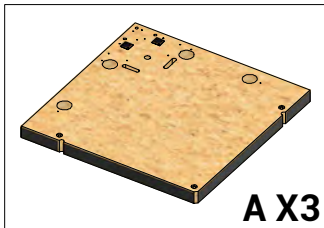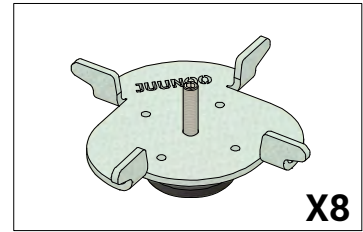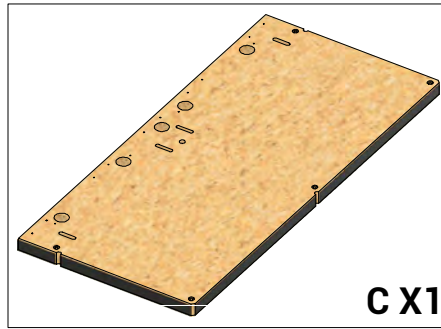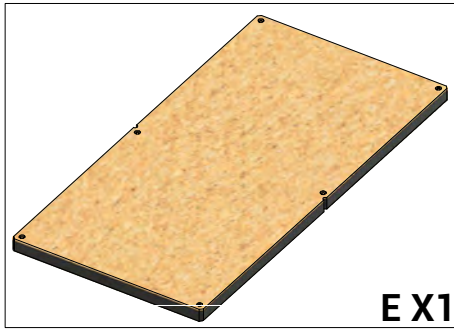


TOOLS NEEDED

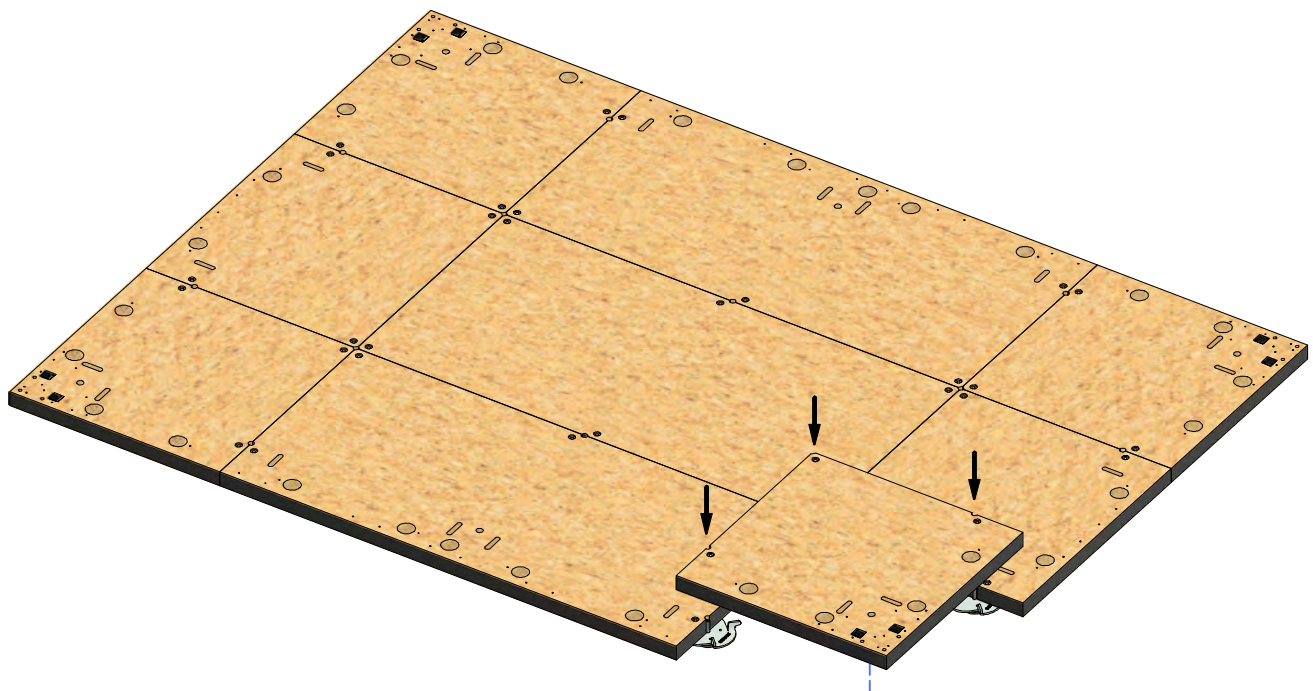


LAY OUT ALL REMAINING FLOOR TILES

TAP THE EDGES OF THE TILES WITH A RUBBER Mallet TO ALIGN AT THE SEAMS.



STEP 1.6

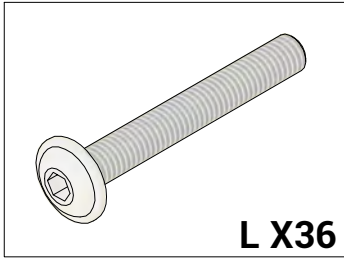

TOOLS NEEDED



H 5

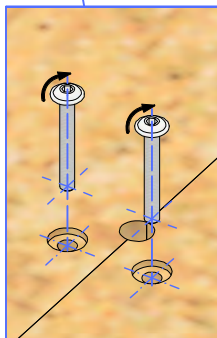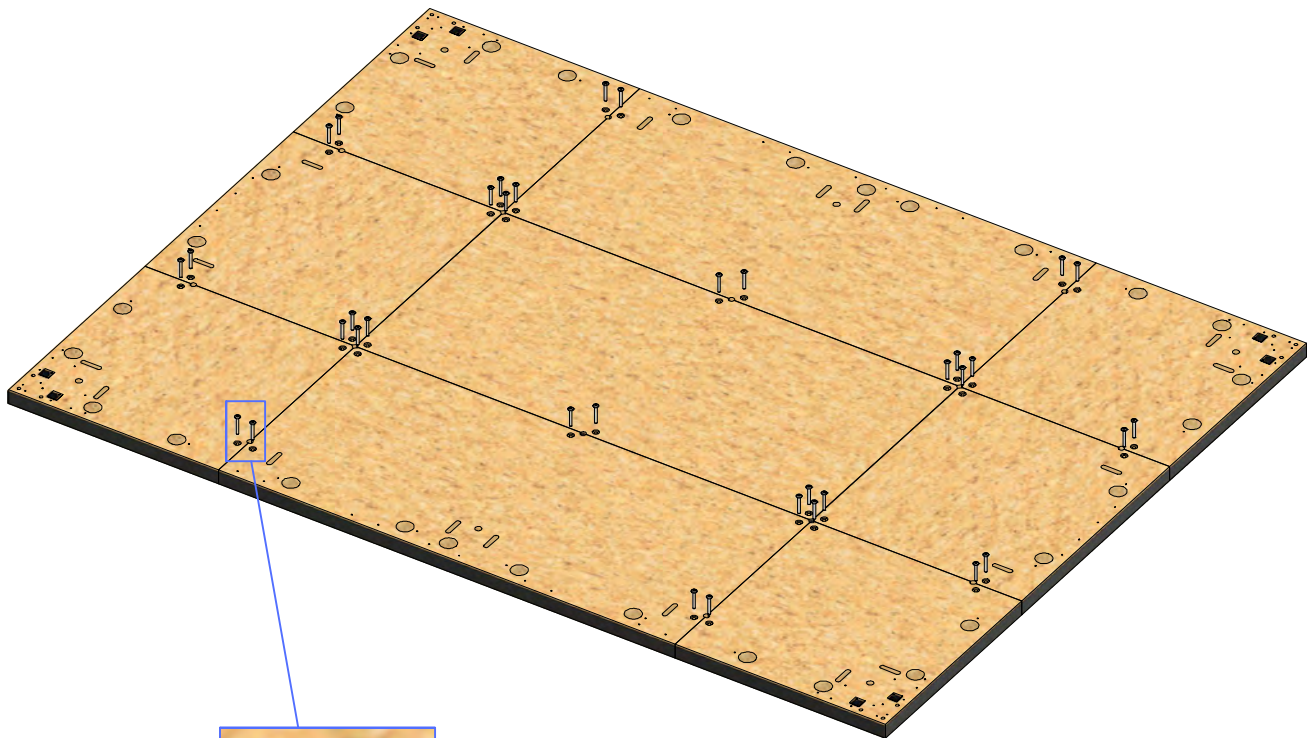


BOLT FLOORTILES



THRU-BOLT THE FLOORTILES TO THE WINGED PLATES. TORQUE THEM SLIGHTLY SO THE CONNECTIONS ARE ALL SECURE.

STEP 1.7



TOOLS NEEDED



H 5






LEVEL FLOOR

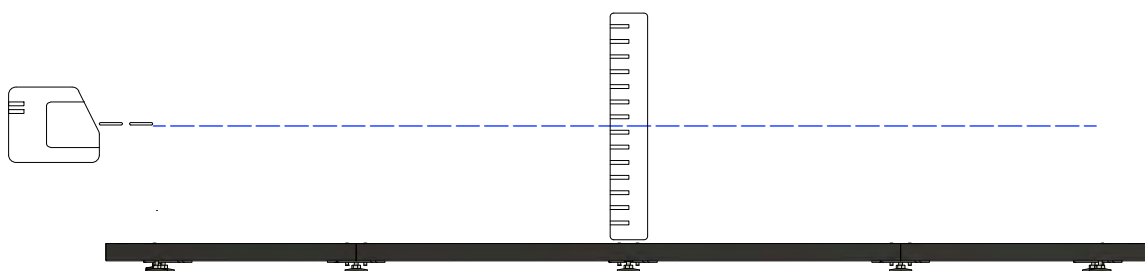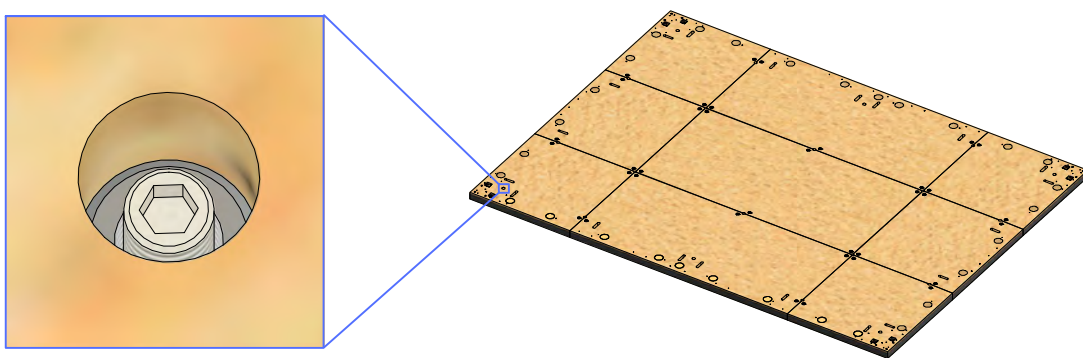



1. SET A LASER SO THE LINE IS VISIBLE ABOVE THE FLOOR.
2. LOCATE THE HIGHEST SPOT (ABOVE EACH LEVELFEET) BY MEASURING TO THE LASERLINE.
3. MARK THE HIGHPOINT (= THE LOWEST LENGTH) ON THE RULER.
4. RAISE ALL LEVELING FEET UNTIL THE MARK IS EVEN WITH THE LASERLINE.

STEP 1.8

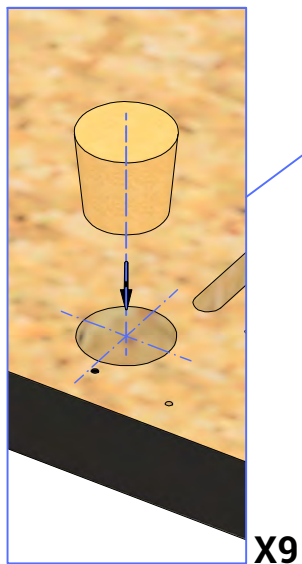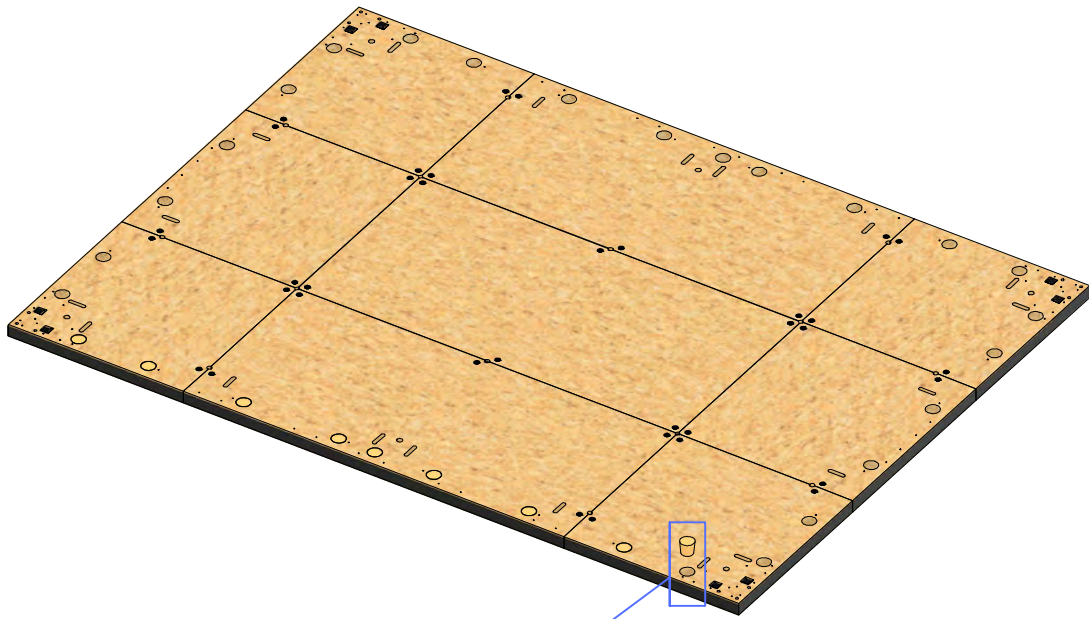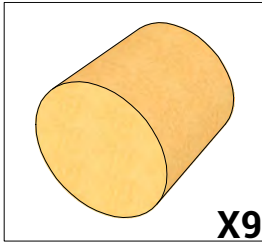


TAP THE CORK PLUGS INTO THE HOLES ON THE FRONT EDGE UNTIL THEY ARE FLUSH WITH THE TOP OF THE FLOOR PLATE




STEP 2.1

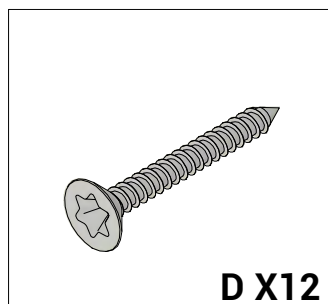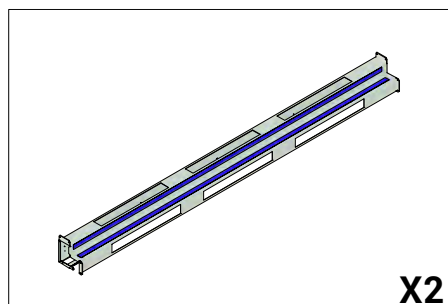


TOOLS NEEDED






TX 20

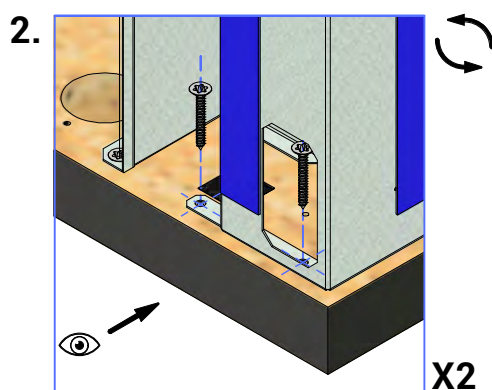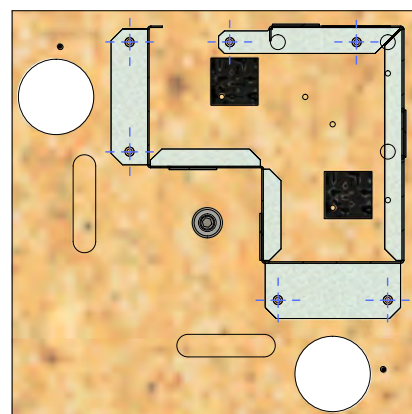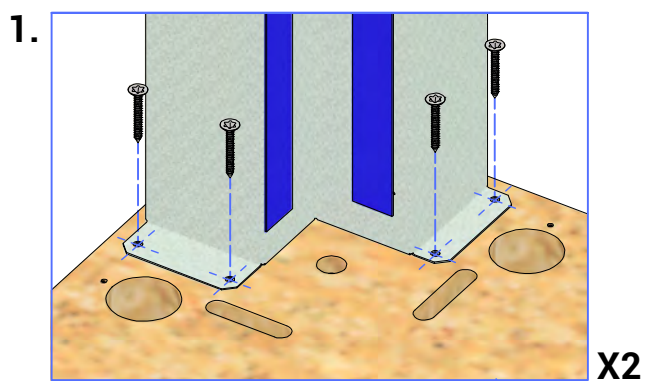


**FACE THE OPEN SLID
TOWARDS THE REAR.**

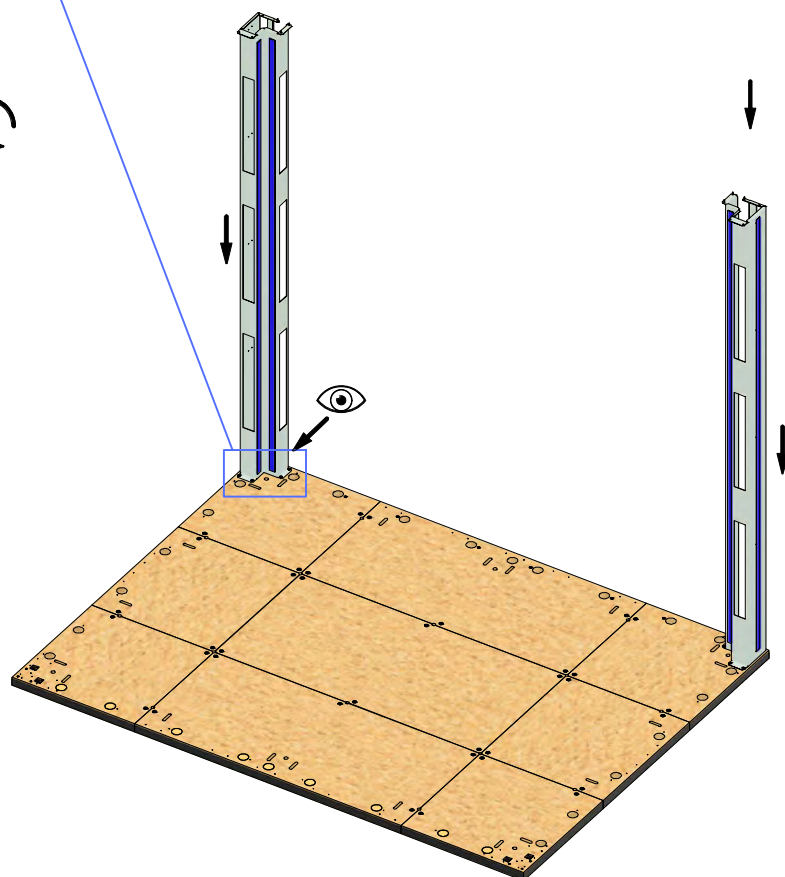





STEP 2.2

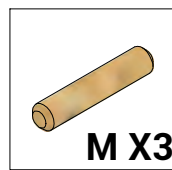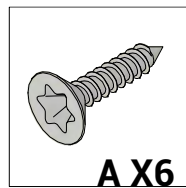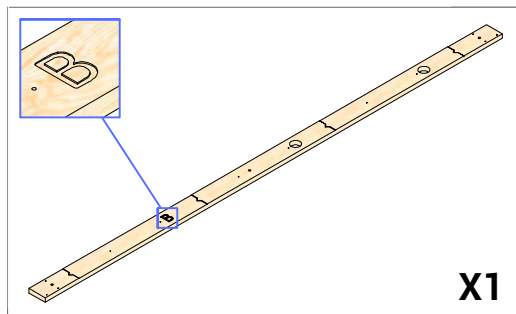




TOOLS NEEDED




TX 20

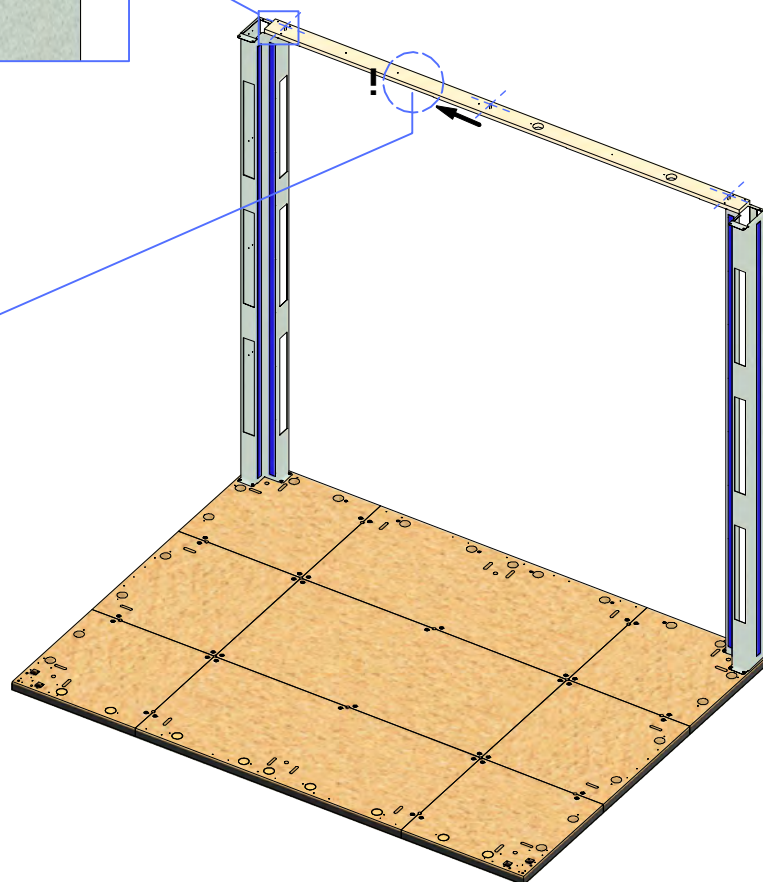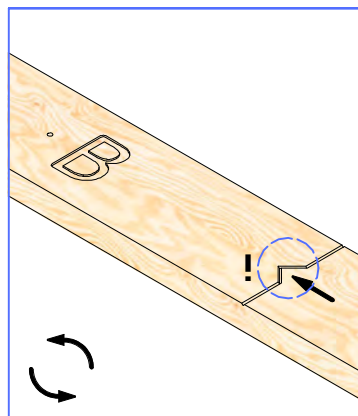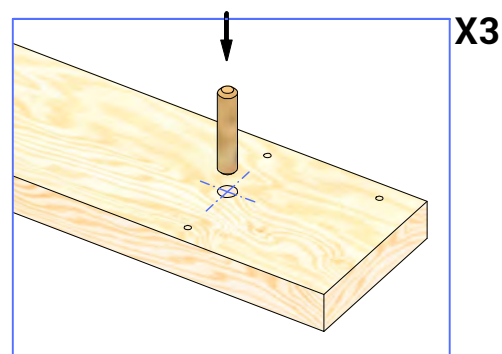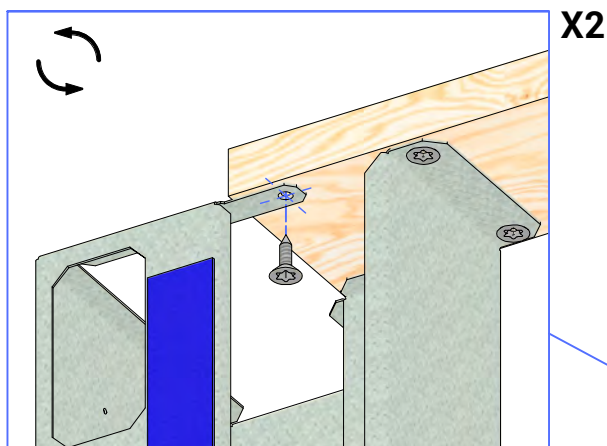





STEP 2.3

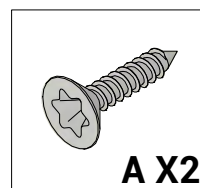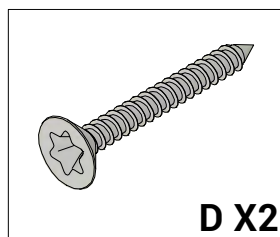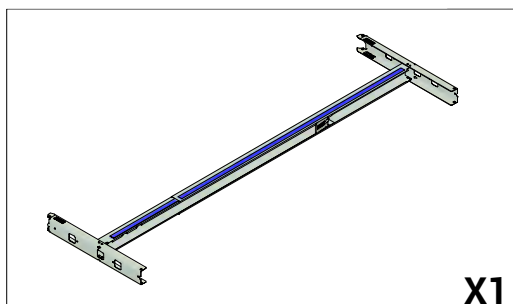




TOOLS NEEDED




TX 20

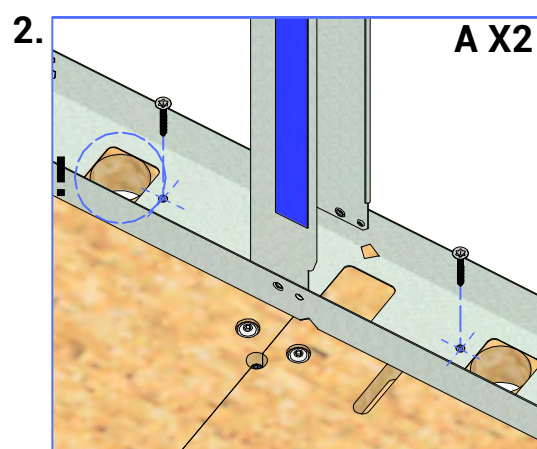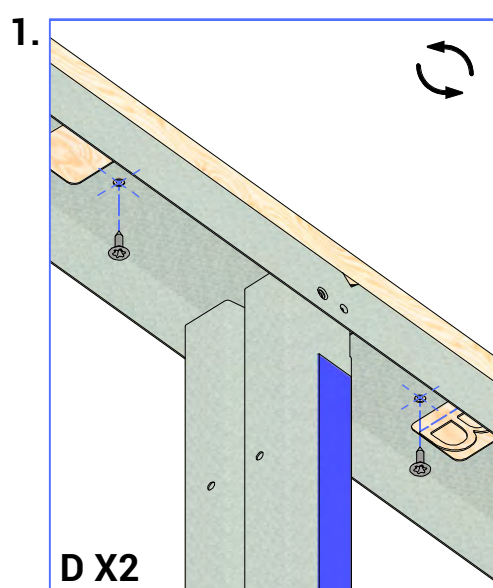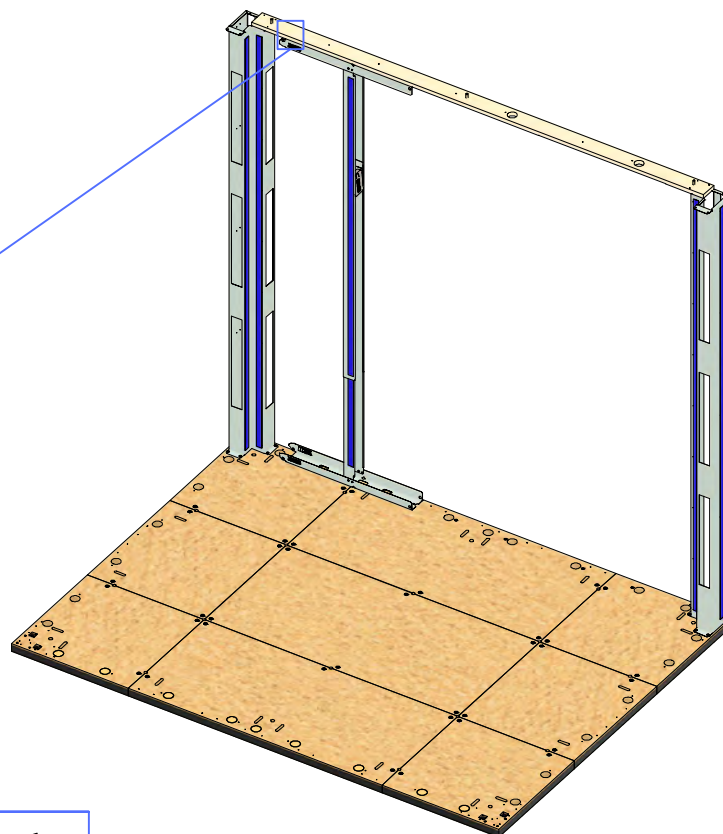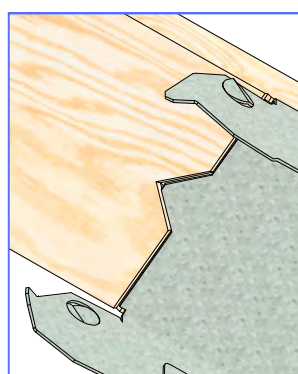

STEP 2.4

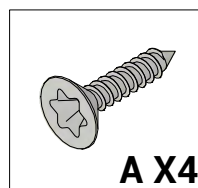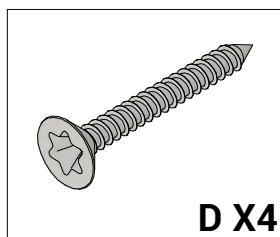
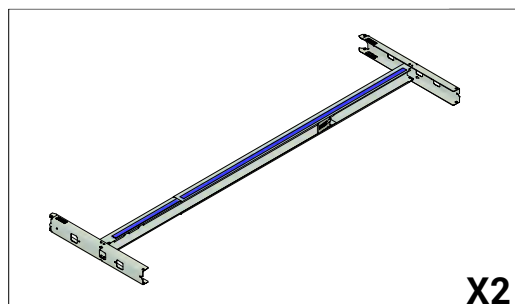


TOOLS NEEDED







TX 20


REPEAT FROM STEP 2.3

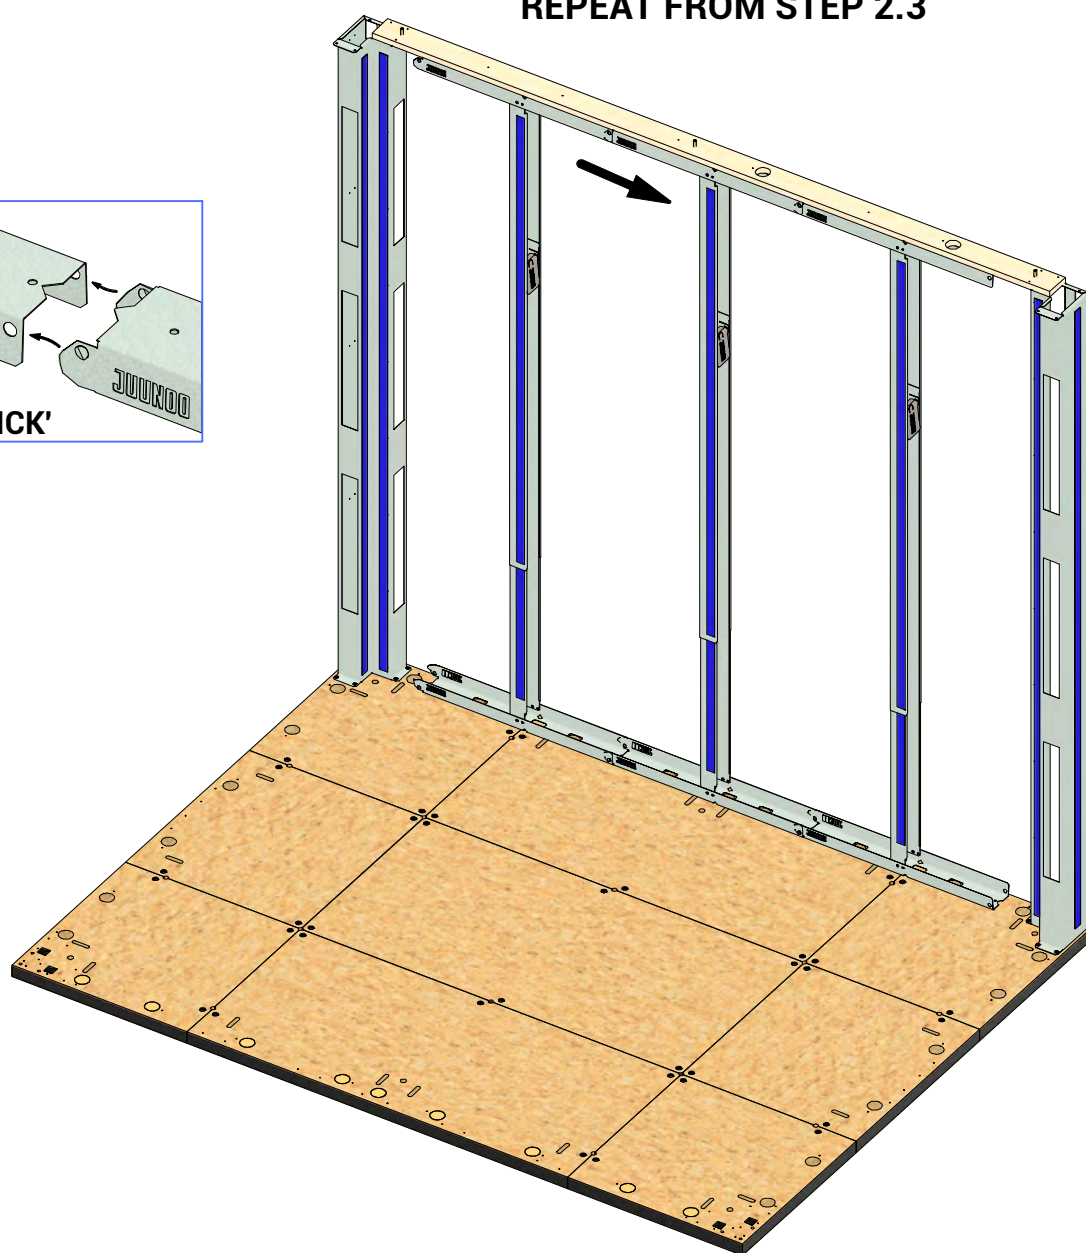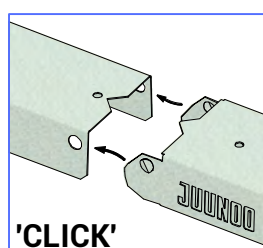





STEP 3.1

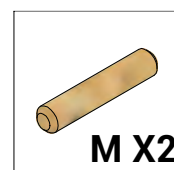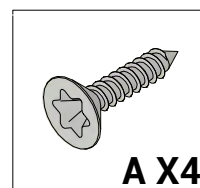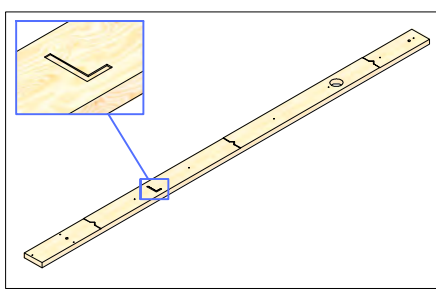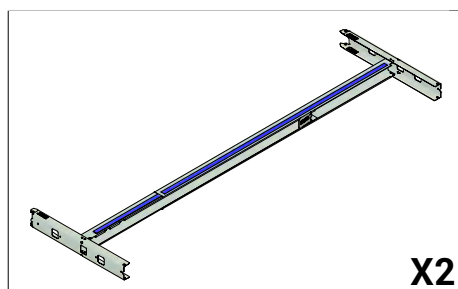



TOOLS NEEDED




TX 20

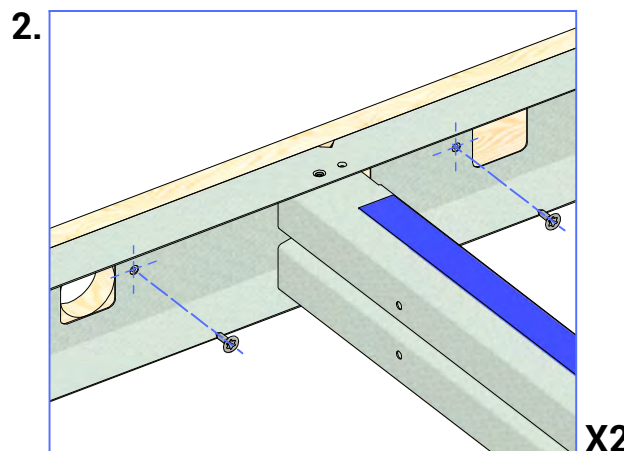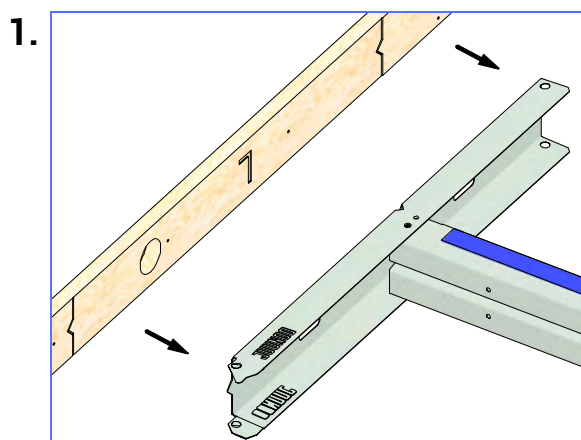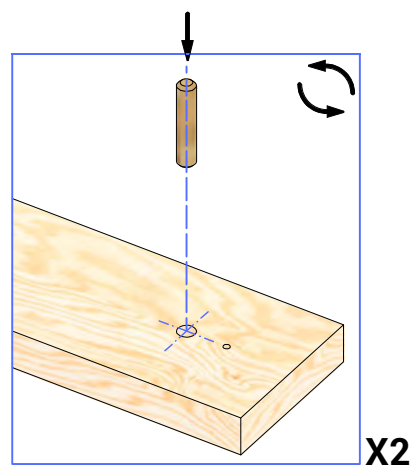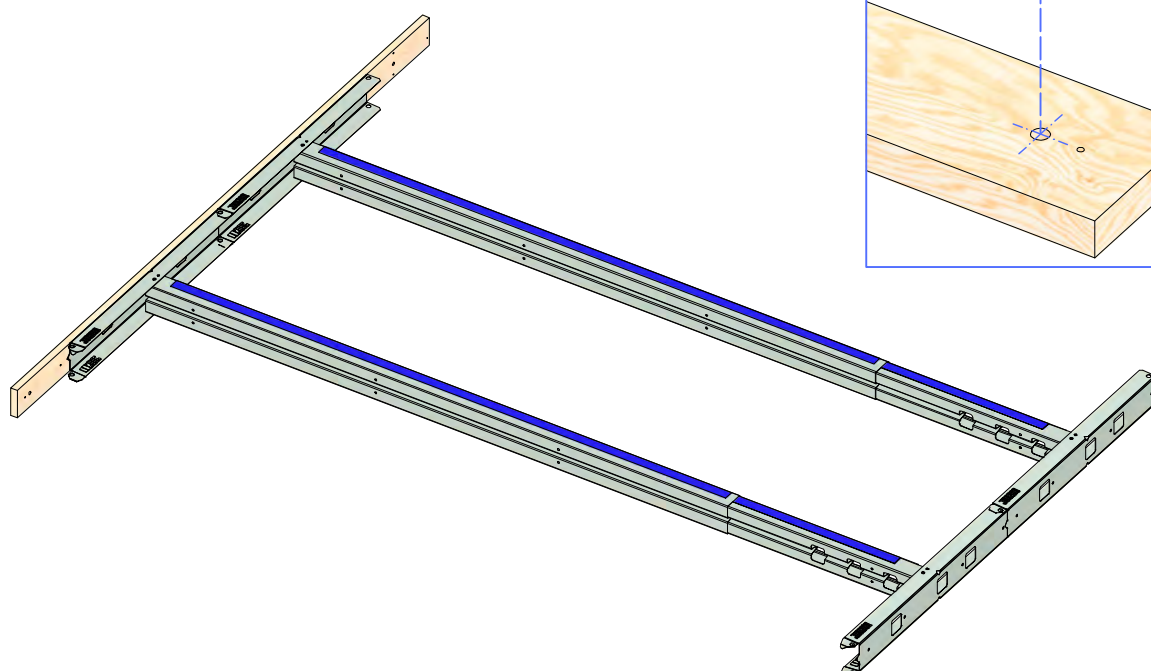




STEP 3.2

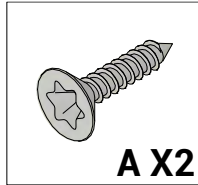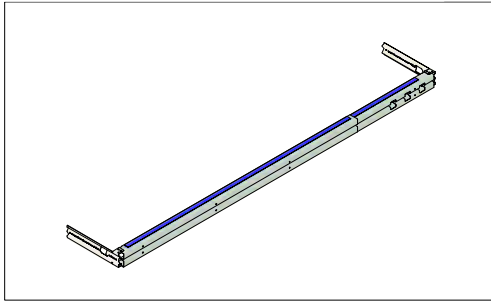



TOOLS NEEDED





TX 20

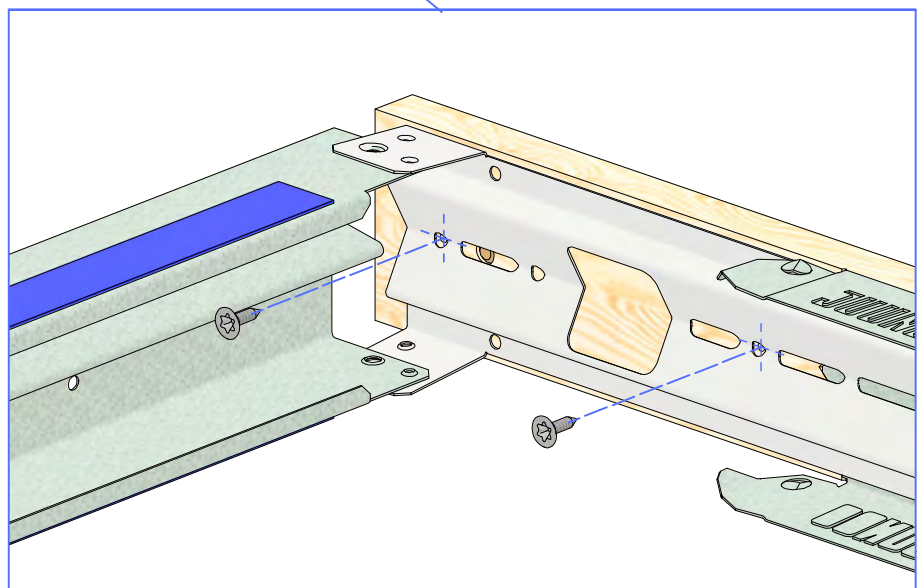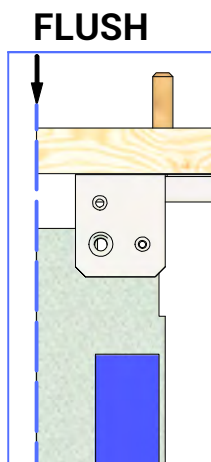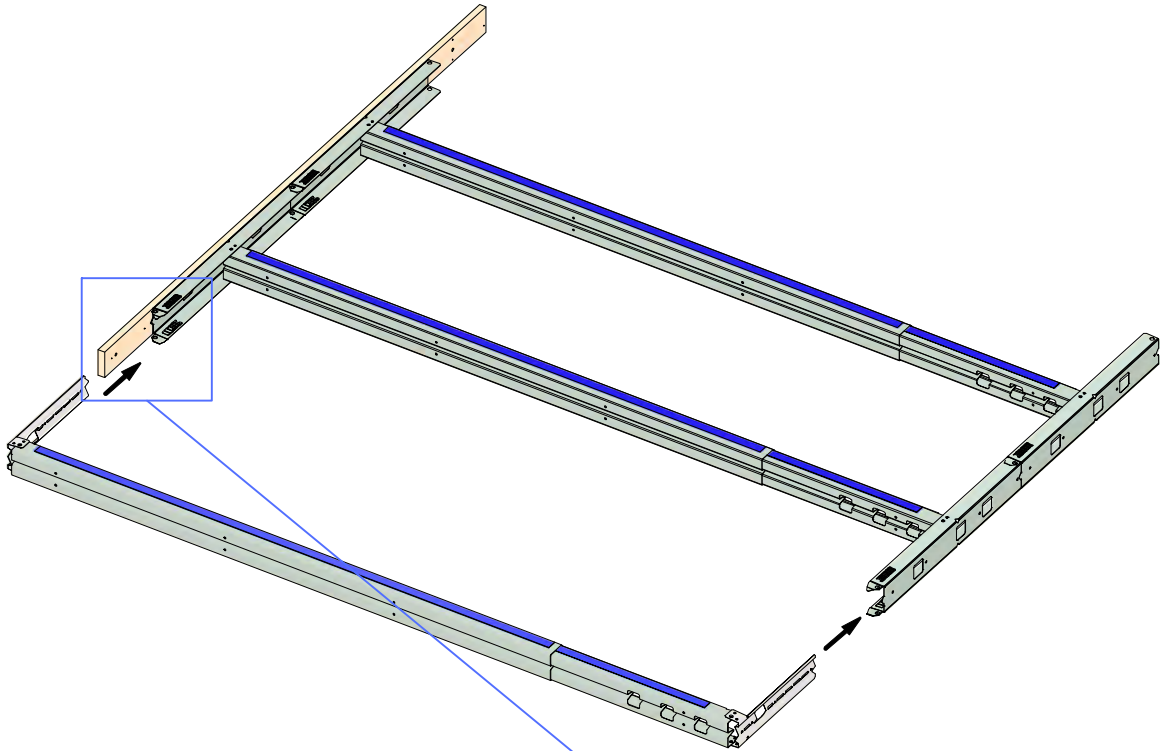


STEP 3.3

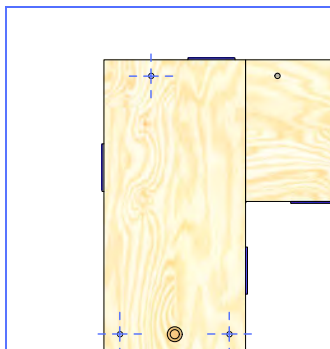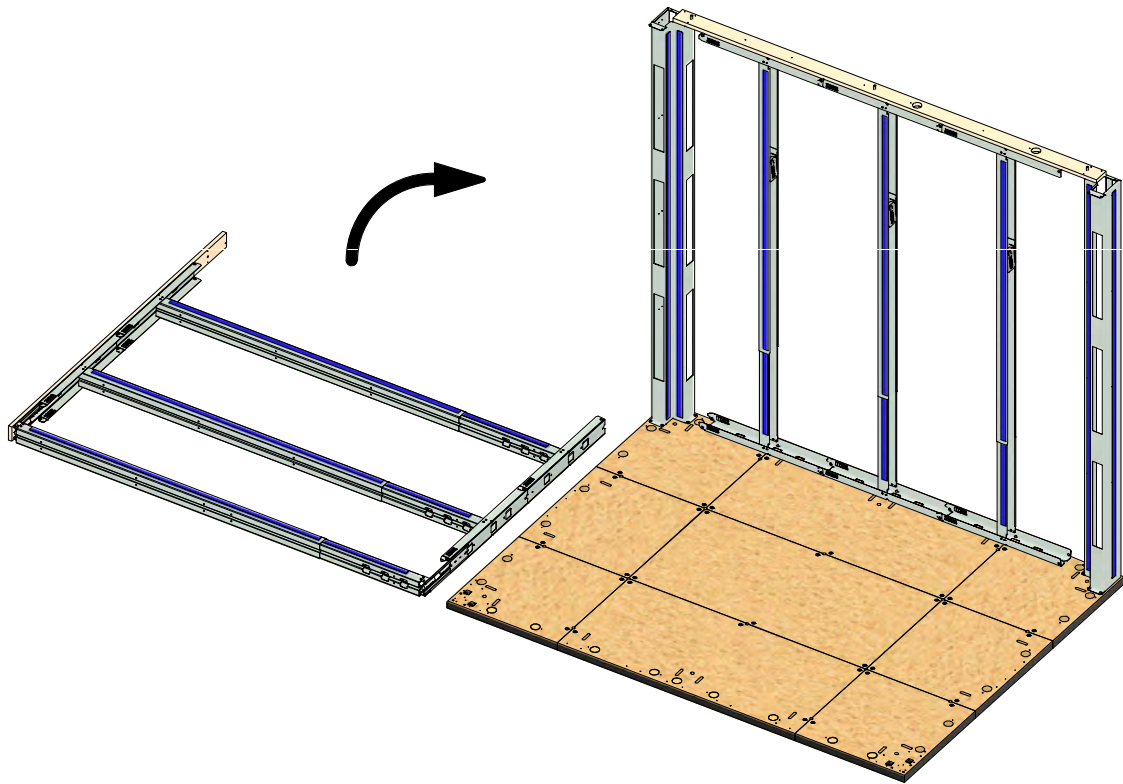


ALIGN HOLES

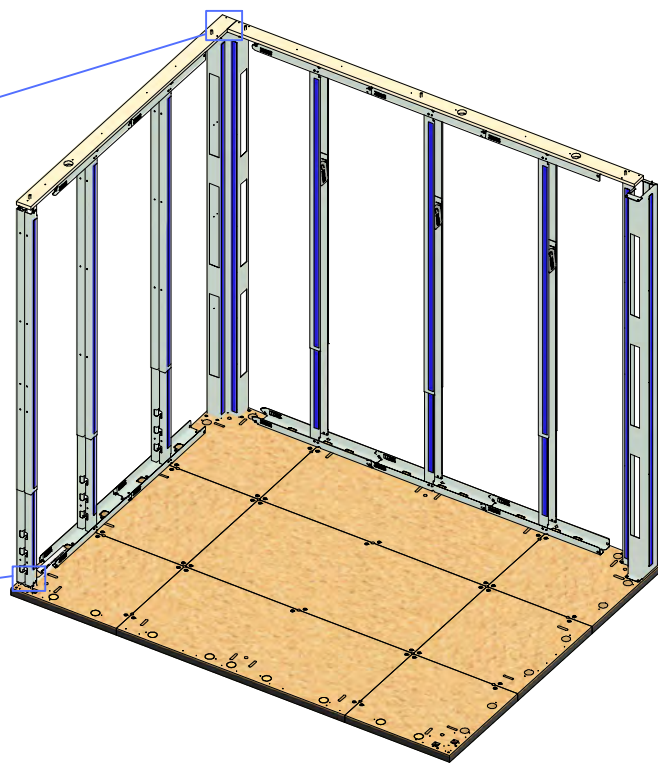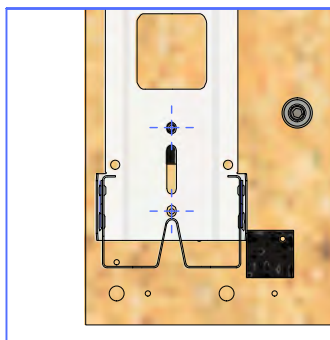





STEP 3.4

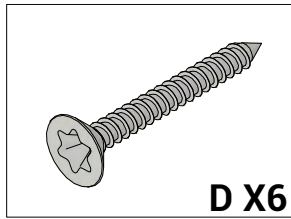


TOOLS NEEDED




TX 20

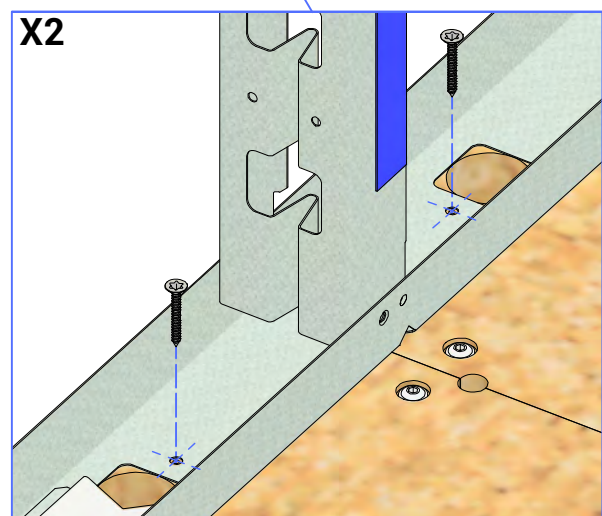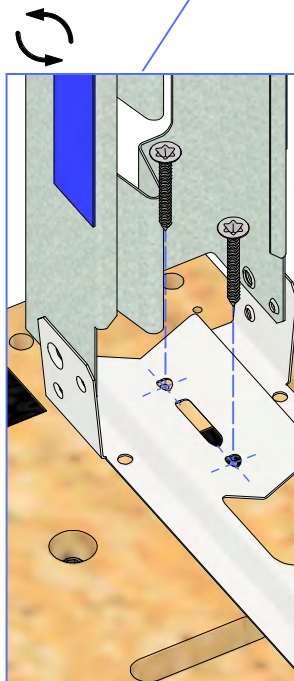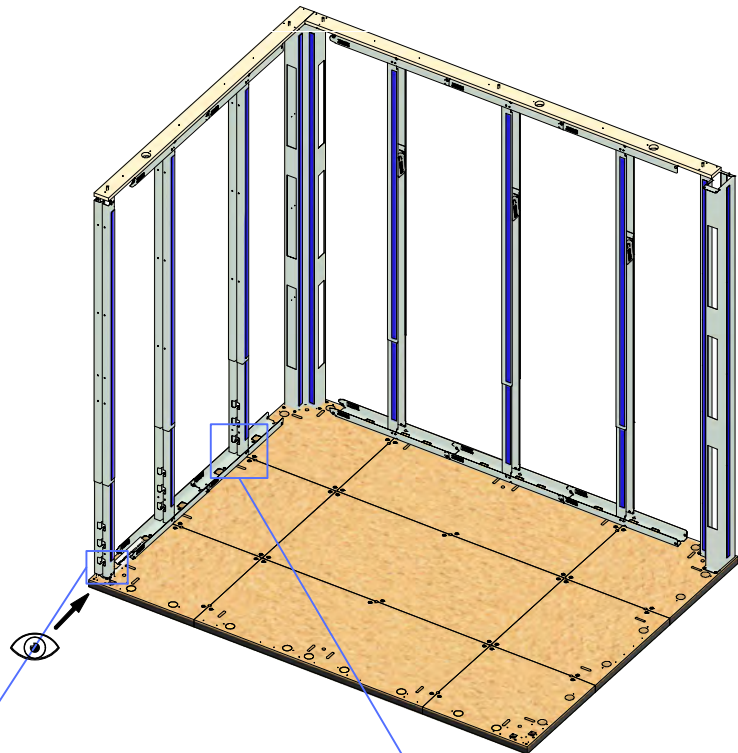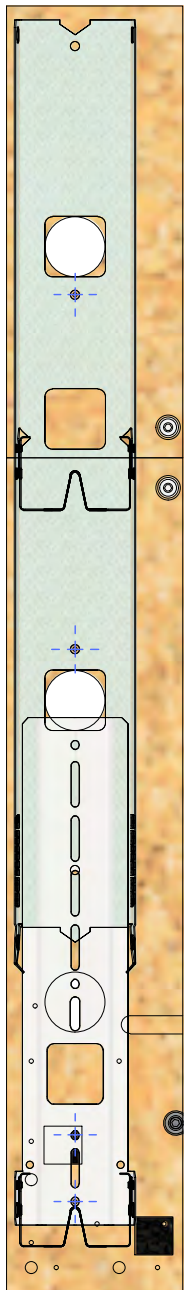




STEP 3.5

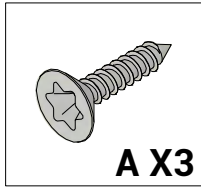






TOOLS NEEDED




TX 20

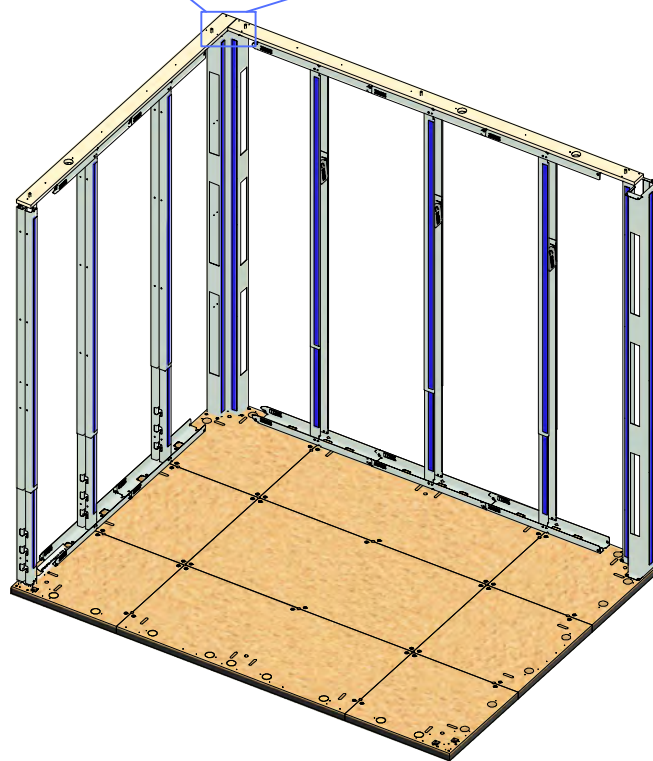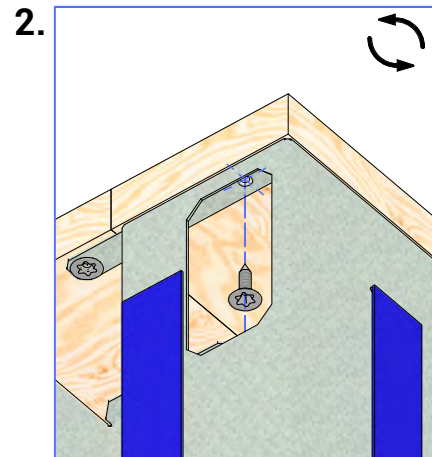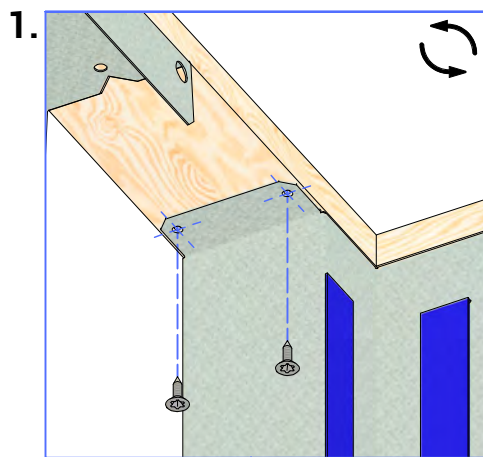



STEP 4.1

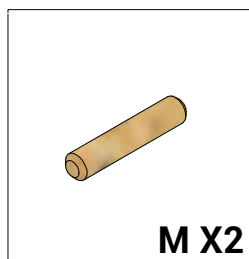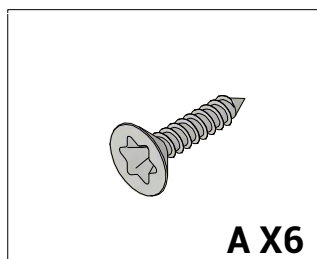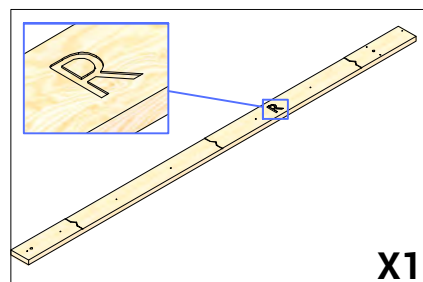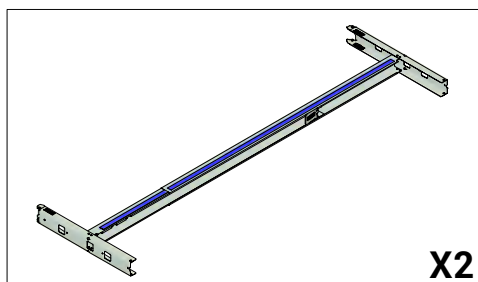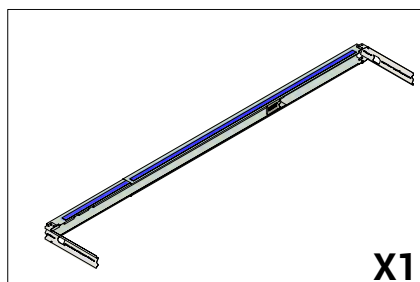

TOOLS NEEDED





TX 20

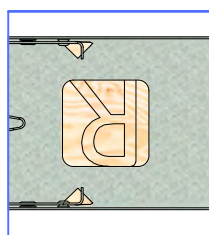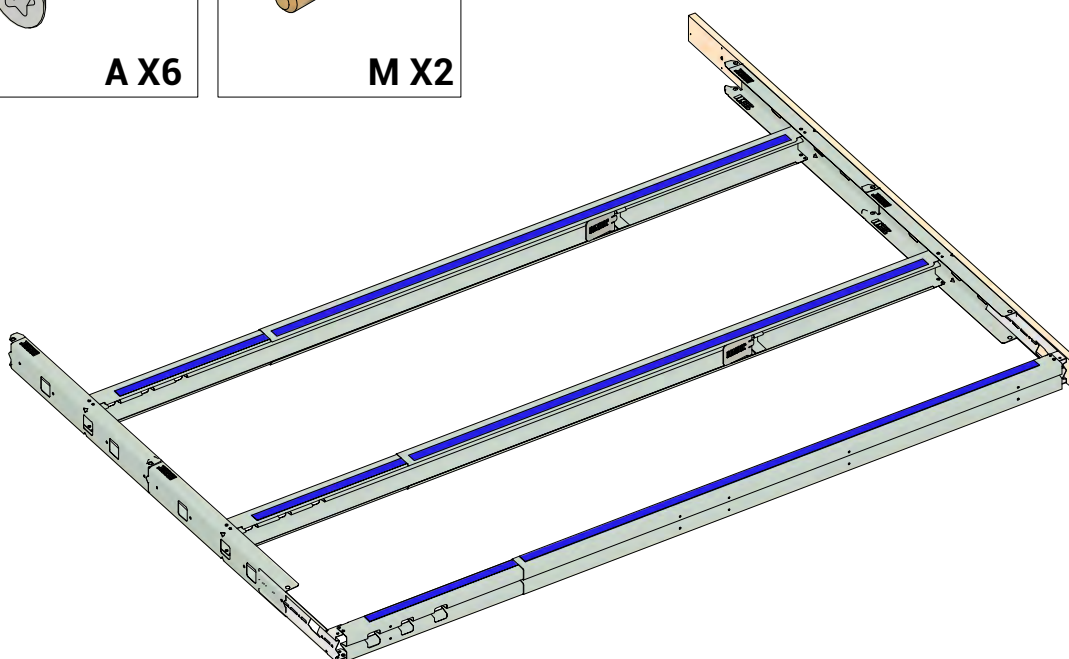


REPEAT STEP 3.1 & 3.2

STEP 4.2


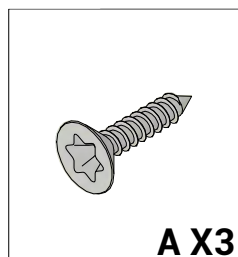
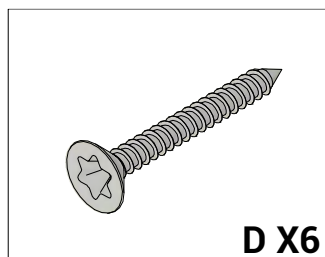


TOOLS NEEDED





TX 20

REPEAT STEP 3.4 & 3.5

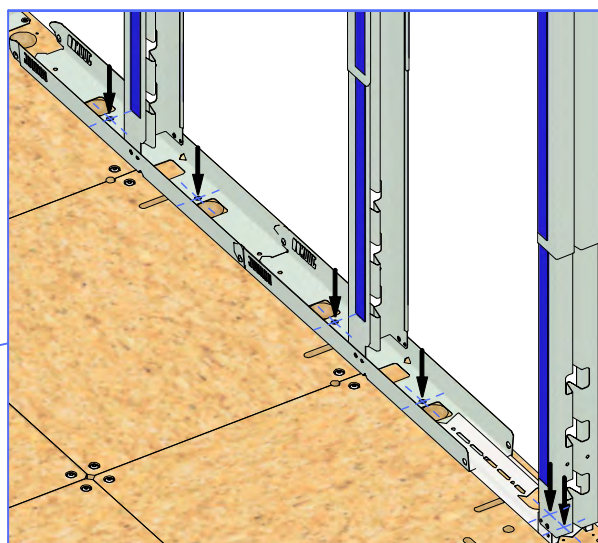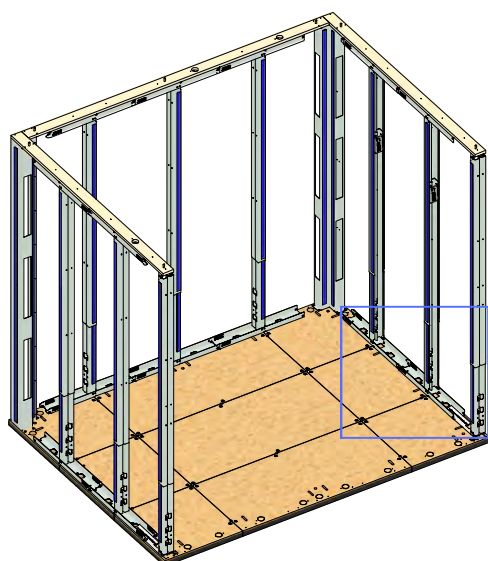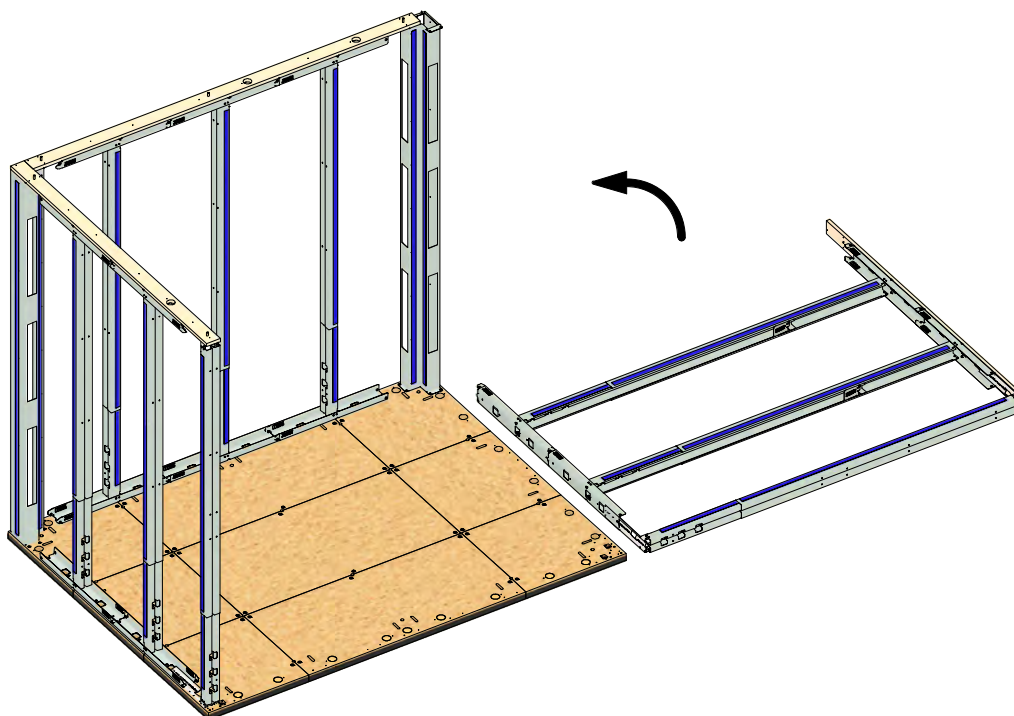


STEP 5.1

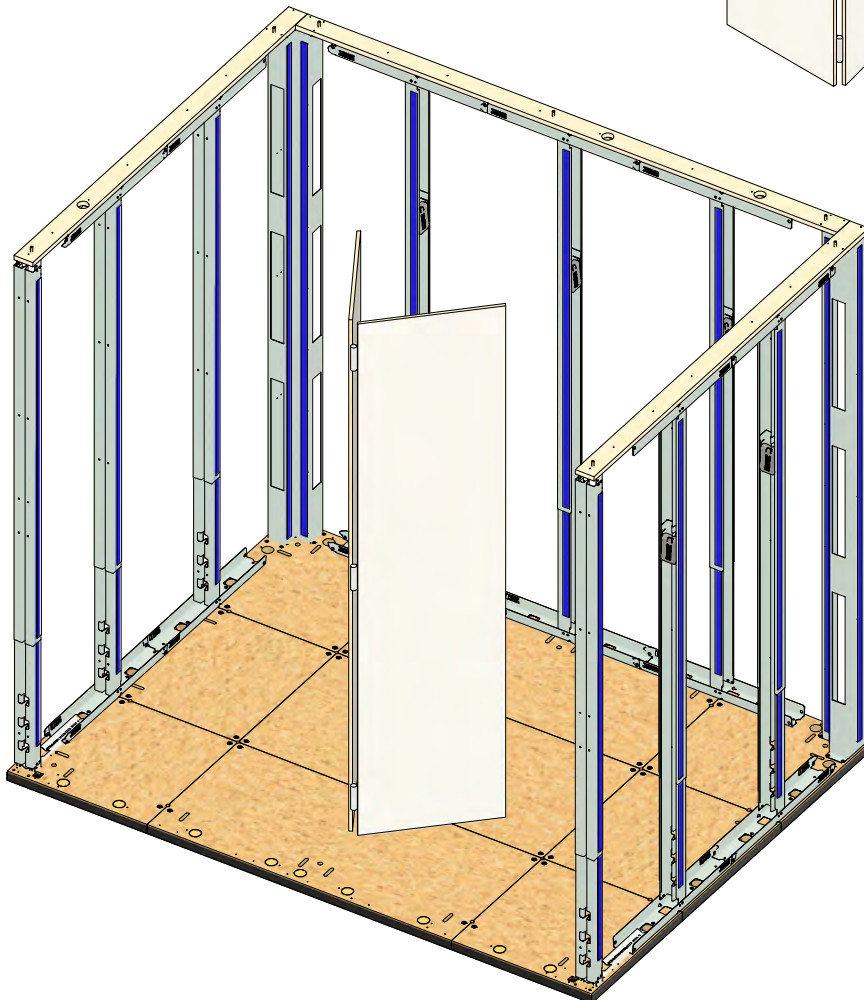
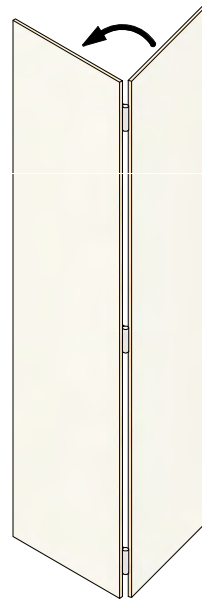


POSITION THE HINGED PANELS IN THE MIDDLE TO SUPPORT THE CEILING

STEP 5.2

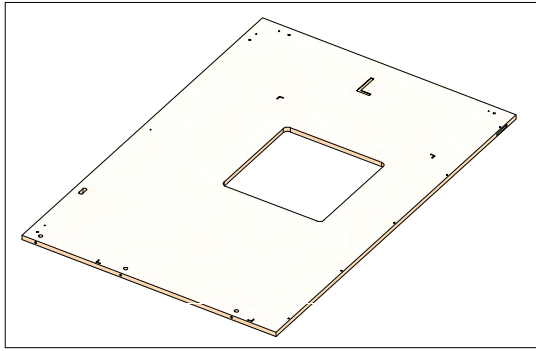


TOOLS NEEDED

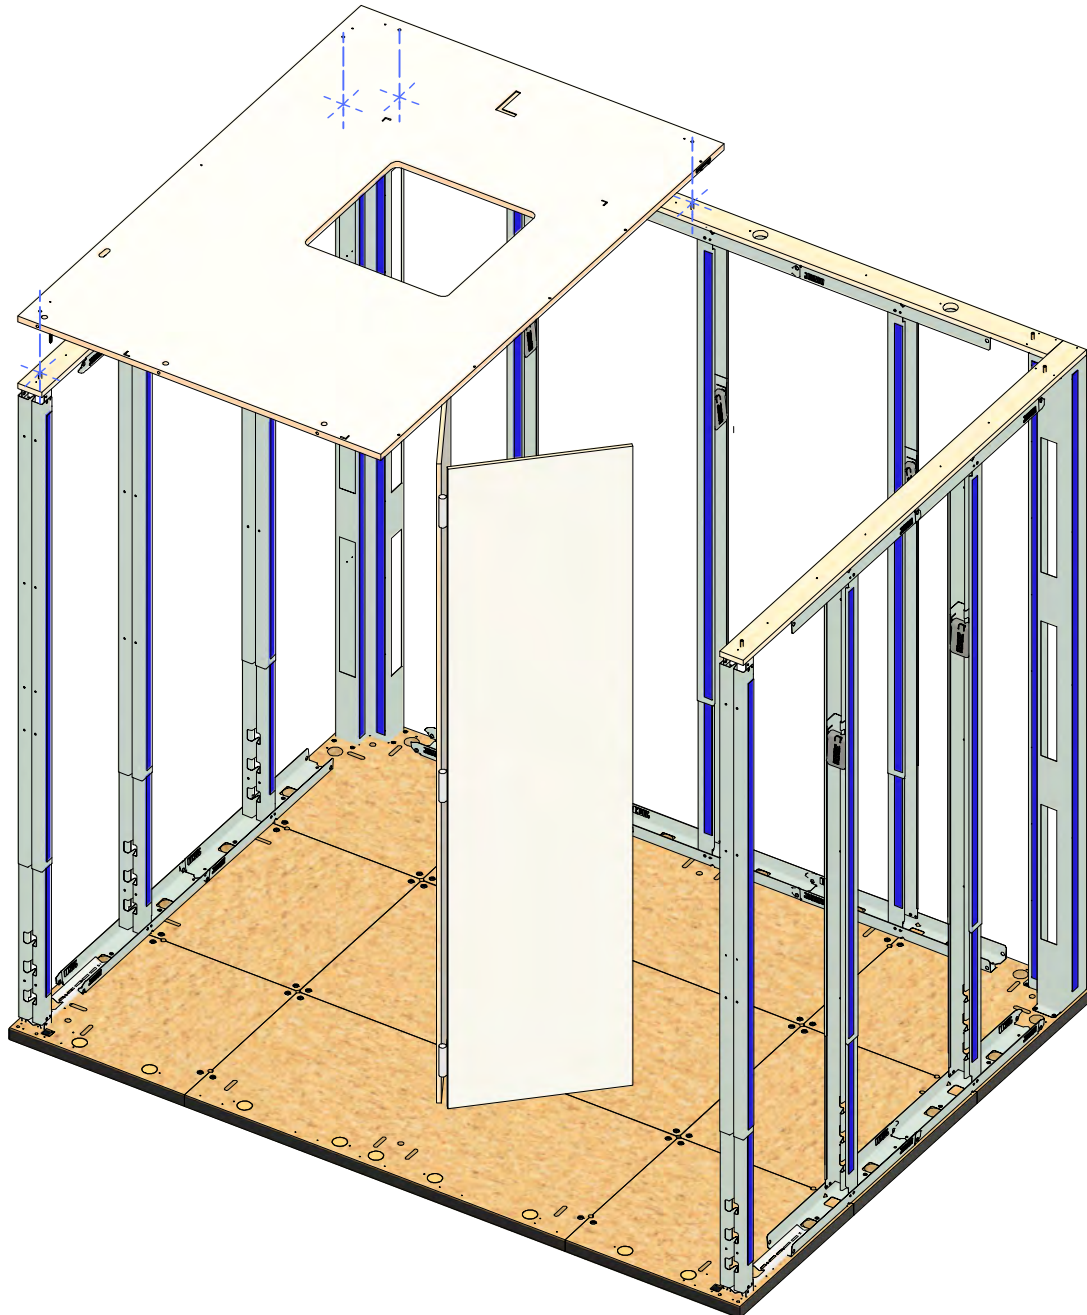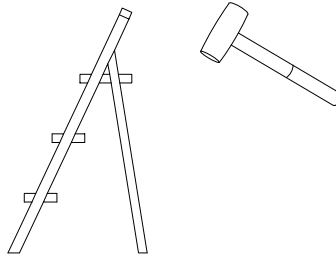


ALIGN THE CEILING OVER THE DOWELS



STEP 5.3

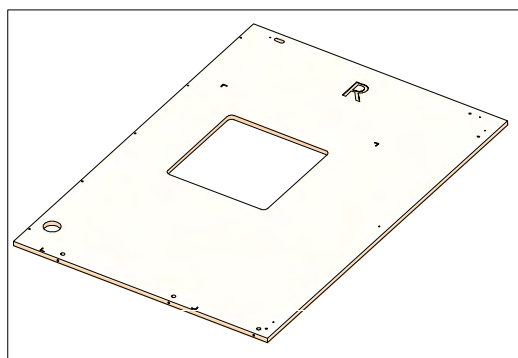



TOOLS NEEDED

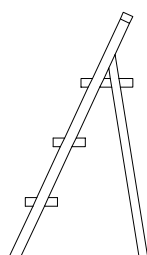


**METRIC
H 4**

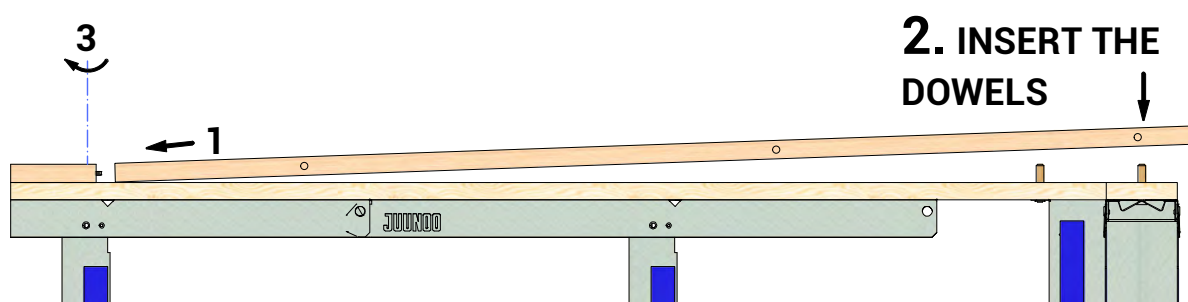


**1. ALIGN THE COFFIN
LOCKS**

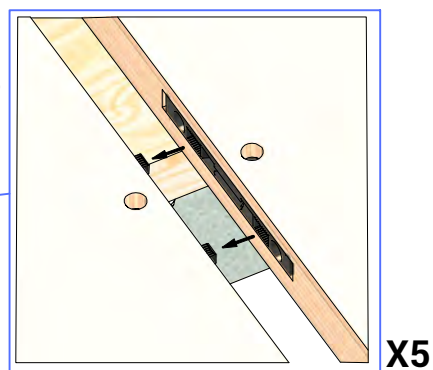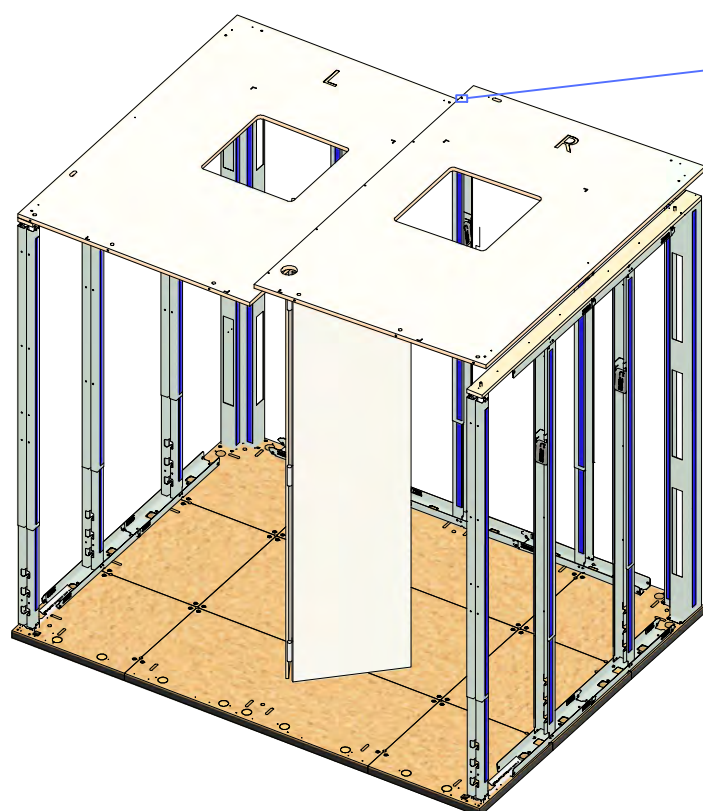


**3. LOCK THE
COFFIN LOCKS**

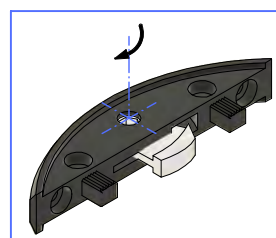



STEP 5.4

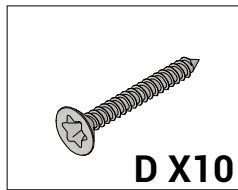


TOOLS NEEDED





TX 20

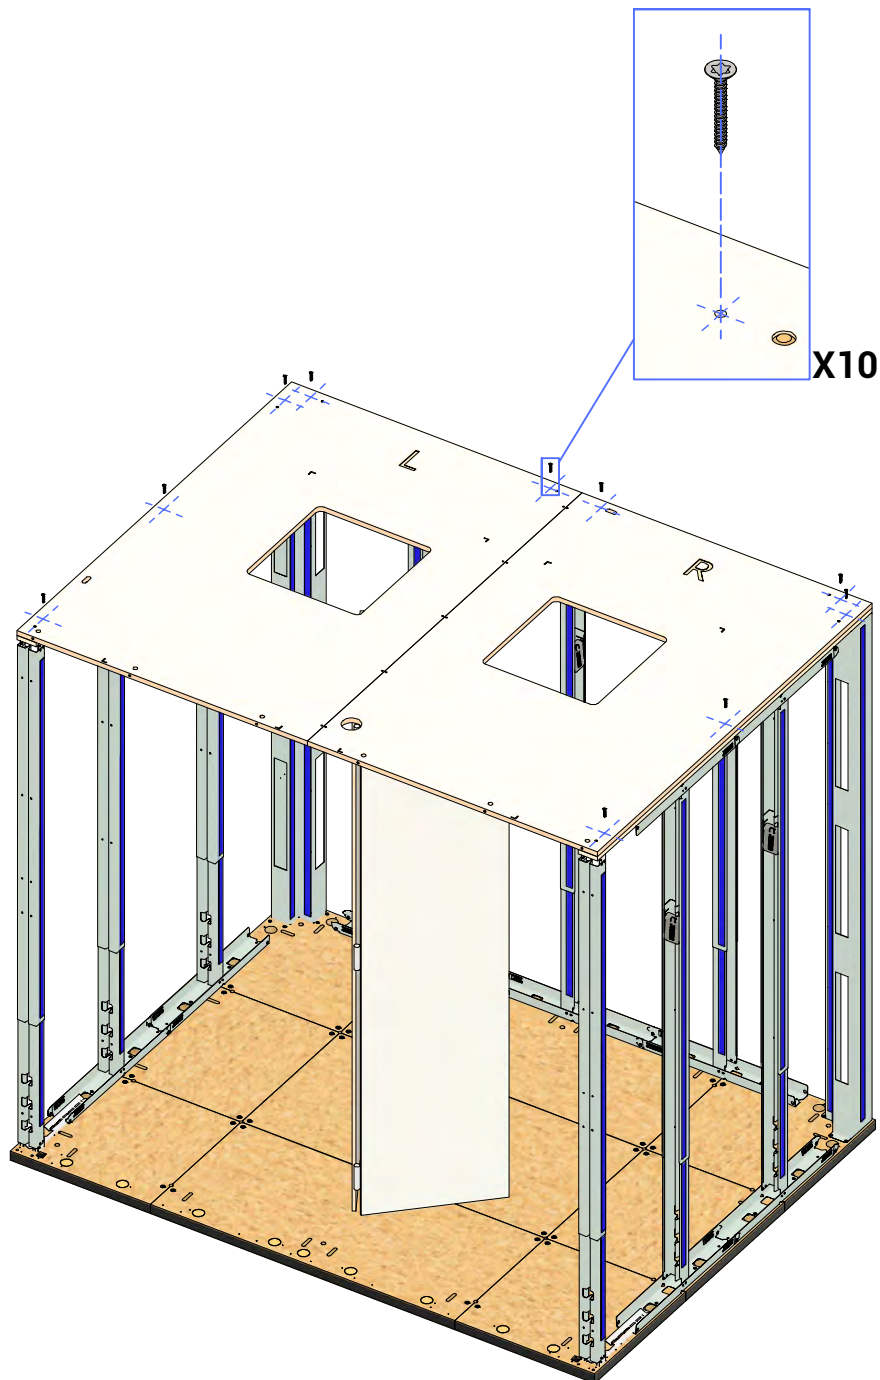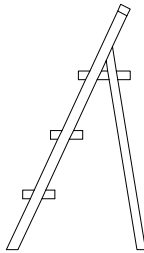

STEP 5.5

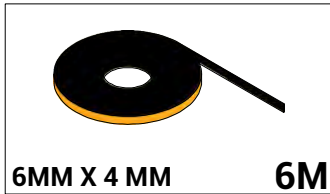


TOOLS NEEDED

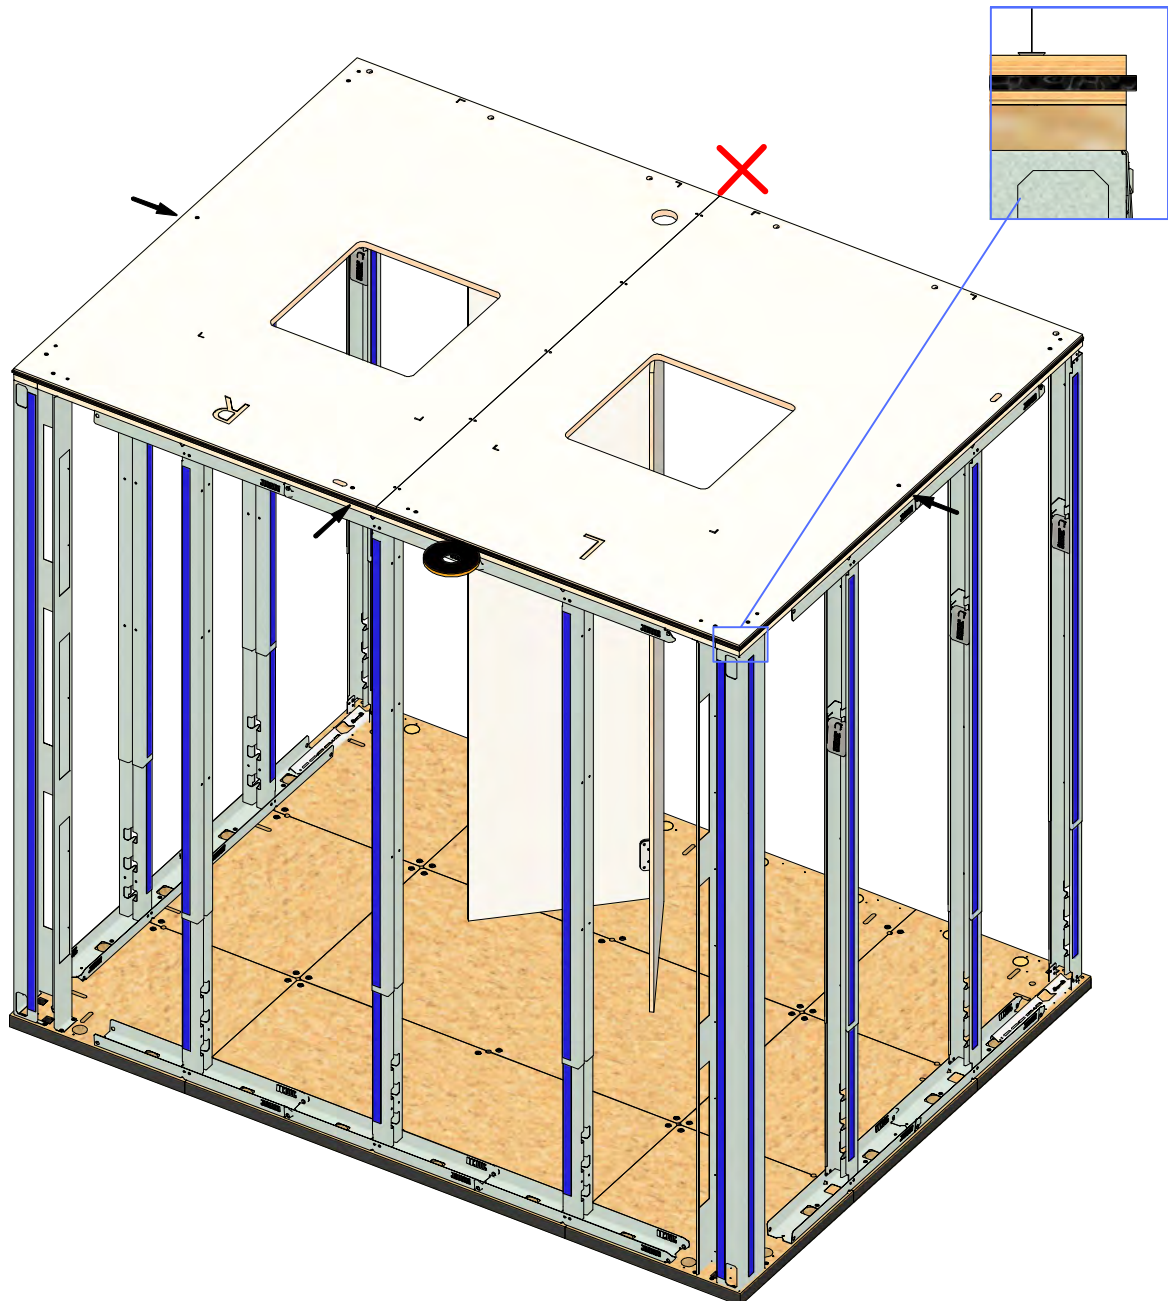



STICK FOAM TAPE ON THE REAR AND THE SIDES OF THE CEILING PANEL.

STEP 6.0


TOOLS NEEDED

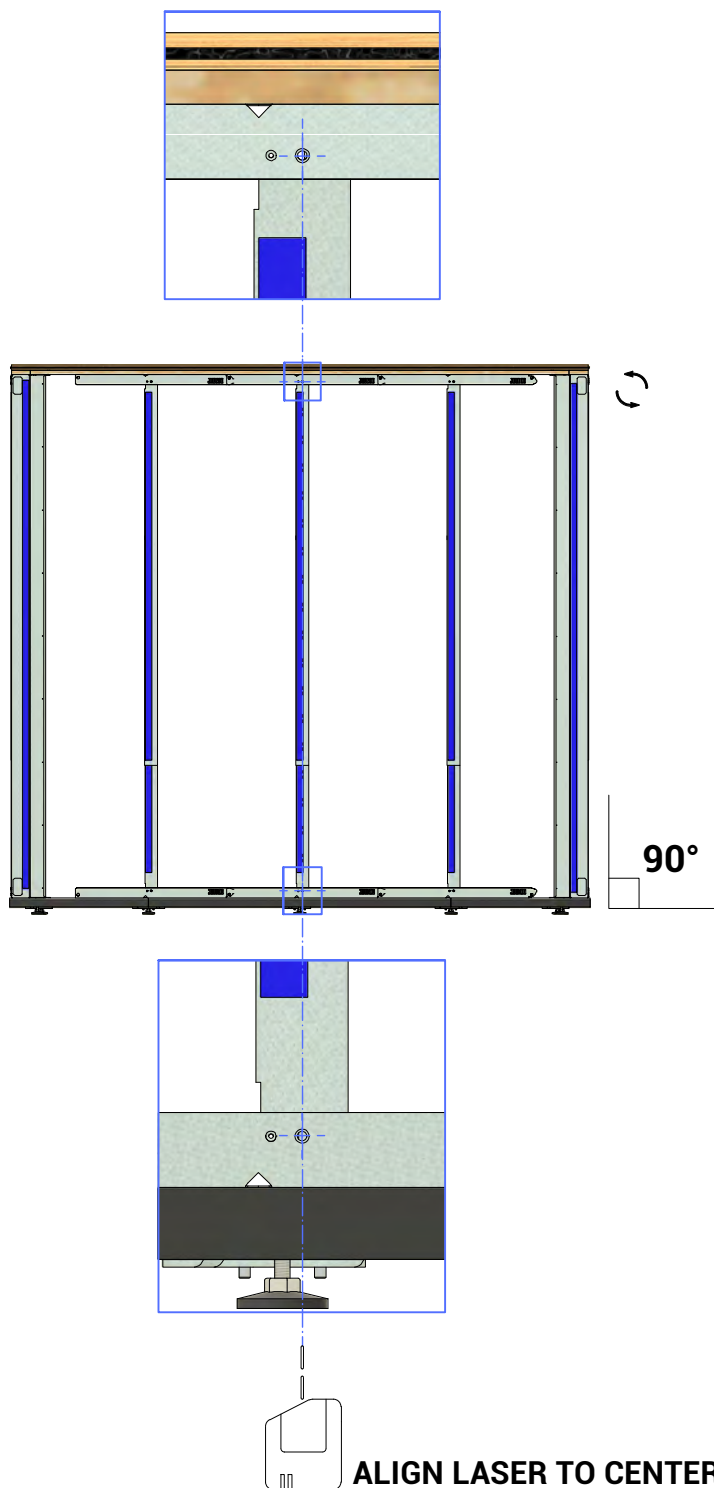


STEP 6.1

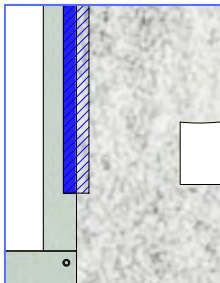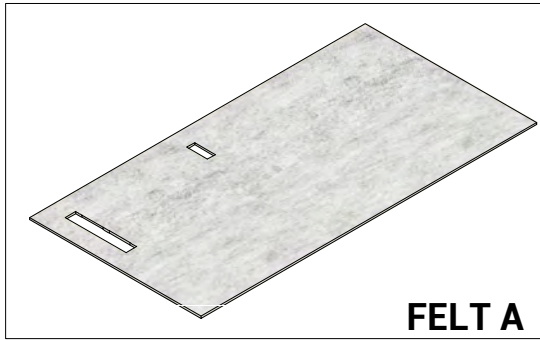


**ALIGN FELT
HALFWAY THE
CENTER
VELCRO STRIP**

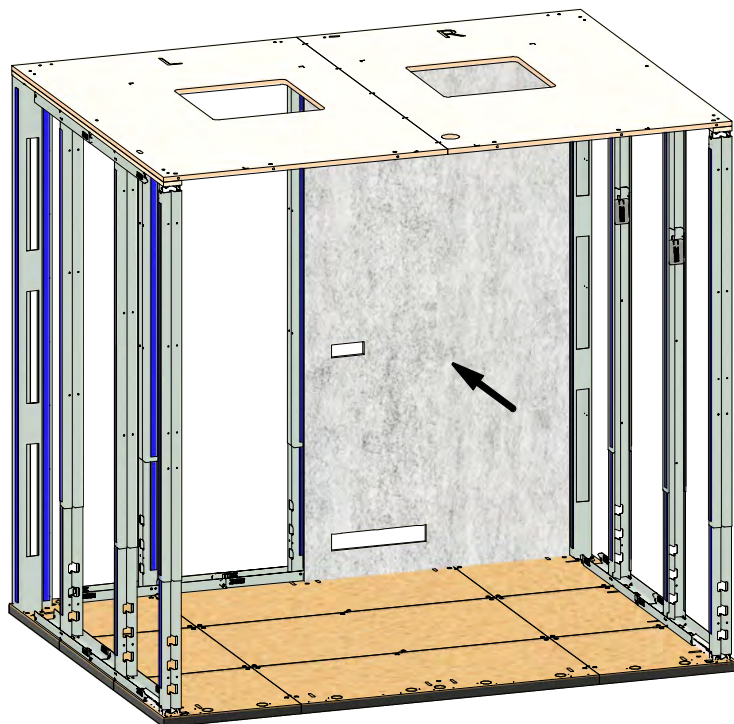



**ALIGN THE FELT PANEL IN THE CORNER WHILE 1 PERSON KEEPS THE LASER
ALIGNED ON THE RIVETS.
PIVOT THE PANEL TOWARDS THE MODULE AND ALIGN THE FELT EDGE HALFWAY
THE VELCRO ON THE CENTER MODULE.**

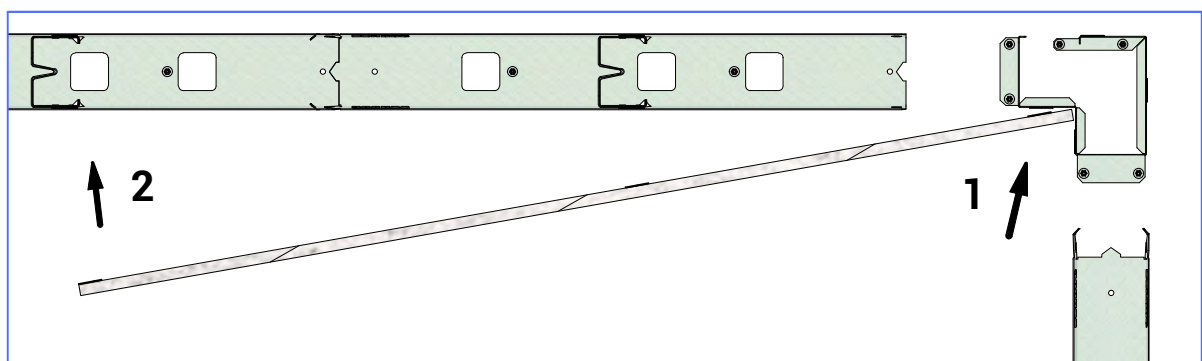


STEP 6.2

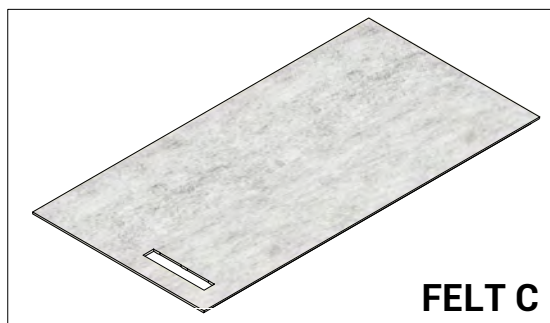


**HOLD THE PANEL
PARALLEL TO THE
STUDS BUT DO NOT
STICK TO THE
VELCRO YET.**

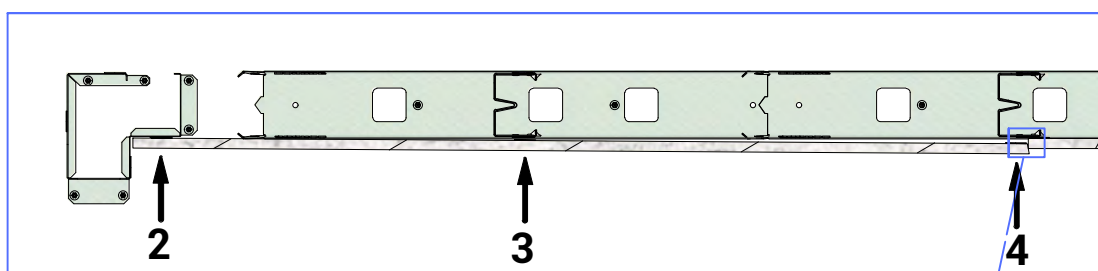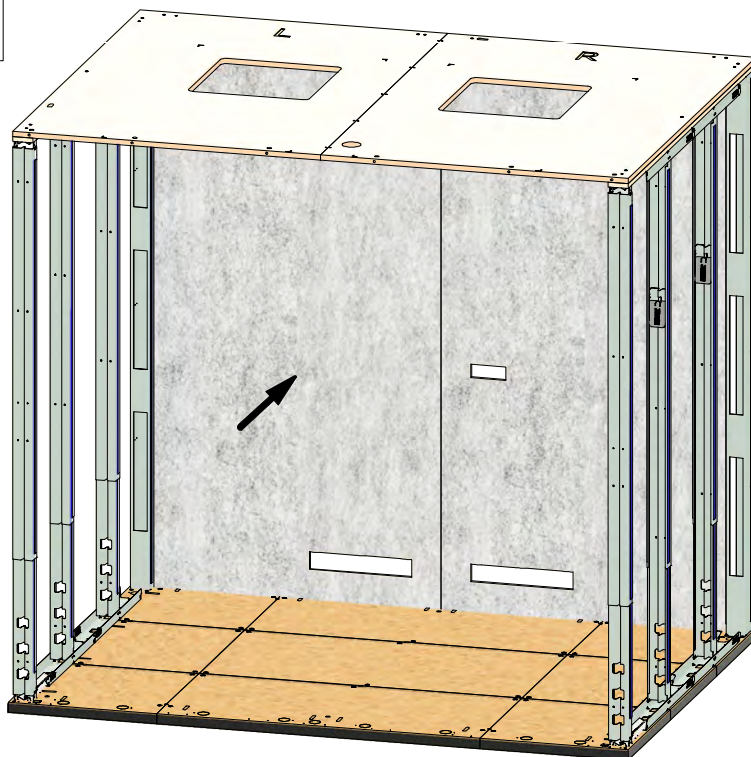




1. OVERLAP THE MITERED EDGE ON THE INSTALLED PANEL BY HALF THE PANELS THICKNESS.
- 2 & 3. CAREFULLY ADHERE THE VELCRO MAKING SURE THE OVERLAP IS MAINTAINED.
4. WHEN THE PANELS ARE TIGHT, FIRMLY AND EVENLY PUSH THE MITER CLOSED WITH THE HEEL OF YOUR HAND.

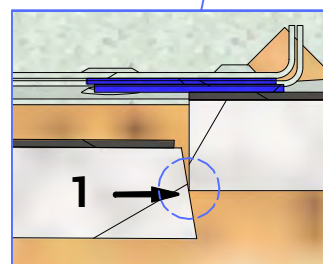

STEP 6.3

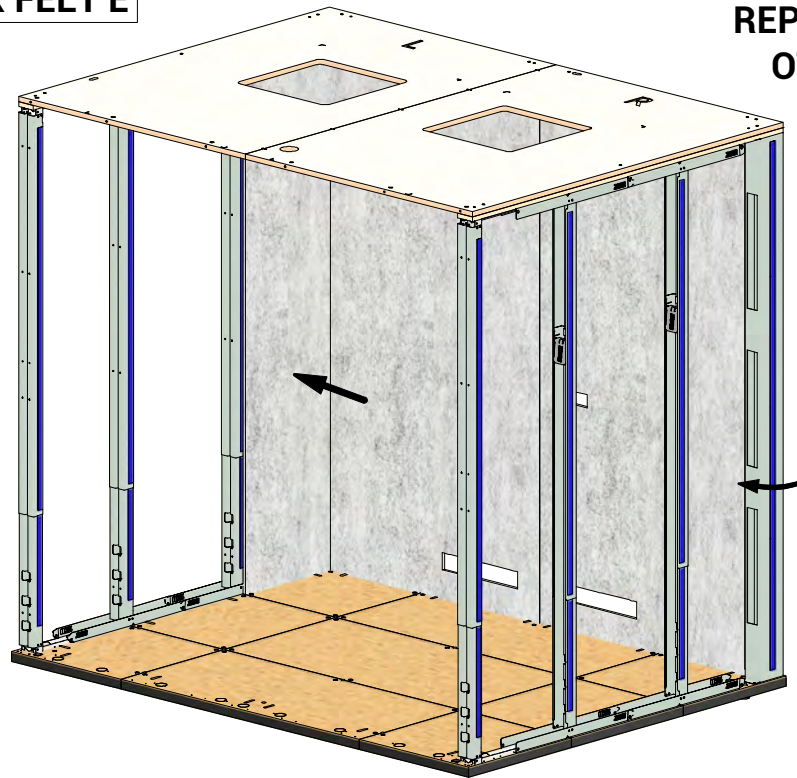


REPEAT STEP ON
OTHER SIDE.

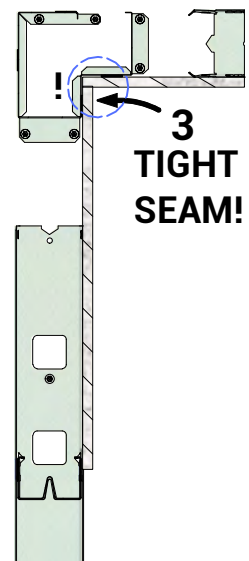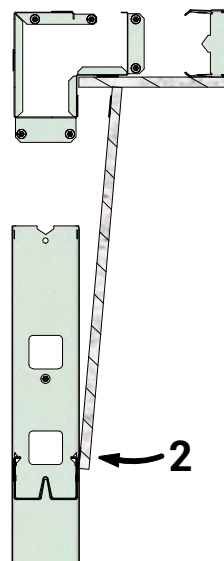
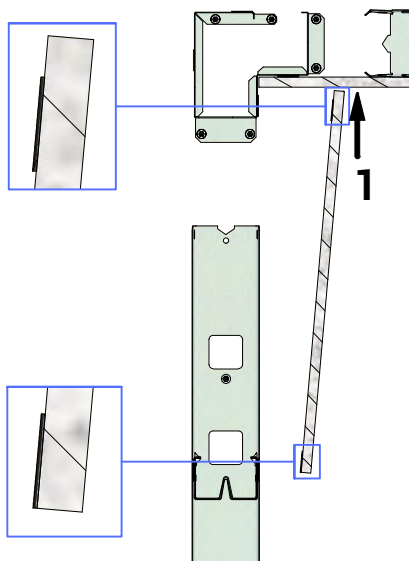


STEP 7.1

TOOLS NEEDED


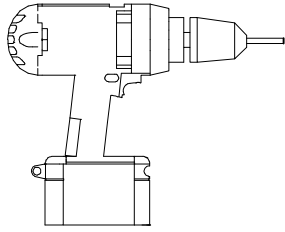


3 MM / 1/8" BIT



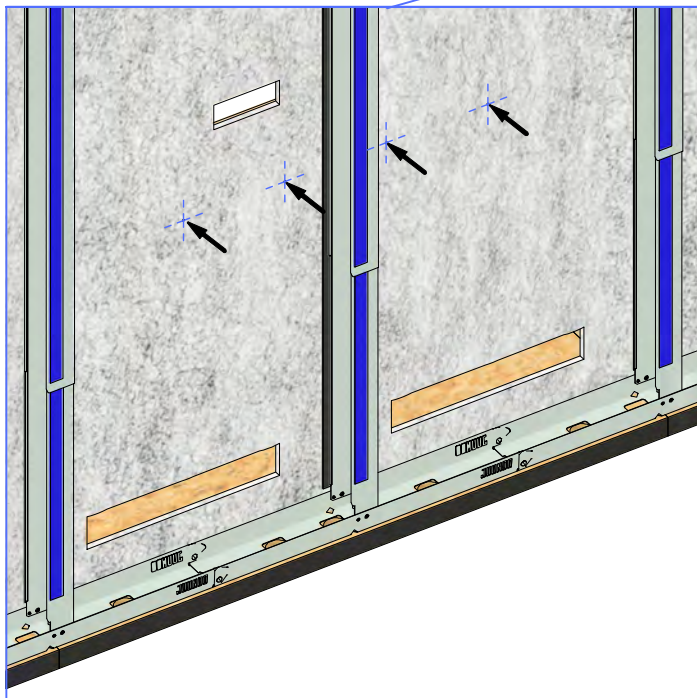
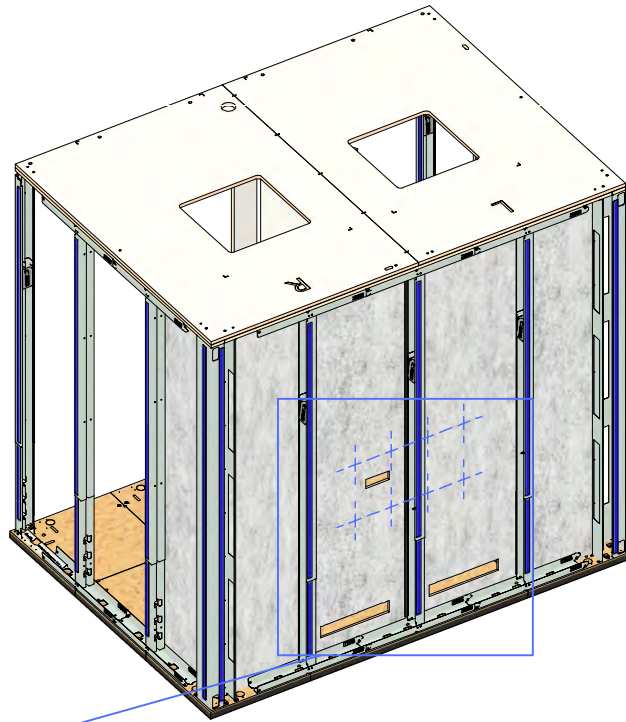


**DRILL THE 4 BOTTOM
TABLE MARKINGS
THROUGH.**


STEP 7.2

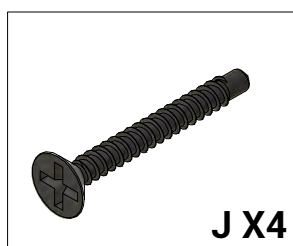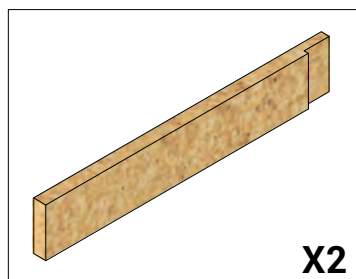



TOOLS NEEDED

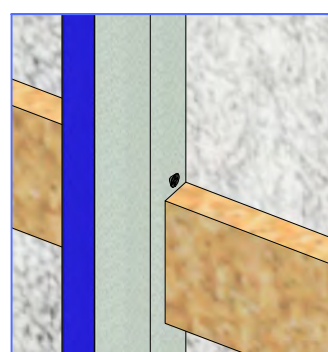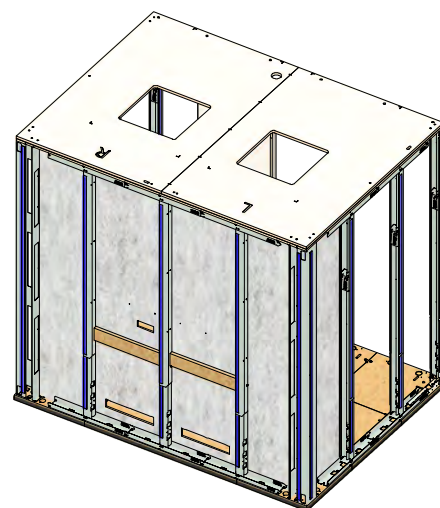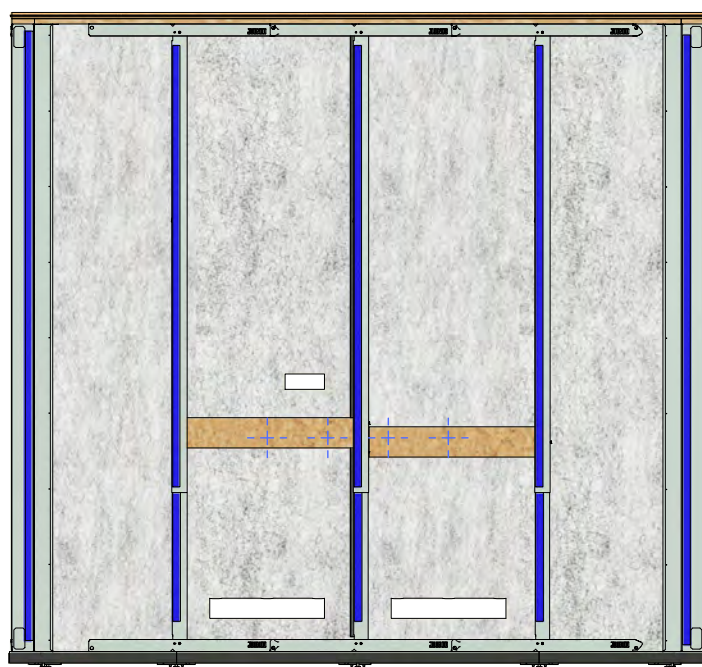

**MOUNT BLOCKING AT AN OFFSET SO THAT BOTH CAN BE SCREWED
TO CENTER STUD.**

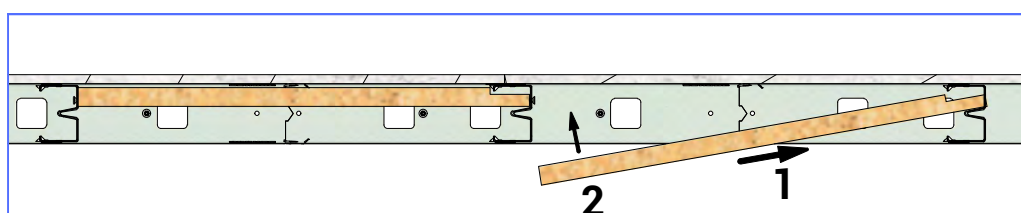


STEP 8.1



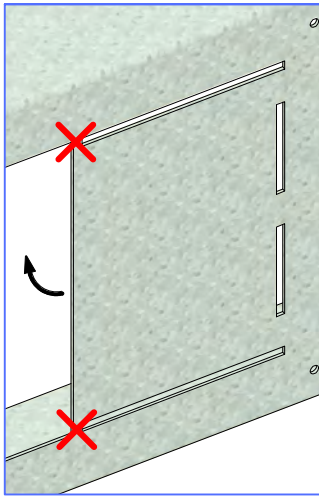
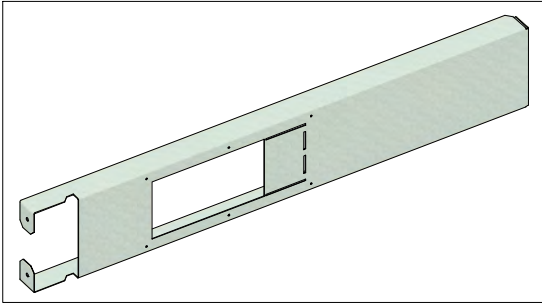


**TYPE B PLUG (US):
SKIP THIS STEP**

**TYPE E/F PLUG (EU):
BREAK & BEND PLATE OVER 180°**

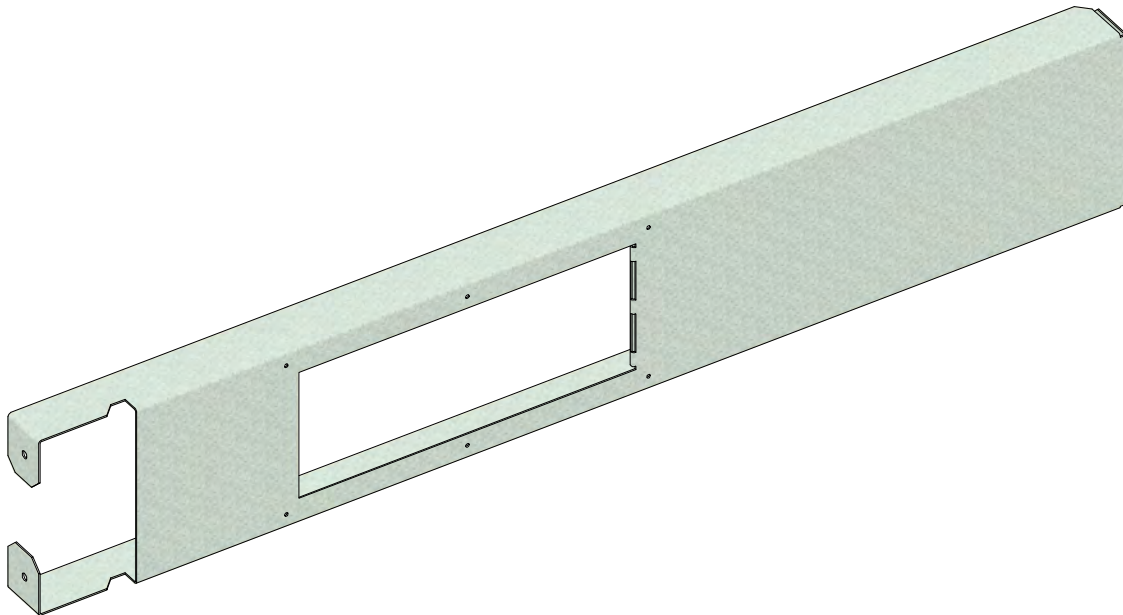


STEP 8.2

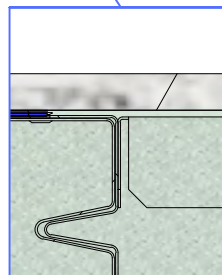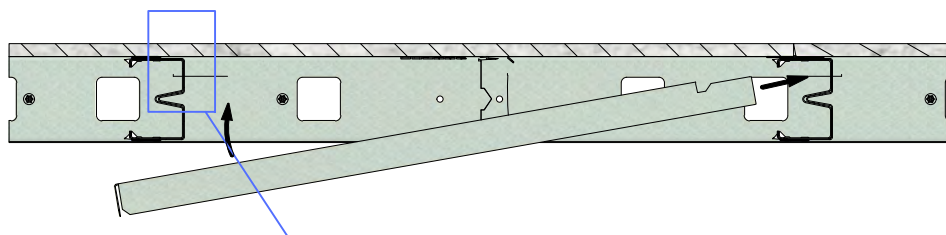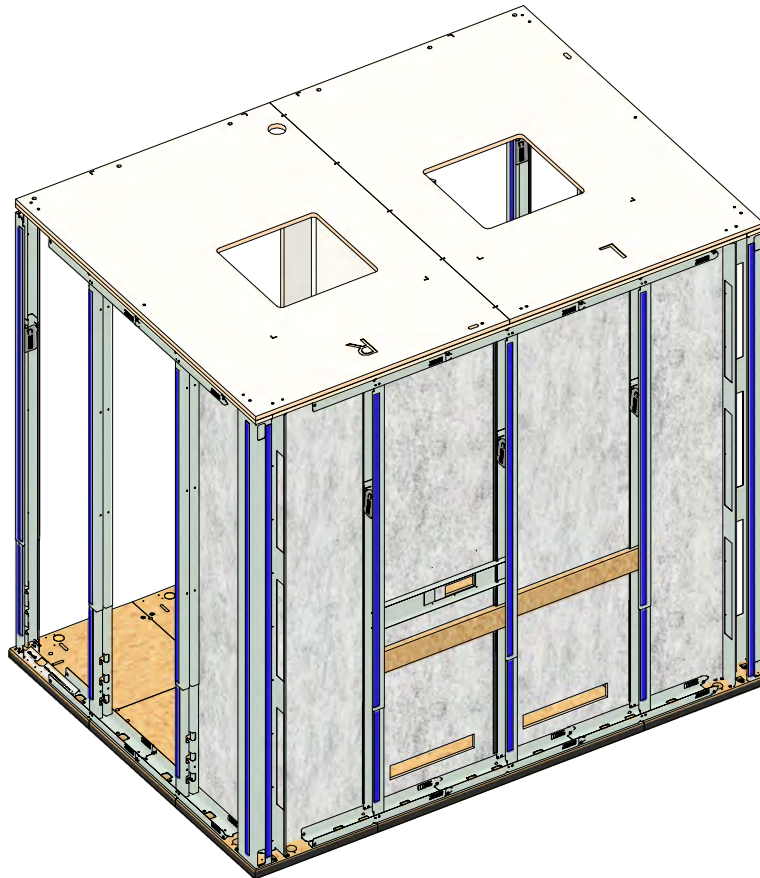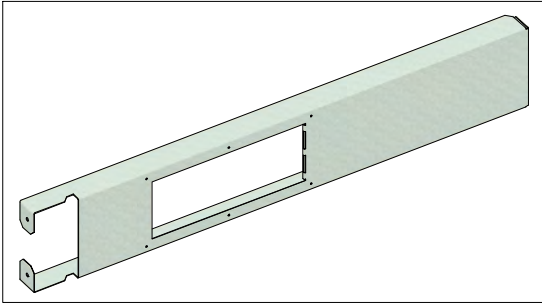


**INSTALL THE BRACKET SO
IT IS TOUCHING, BUT NOT
PUSHING AGAINST THE
BACK OF THE FOAM PANEL!**



STEP 8.3

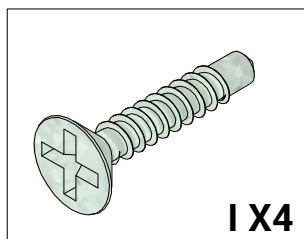

TOOLS NEEDED





PH 2



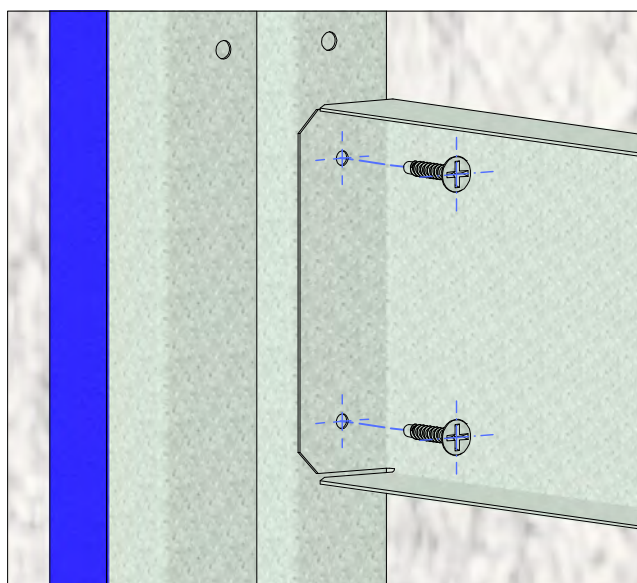
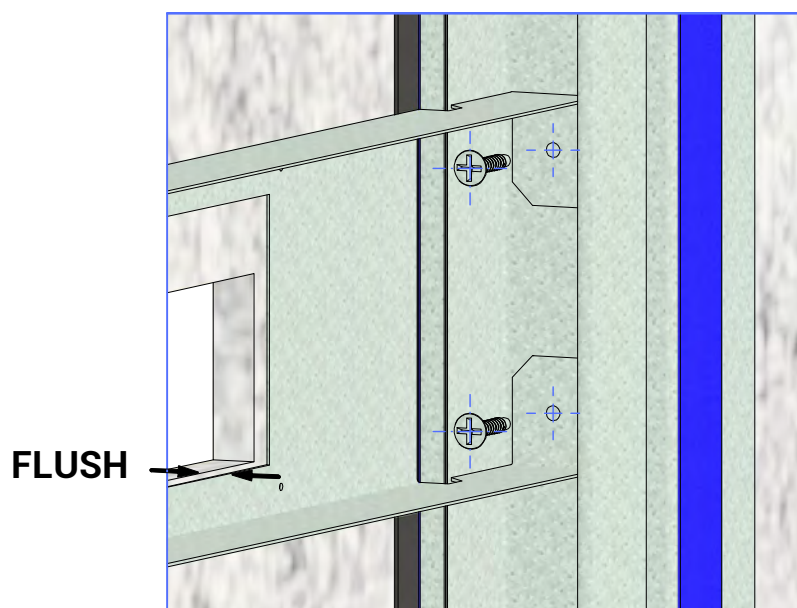


STEP 8.4




TOOLS NEEDED



CUT AWAY TO FIT THE EU SOCKET

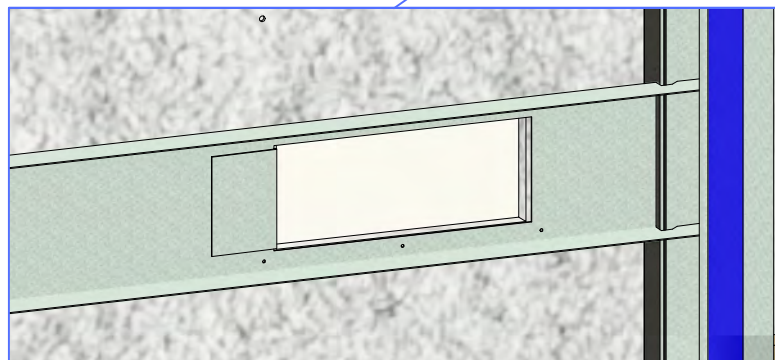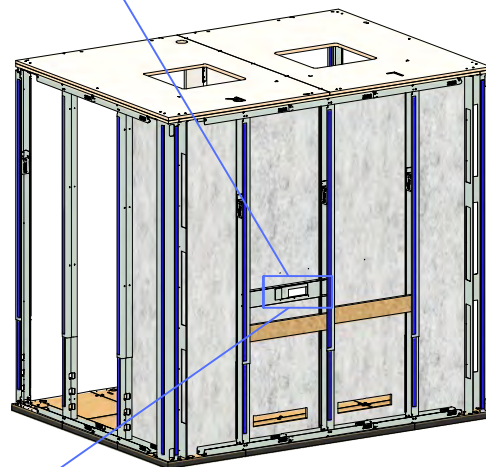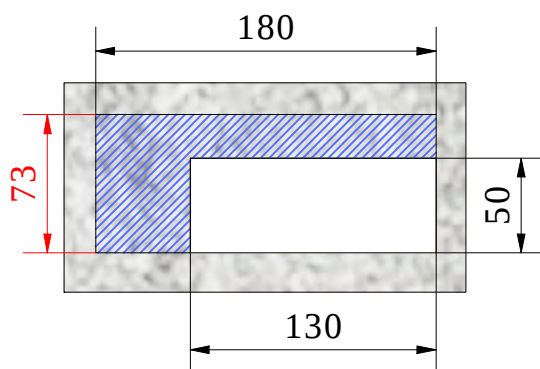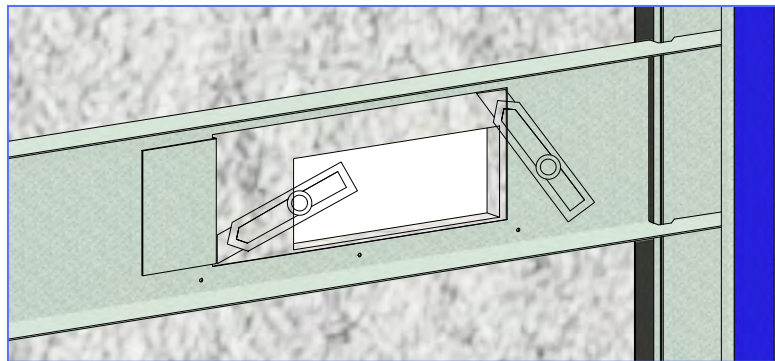


STEP 9.1


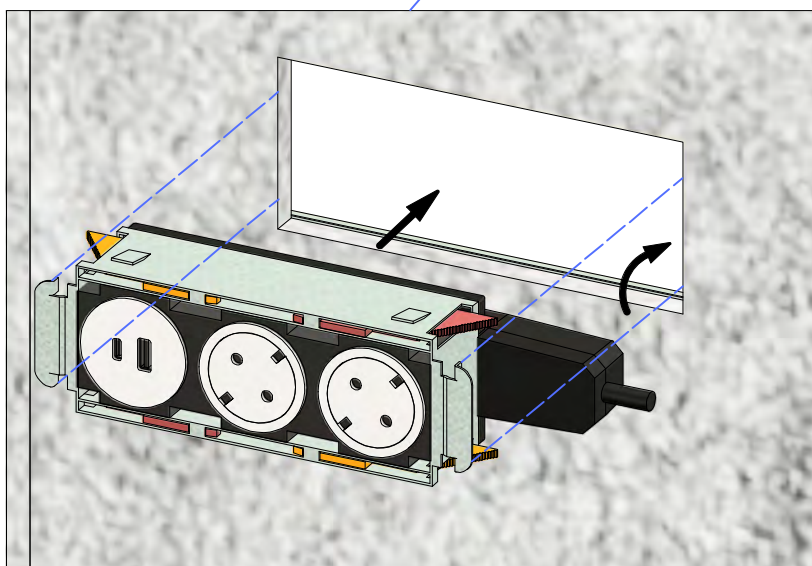
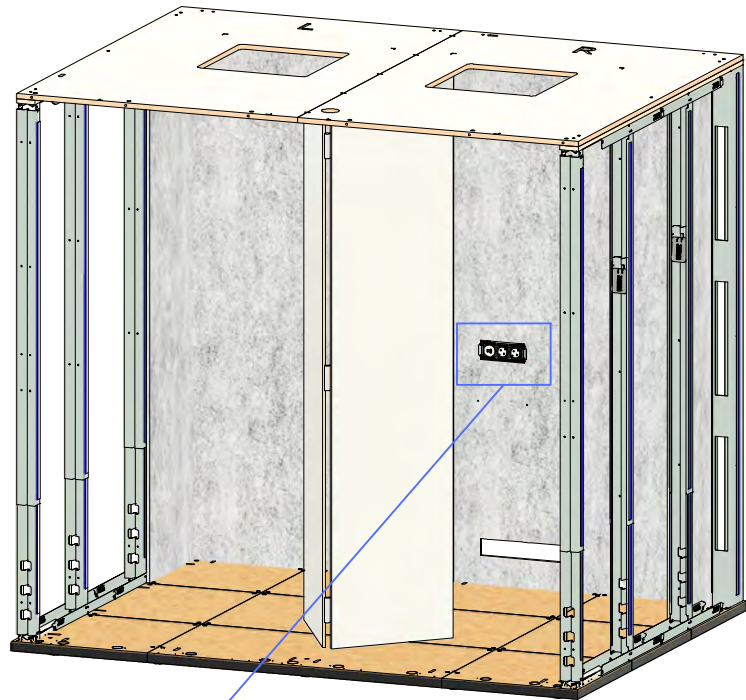
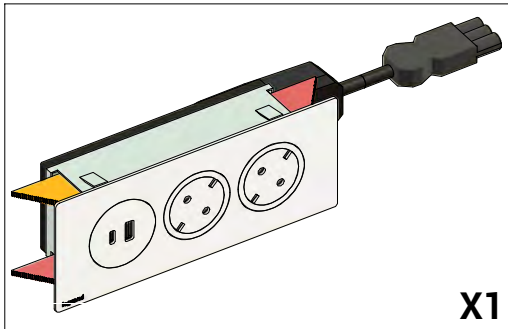


STEP 9.2







TOOLS NEEDED





PH 2

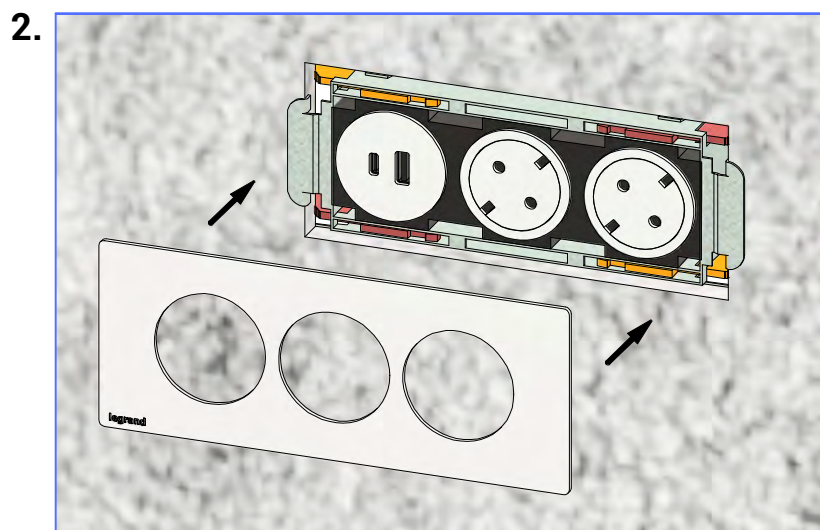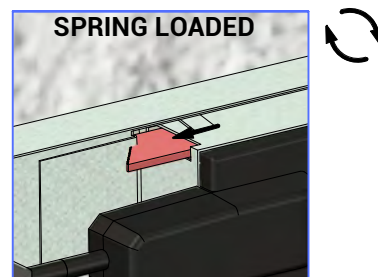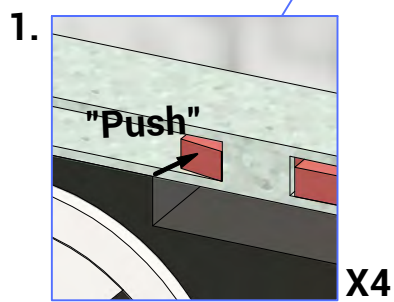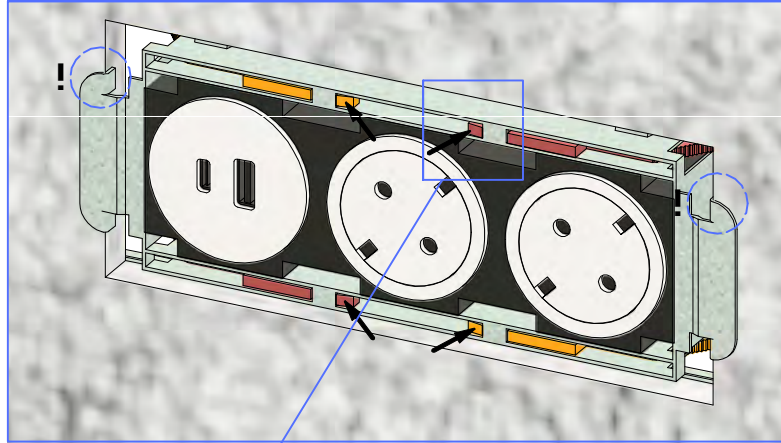


STEP 10.1

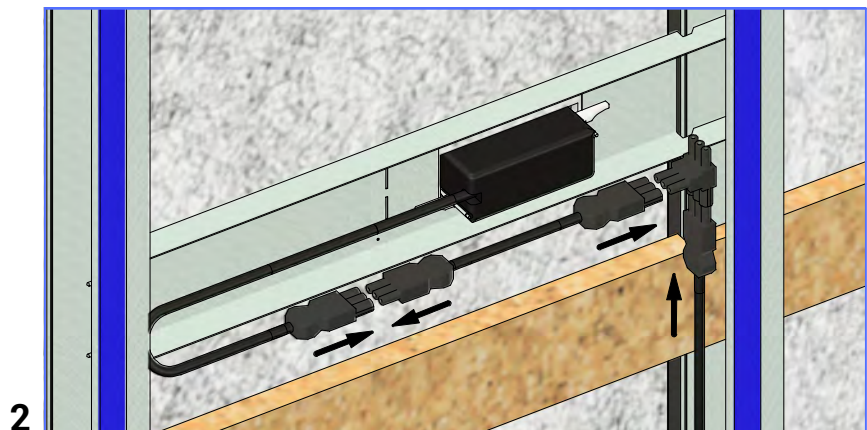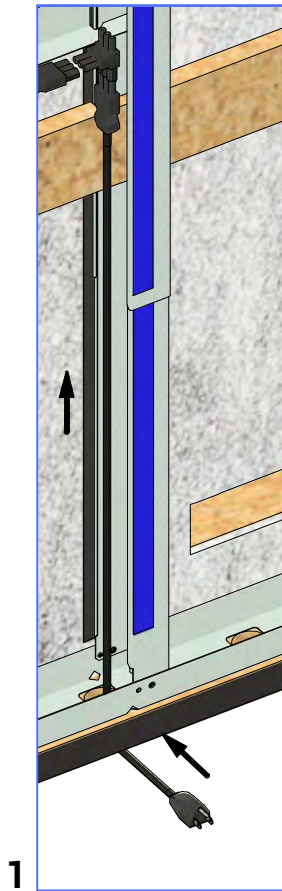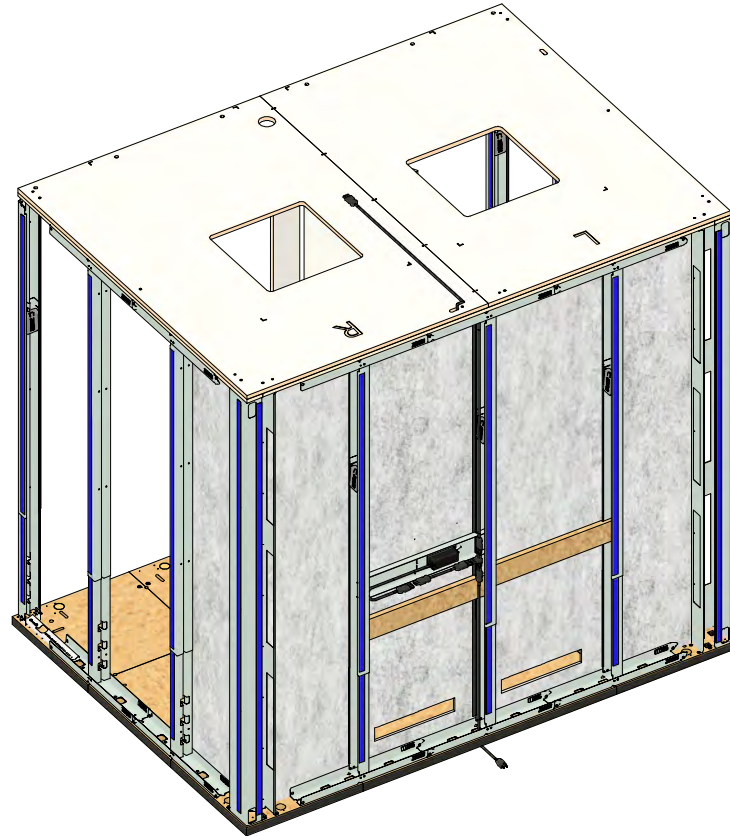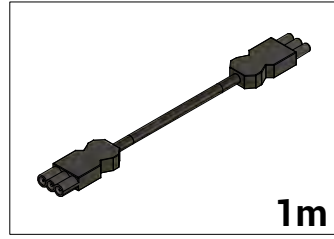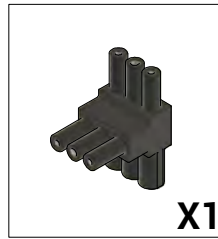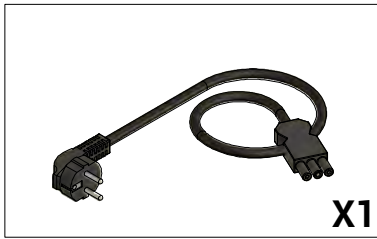



STEP 10.2

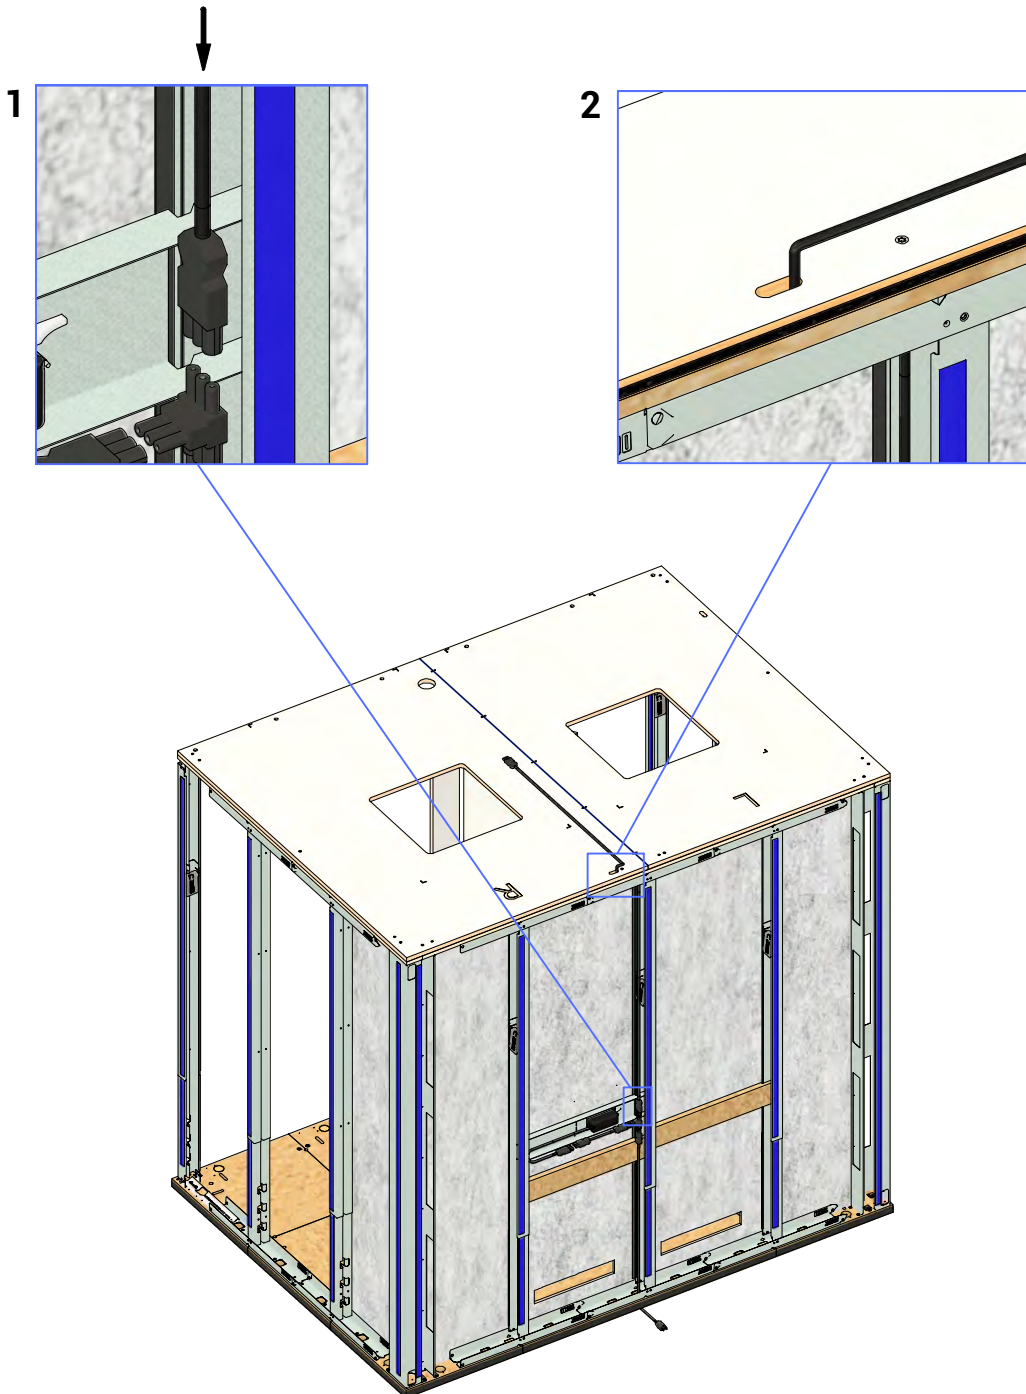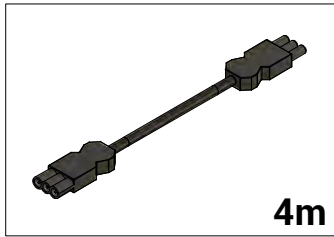

STEP 11.1


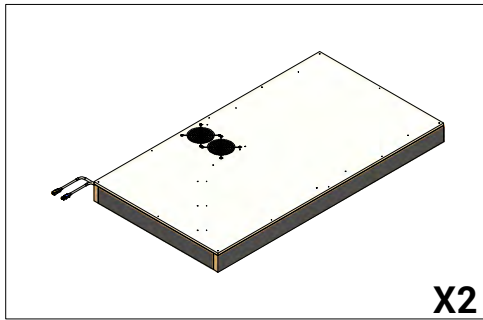


TOOLS NEEDED

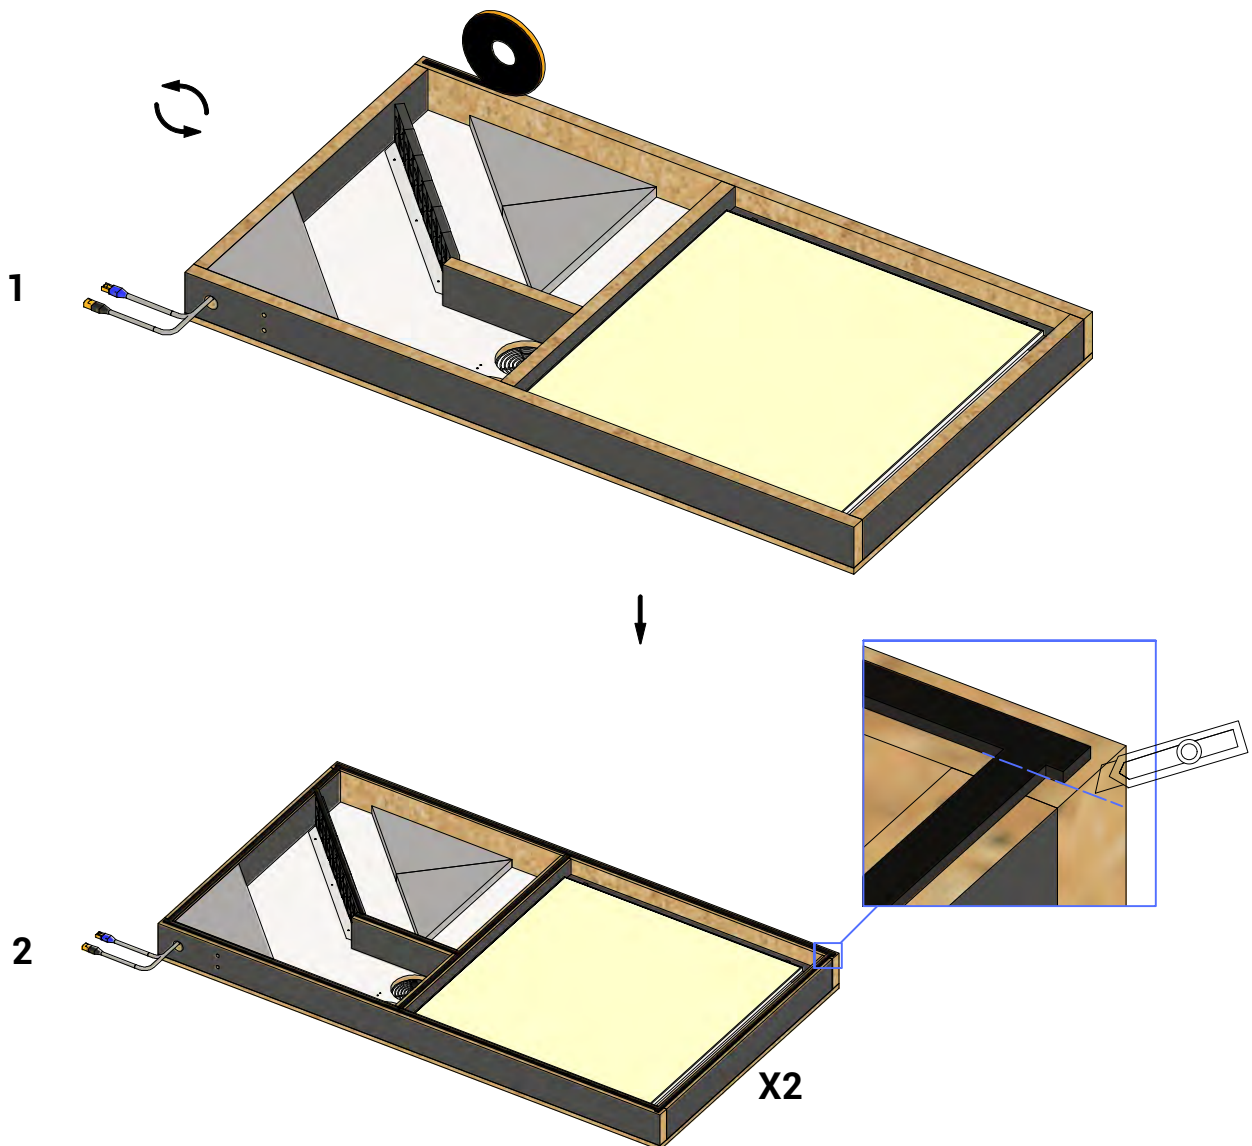

**APPLY FOAM TAPE TO ALL EXPOSED EDGES.
CLOSE SEAMS NEATLY FOR AIR SEAL.**





STEP 11.2

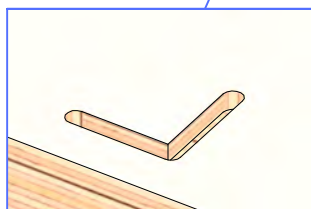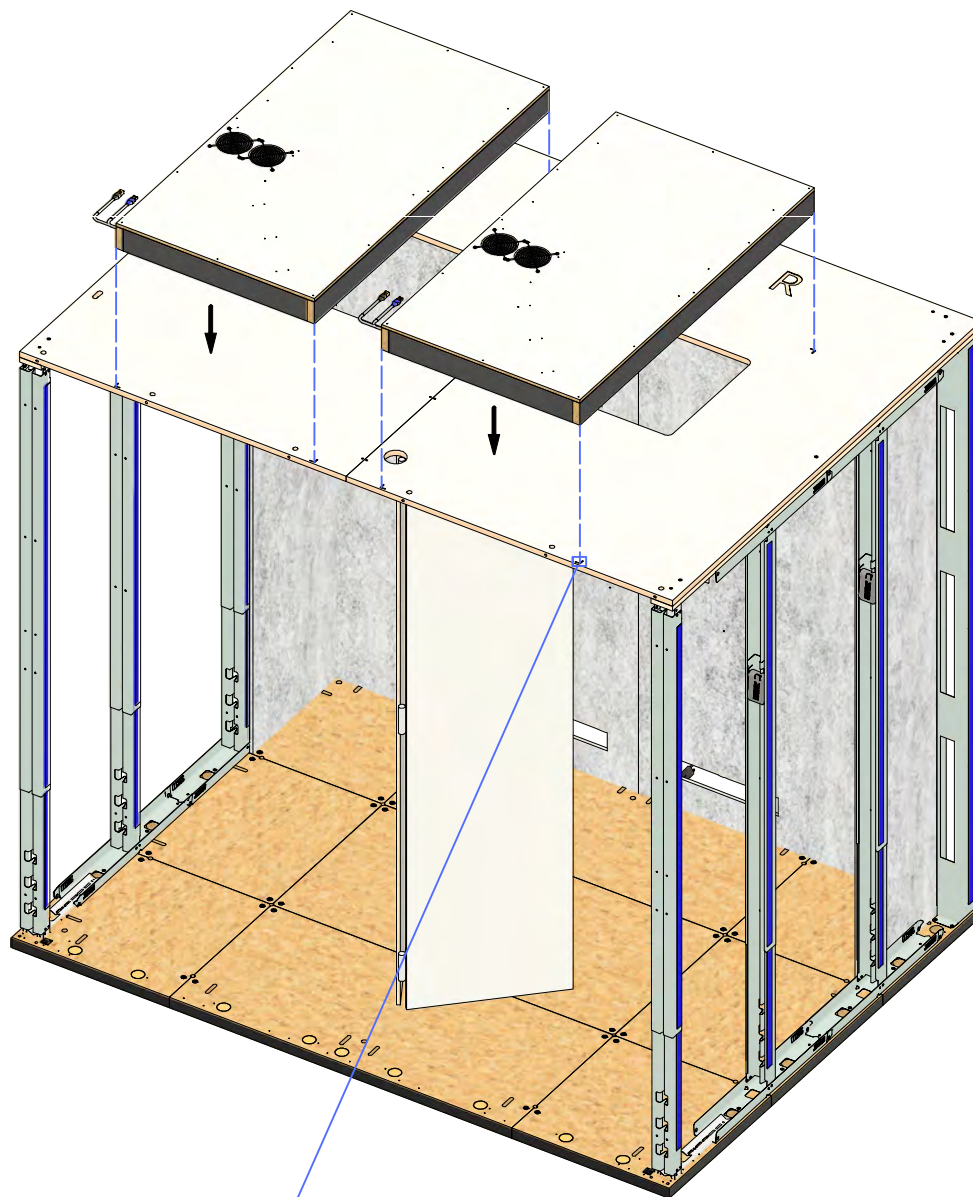

ALIGN TWO CORNERS








YOU WILL NEED TO MOVE THE UNIT TO ACCESS SOME CEILING CONNECTORS BUT RE-ALIGN TO THE CORNERS AFTERWARDS.

STEP 12

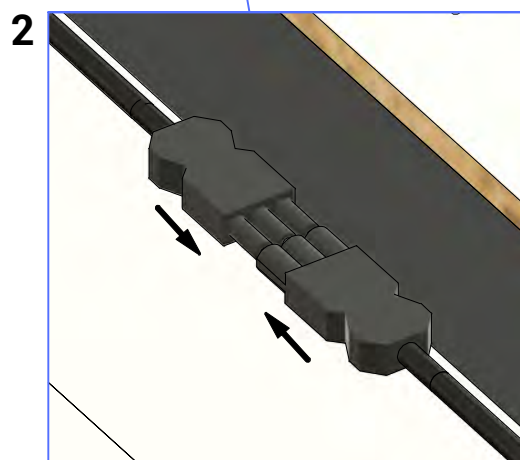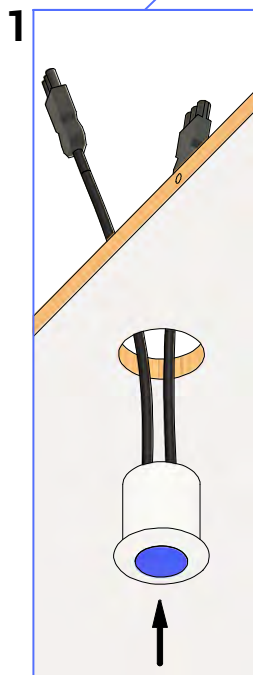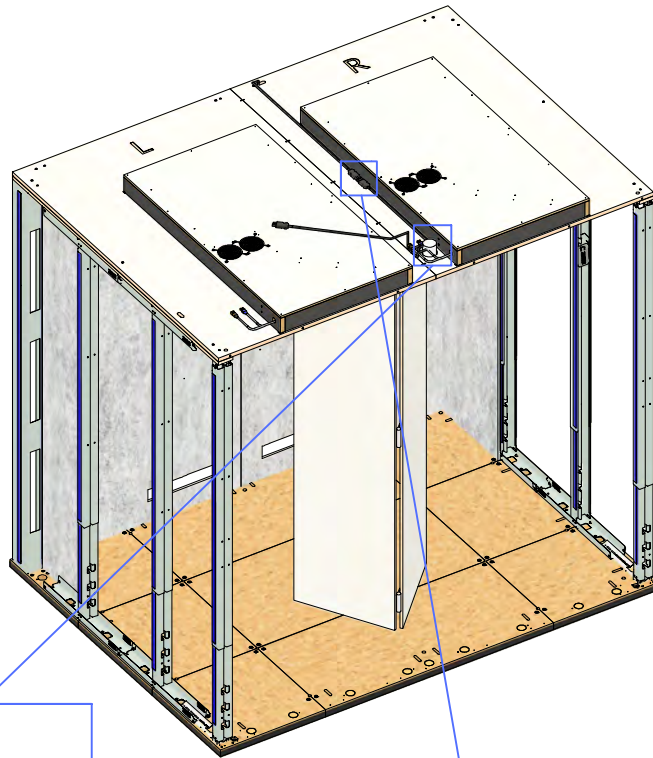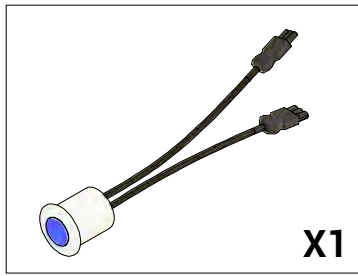

**CONNECT WITH REAR
WALL POWER**

STEP 13.1

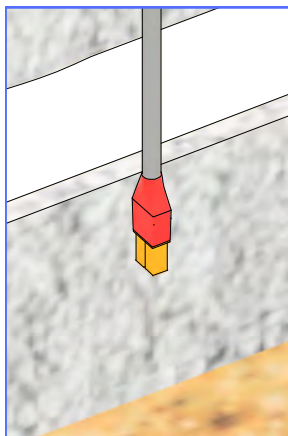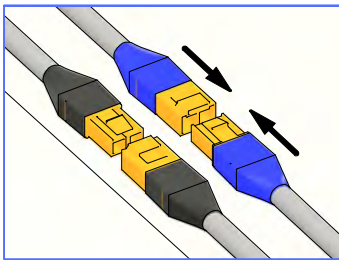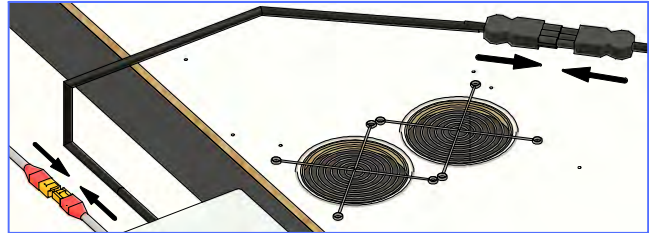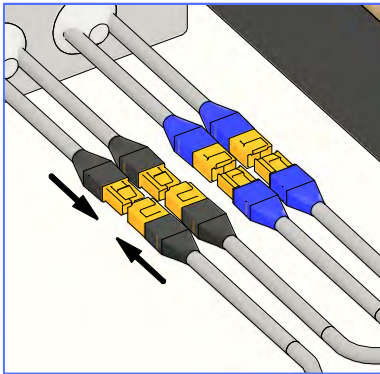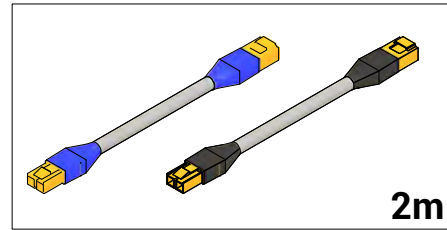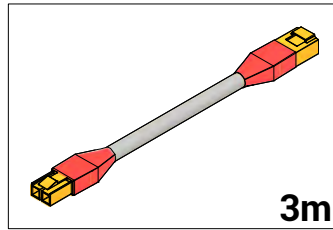
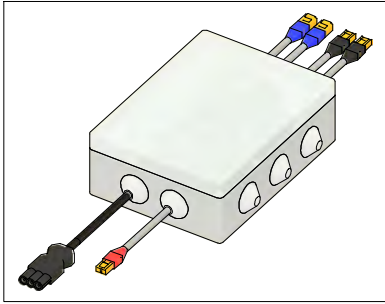


IF YOUR MODEL
COMES WITH 2 RED
CABLES, ROUTE THEM BOTH
THROUGH THE OVAL HOLE.




POSITION THE BOX AND CONNECT ALL CABLES ACCORDING TO COLOR

STEP 13.2


PLUG IN THE WALL POWER AND TEST FOR THE LIGHTING AND THE VENTILATION TO TURN ON. IF NOT, CONTACT SUPPORT.

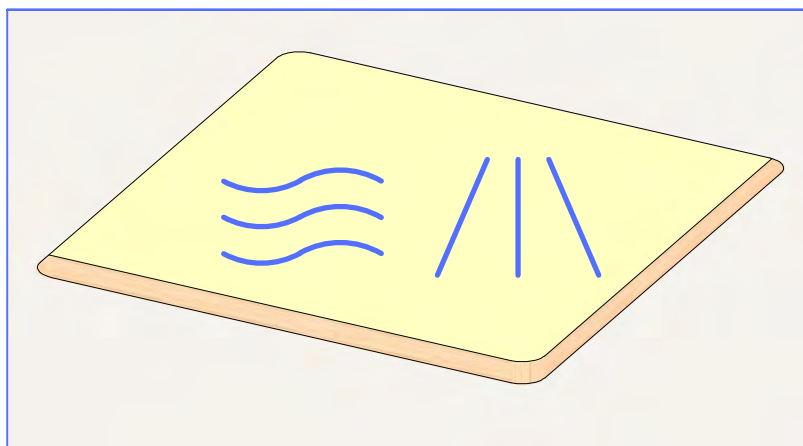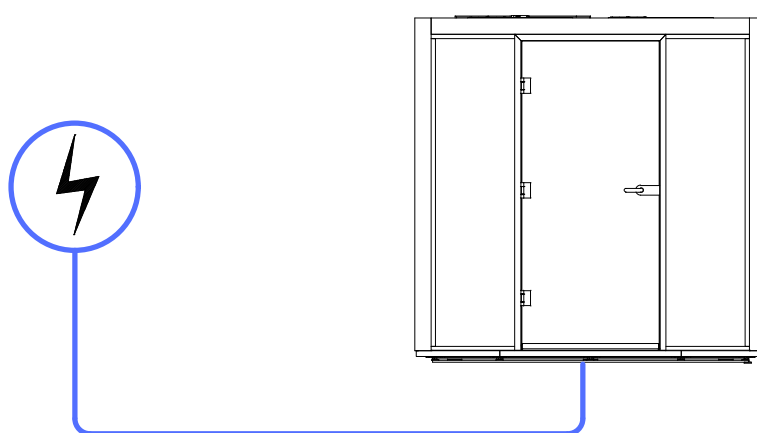

STEP 14

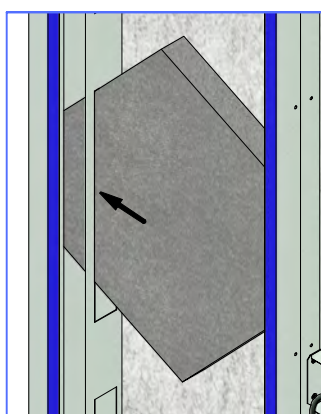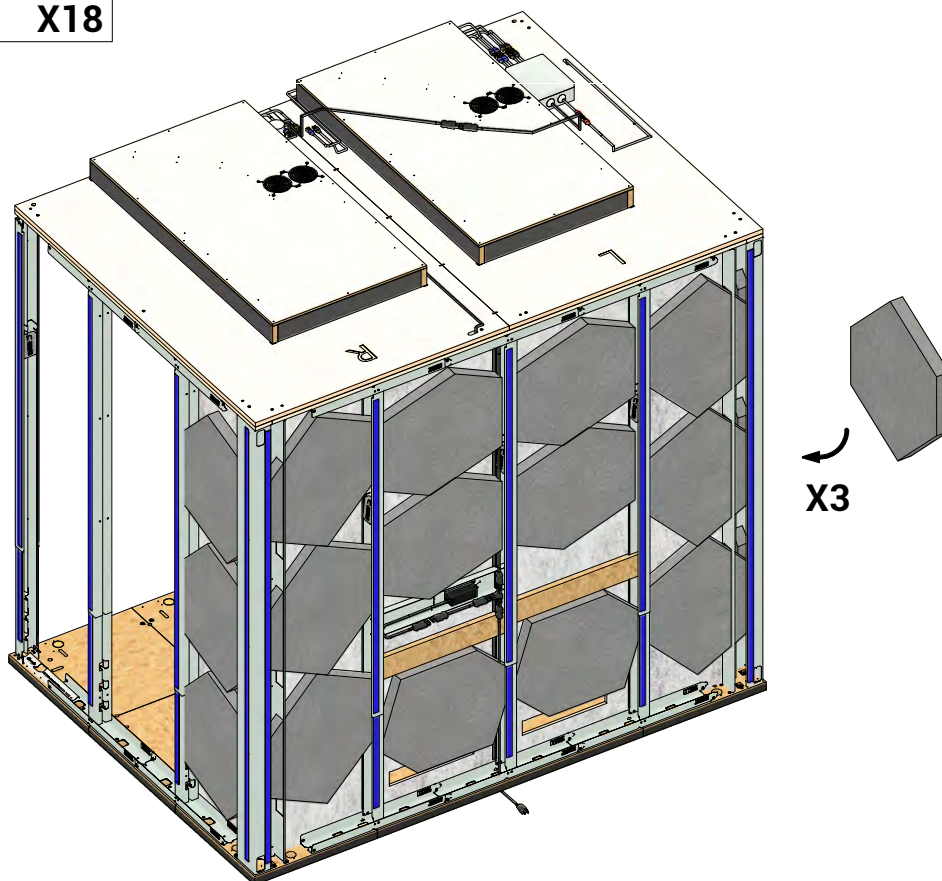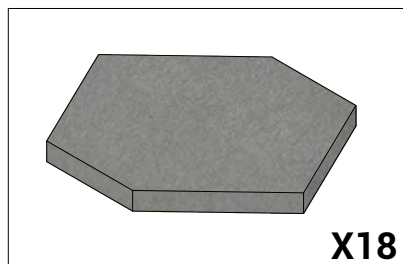




**POSITION INSIDE
SQUARE CUT OUT**

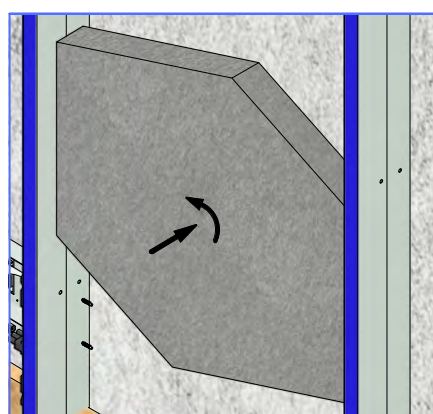

**INSERT AND TWIST TO
FIX AT HEIGHT**

DO NOT BLOCK THE CUTOUTS IN THE FELT WALL PANELS WITH INSULATION.

STEP 15.1

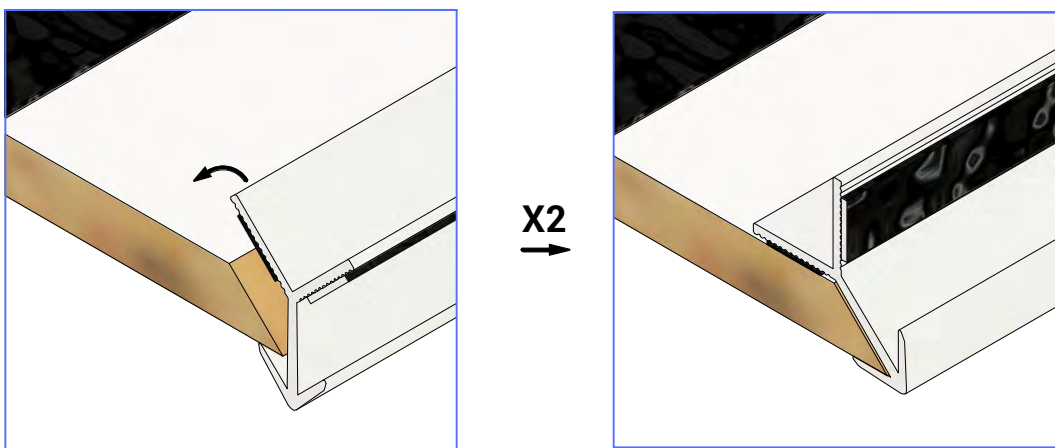
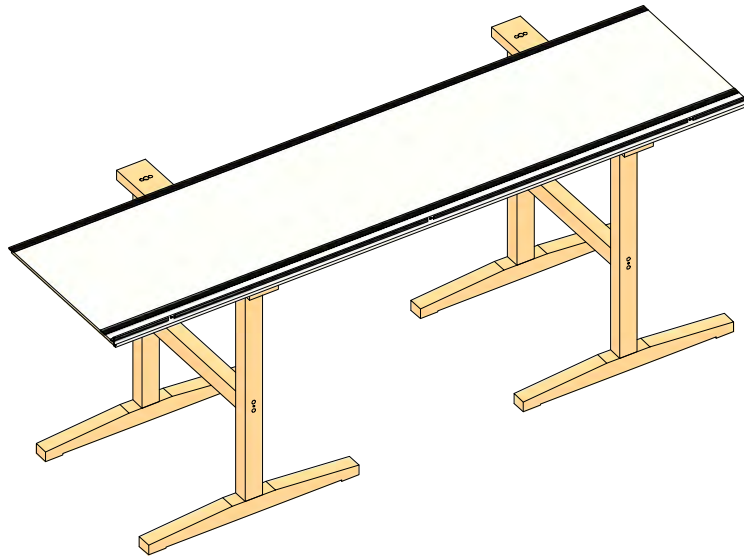
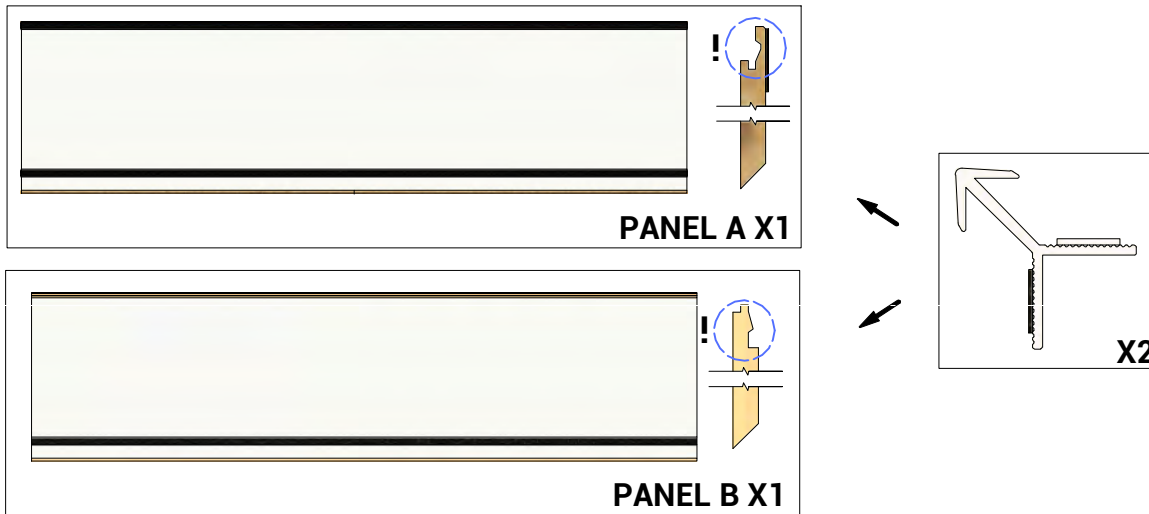


THIS STEP REQUIRES 2 PEOPLE TO INSTALL UNIFORMLY. THE ENDS OF THE PROFILE SHOULD BE FLUSH WITH THE PANELS ENDS. REMOVE THE ADHESIVE BACKING AND "ROLL" THE PROFILE UP ONTO THE EDGE OF THE MITERED PANEL. IF INSTALLED INCORRECTLY, IT CAN BE REMOVED BUT BE CAREFUL NOT TO BEND THE PROFILE. YOU MAY NEED TO INSTALL NEW TAPE.

STEP 15.2







SLIDE RIGHT AND CATCH THE CORNER

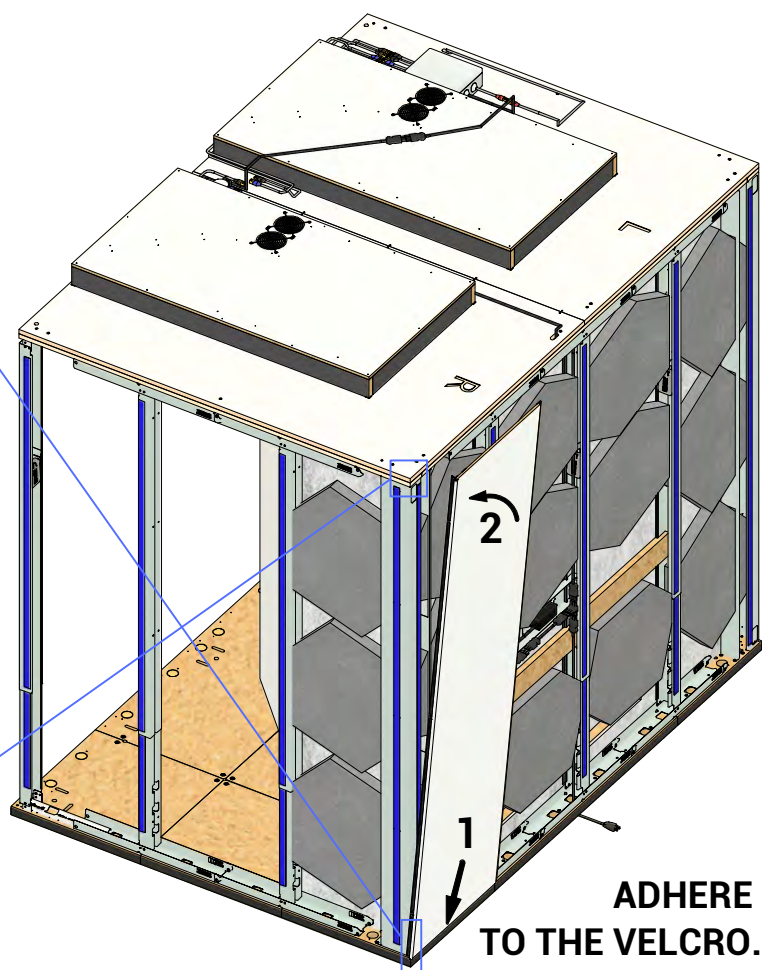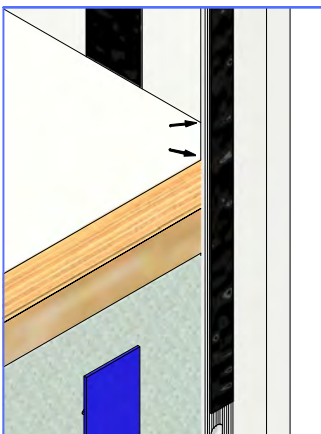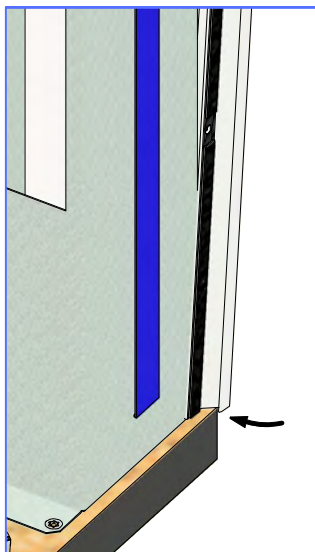



**MAKE SURE THE CORNER PROFILE IS NEATLY ALIGNED
AND TOUCHING THE CEILING ON BOTH SIDES.**

STEP 15.3

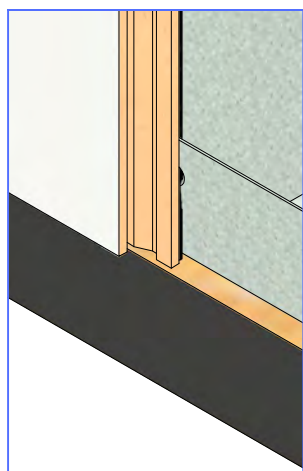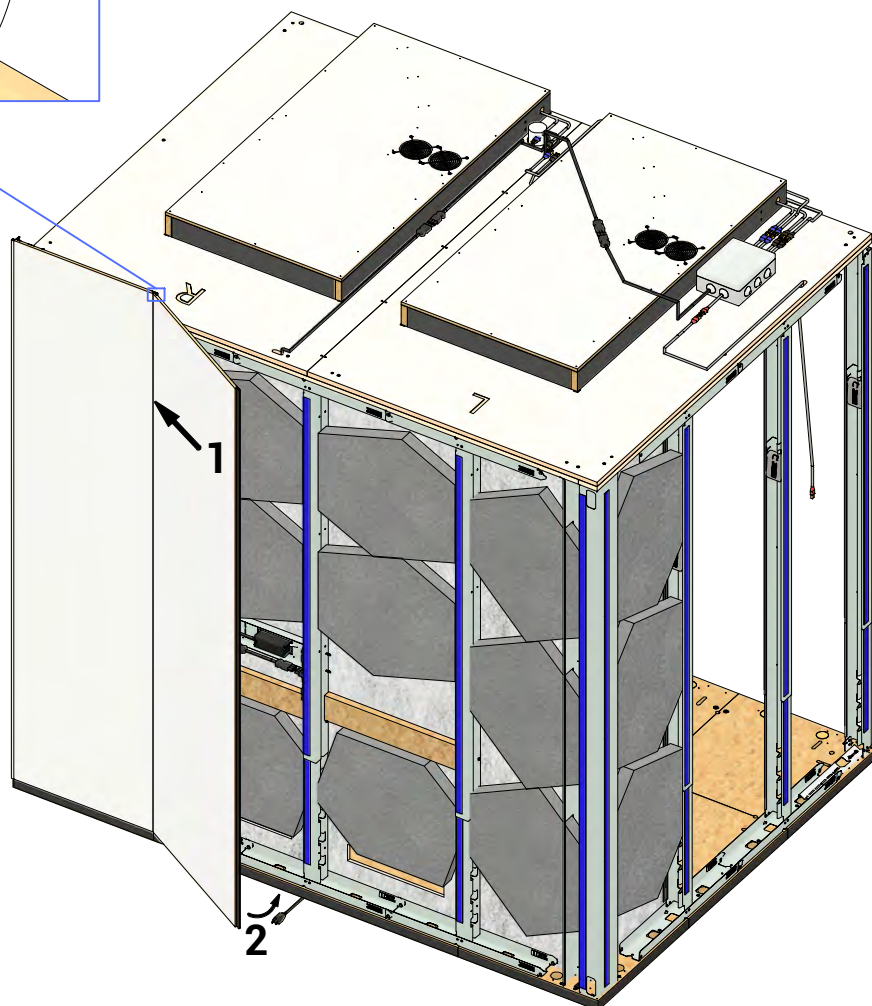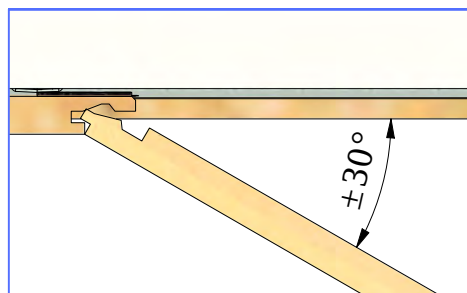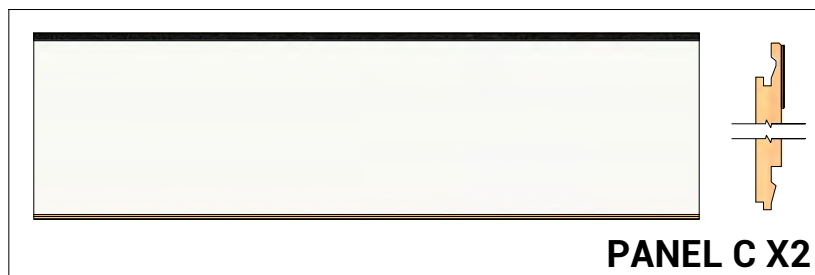


THE PANEL SITS ON THE FLOOR EDGE


STEP 15.4

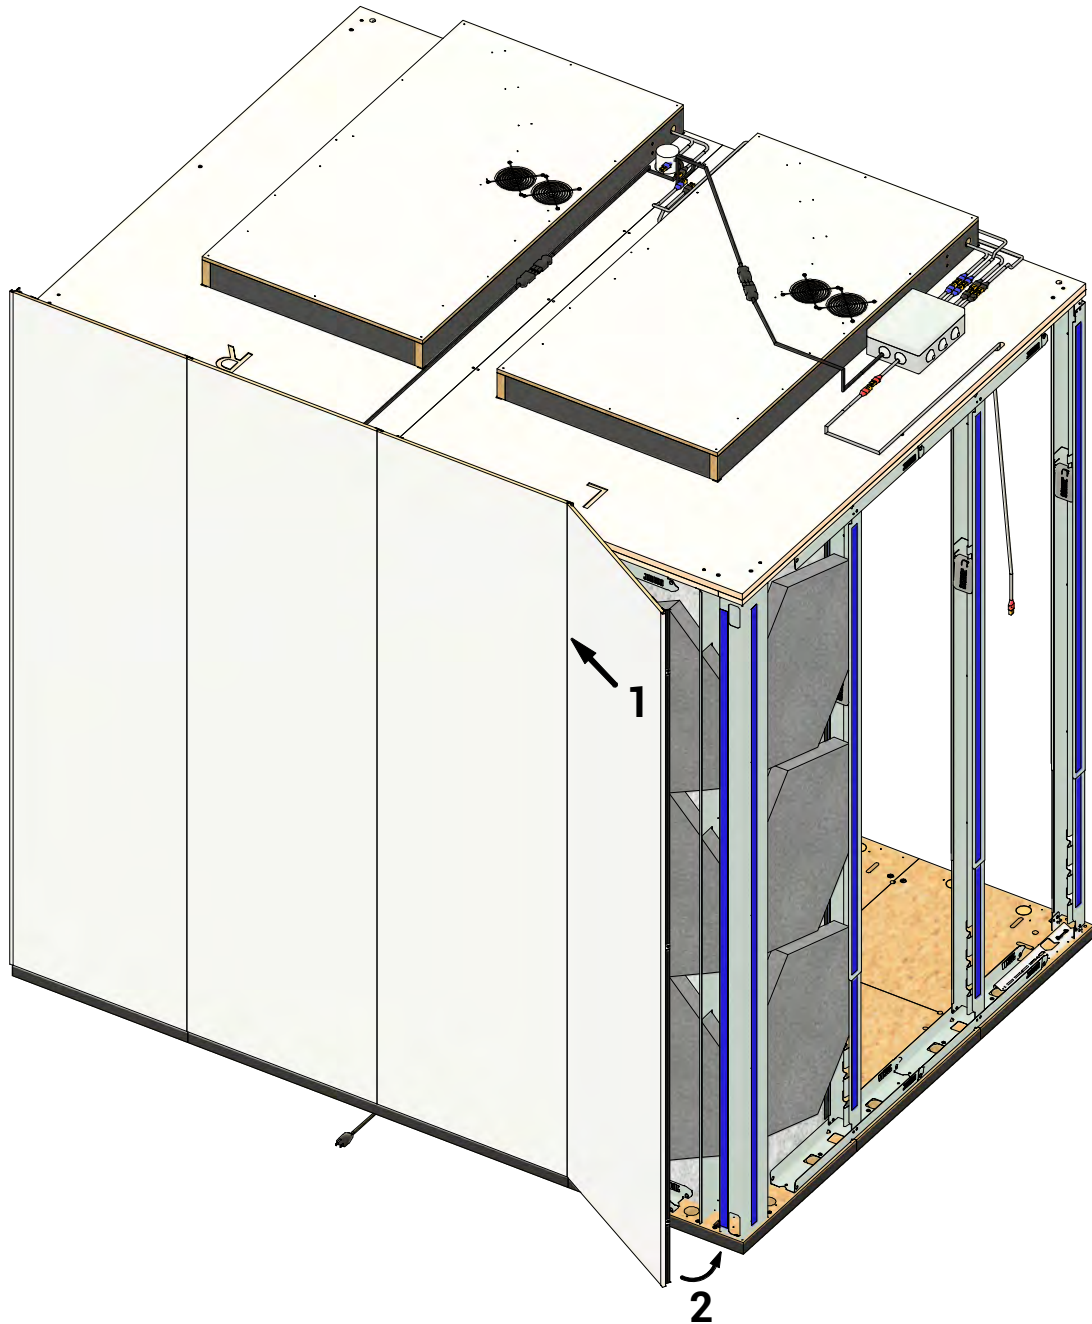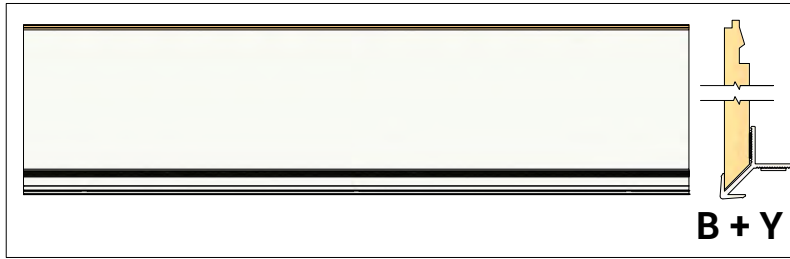


STEP 15.5

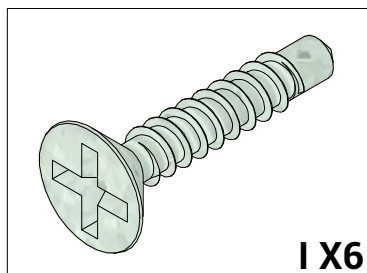




TOOLS NEEDED




REPEAT ON OTHER SIDE

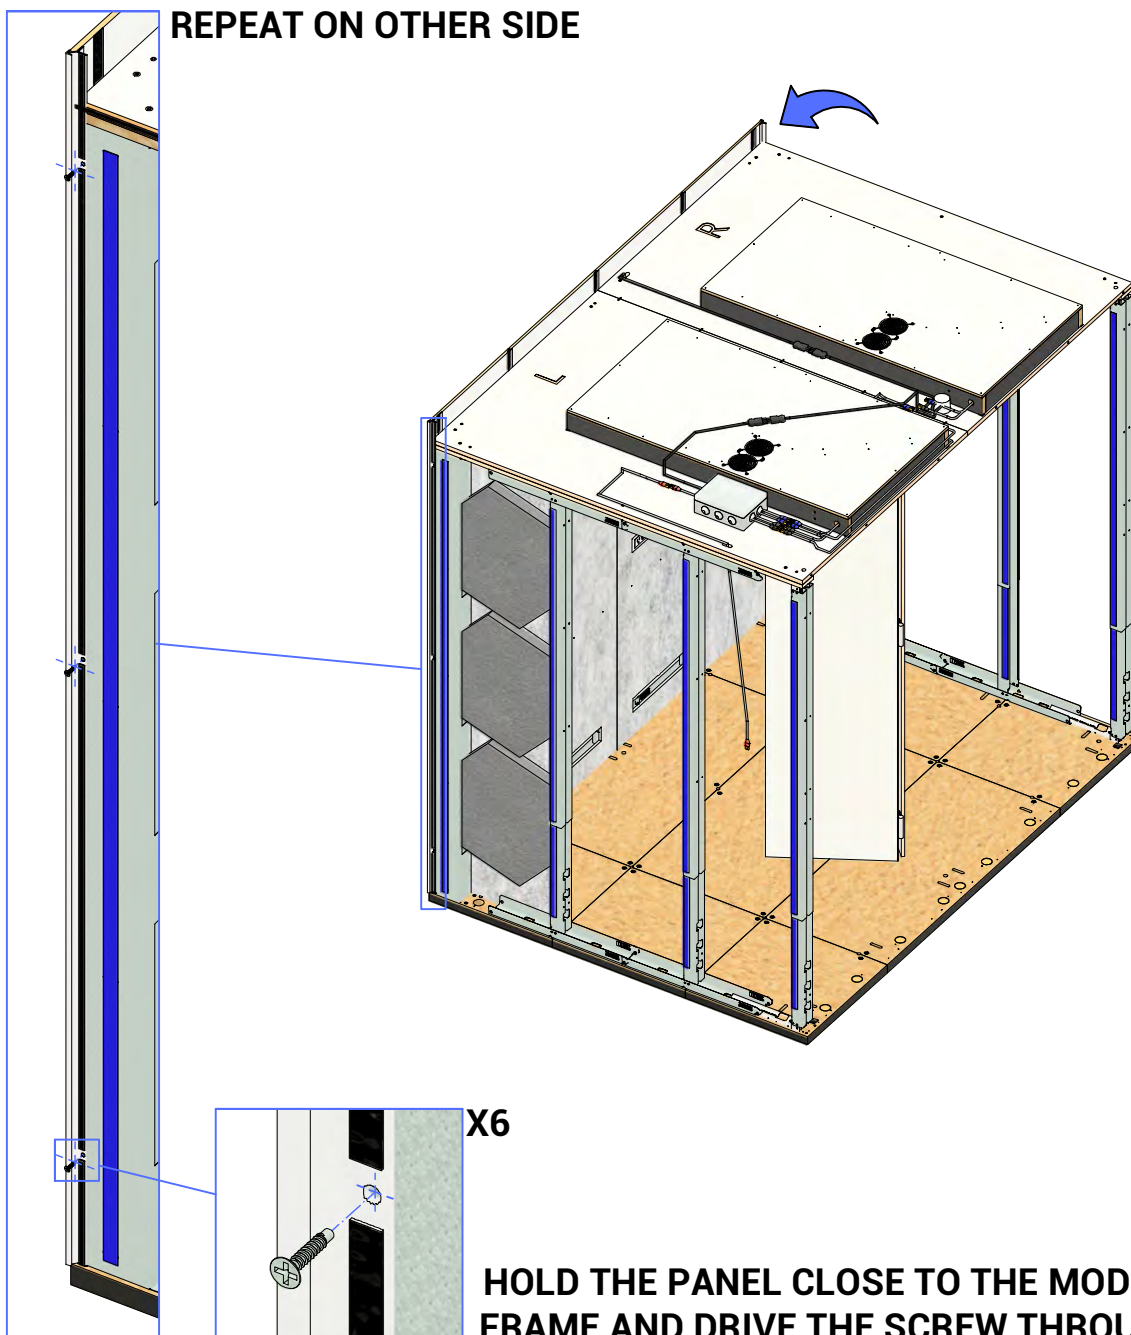


STEP 16.1

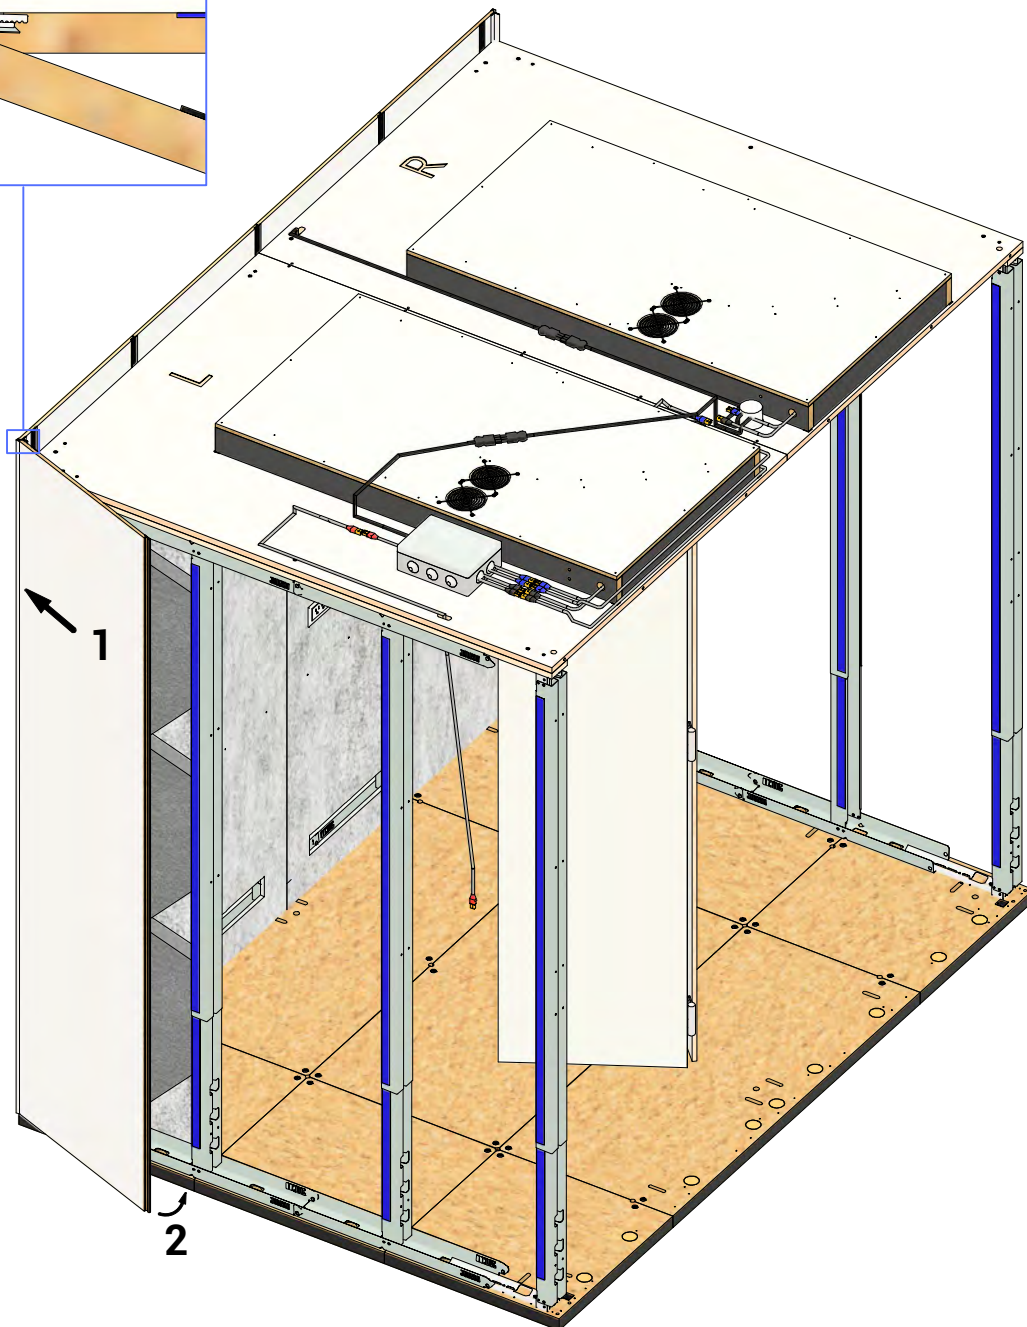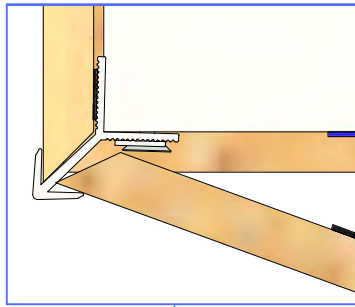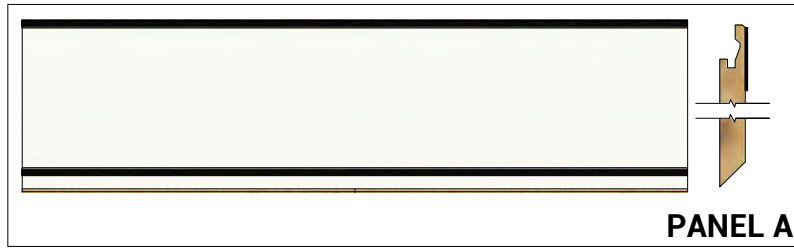




STEP 16.2

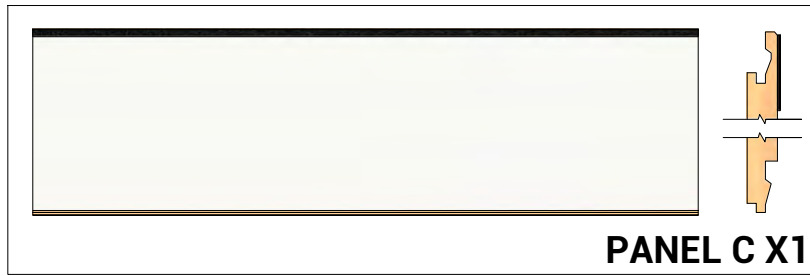


STEP 16.3

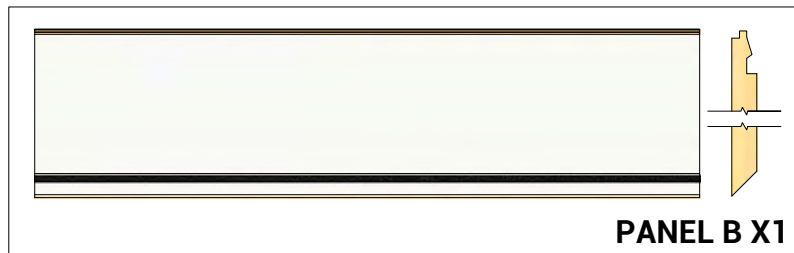


STEP 17

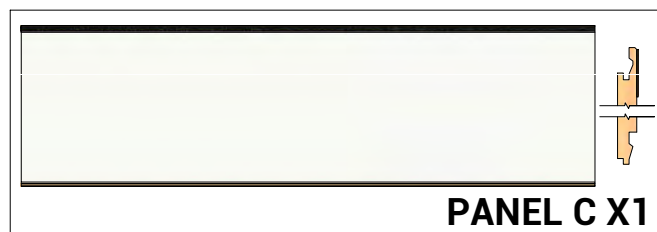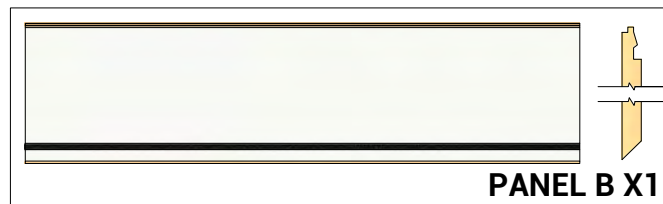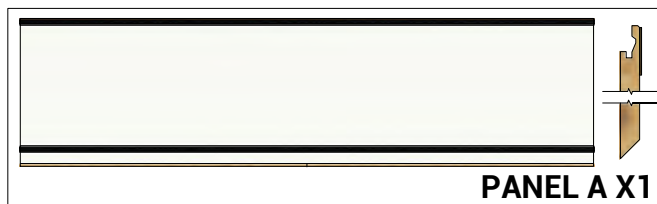




REPEAT STEP 16 ON THIS SIDE.

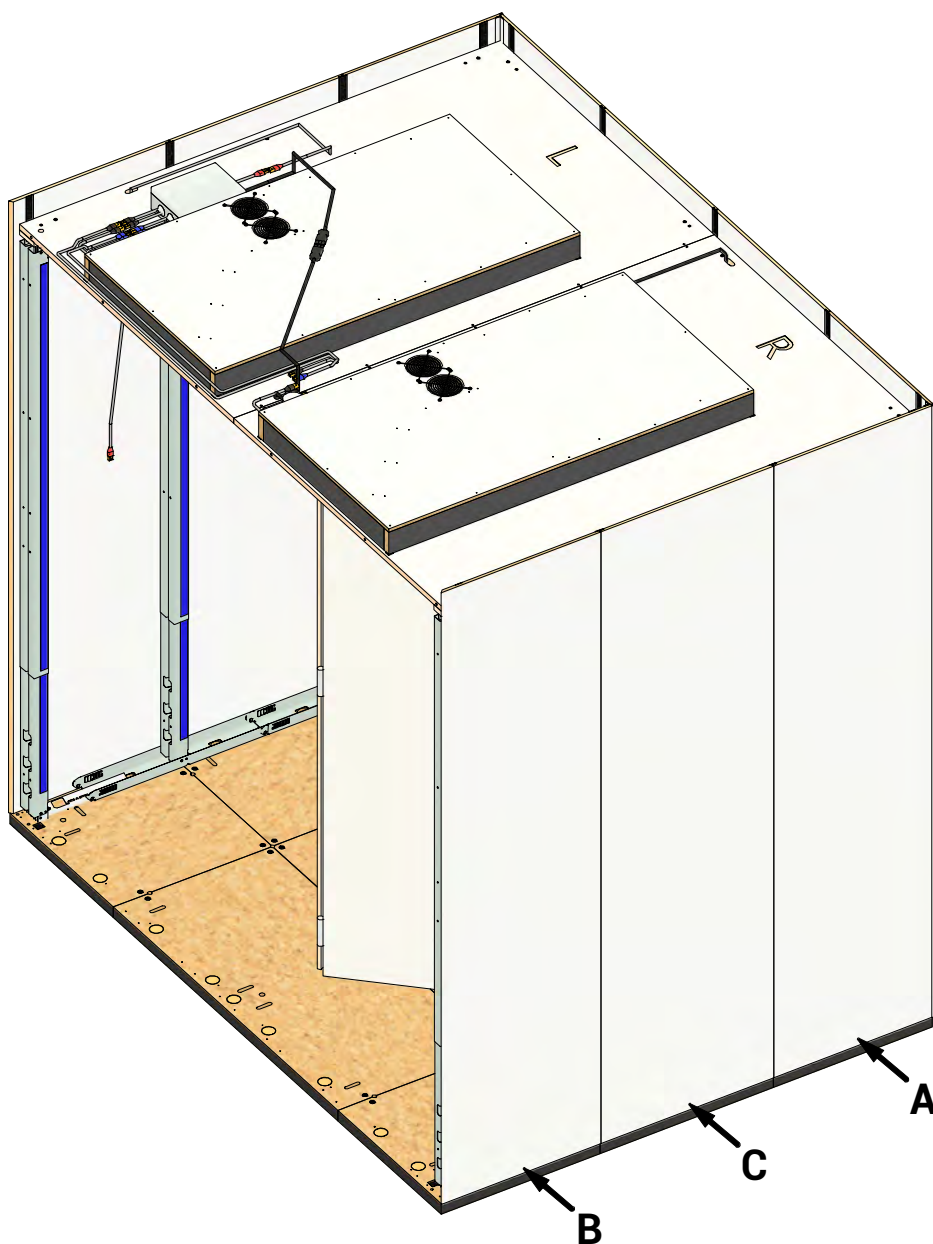

STEP 18.1

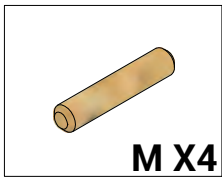


TOOLS NEEDED

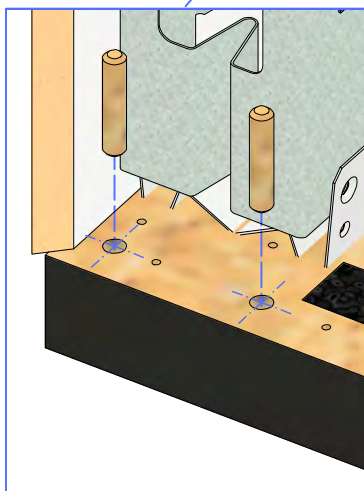
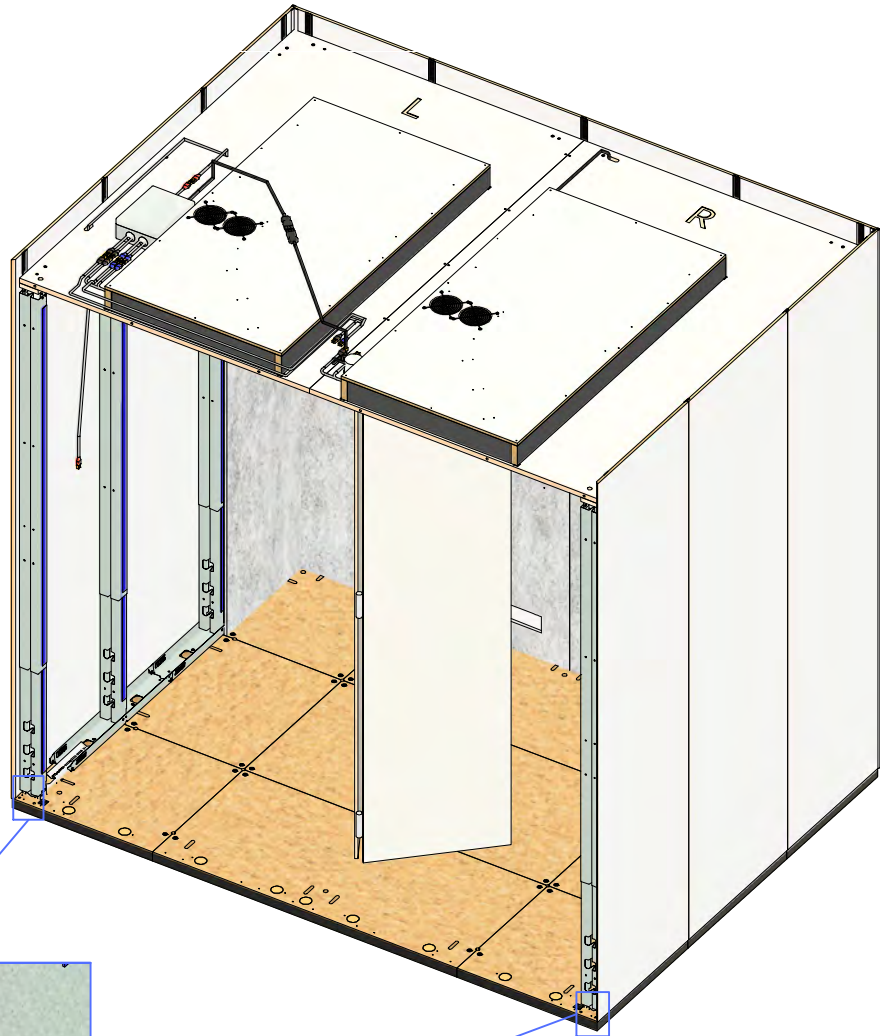



X2




STEP 18.2

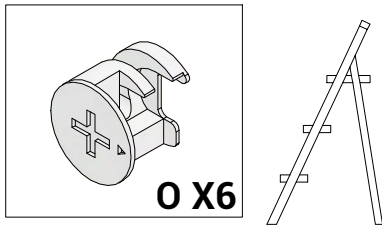


**MOVE THE VENTILIGHTS
TO ACCESS THE HOLES.**

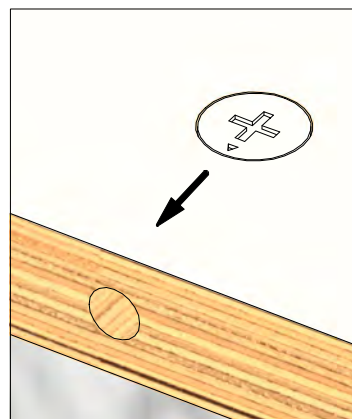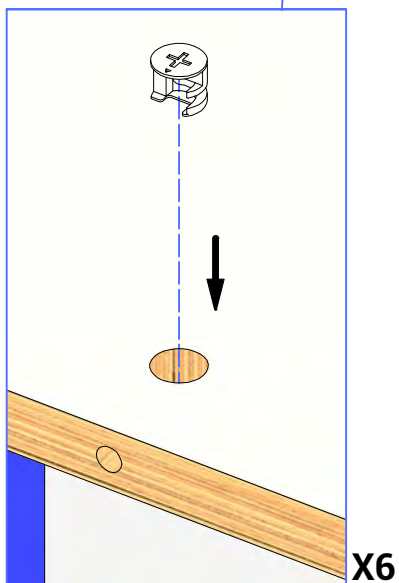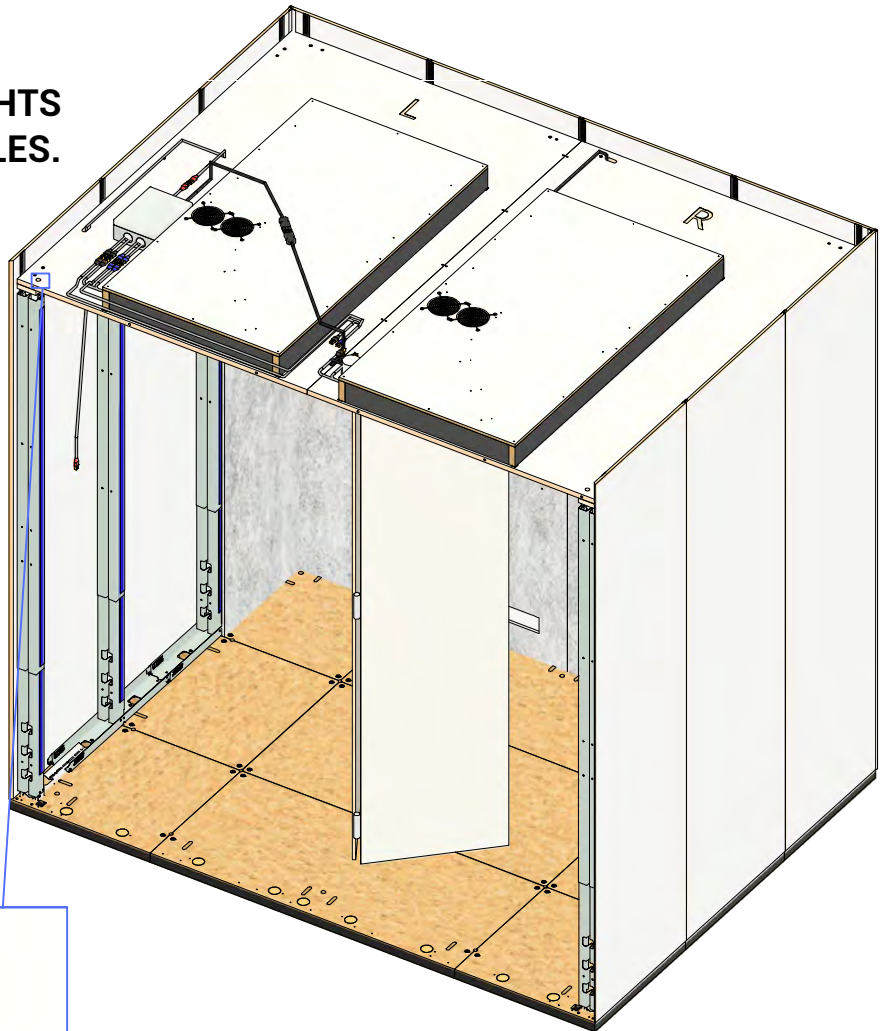



STEP 18.3

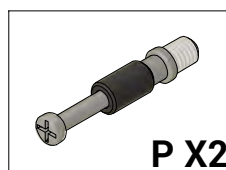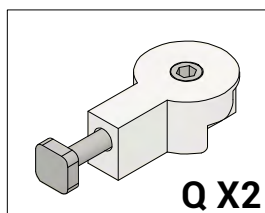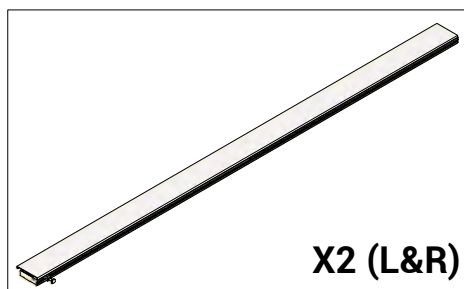


TOOLS NEEDED




PH 2

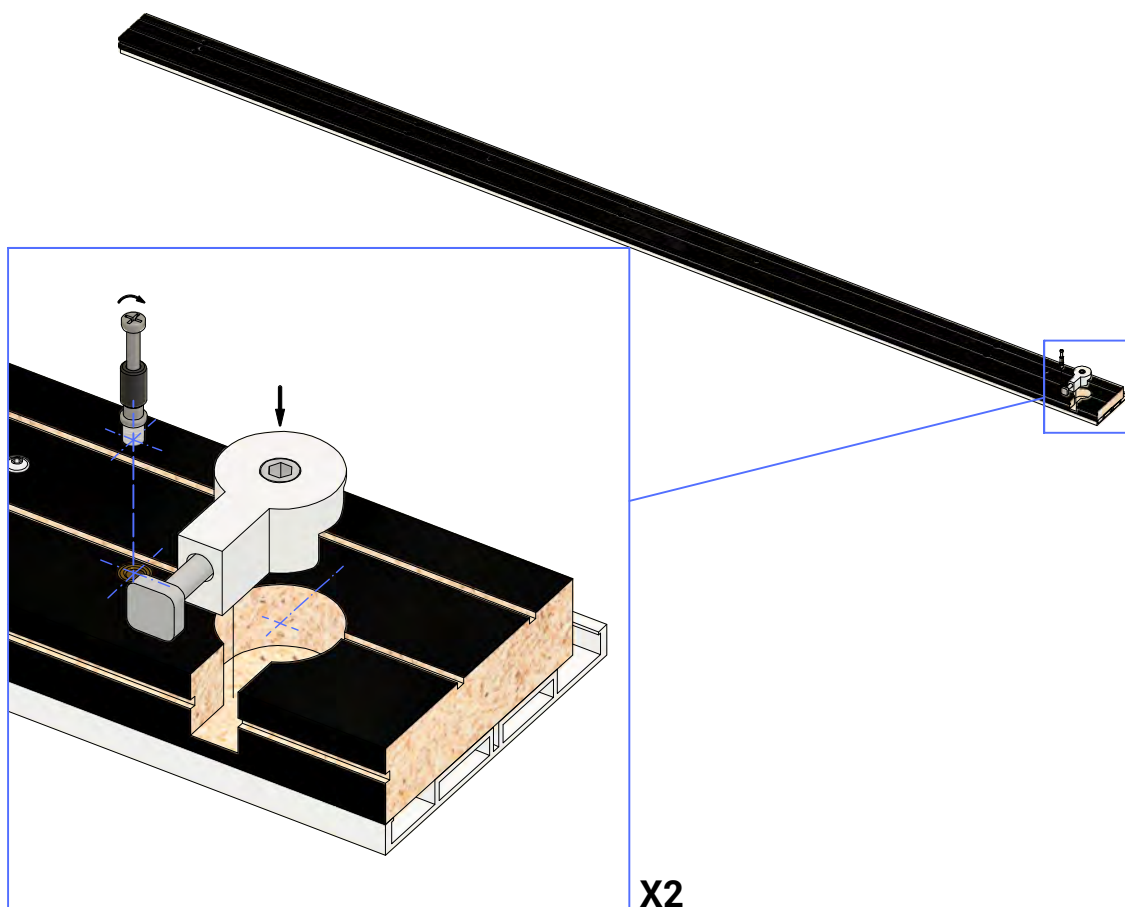

LEFT FACADE BEAM

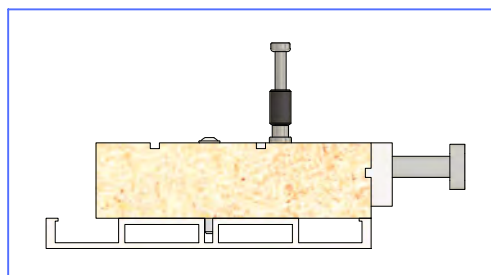


RIGHT FACADE BEAM

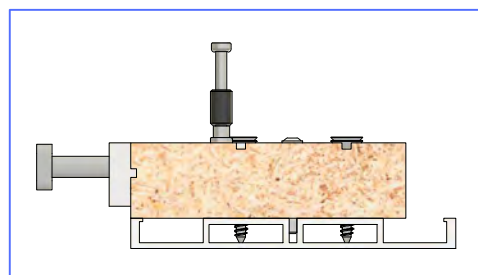




STEP 18.4




TOOLS NEEDED




PH 2

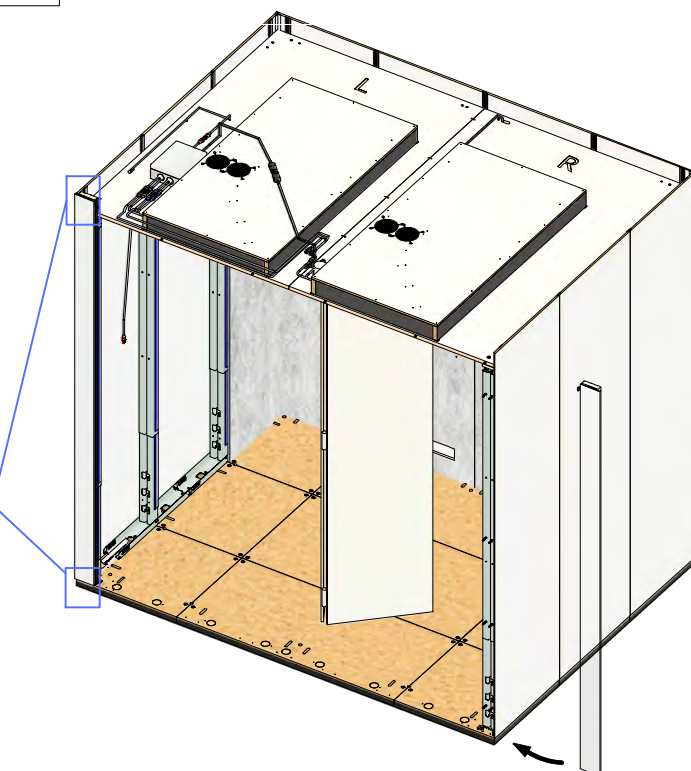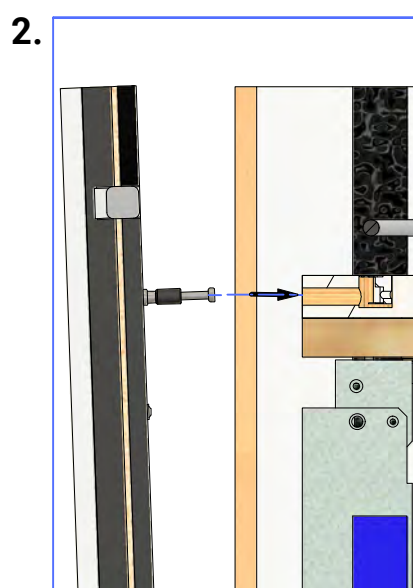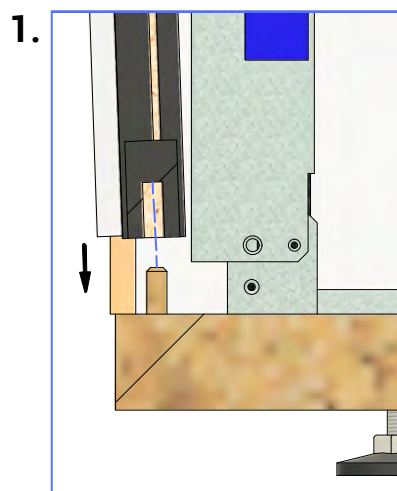


4 REPEAT ON OTHER SIDE

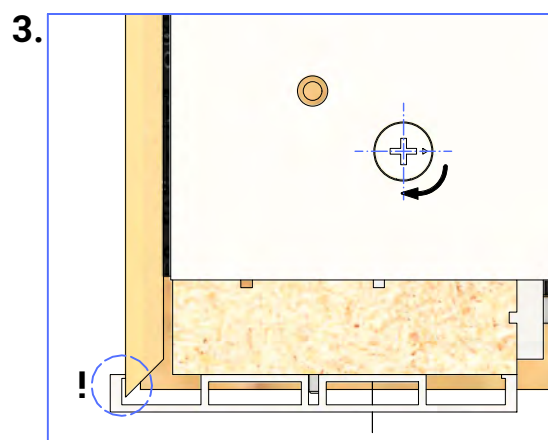




STEP 18.5

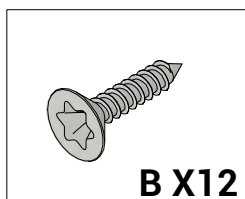

TOOLS NEEDED





TX 20

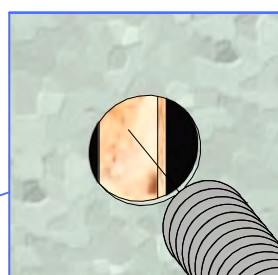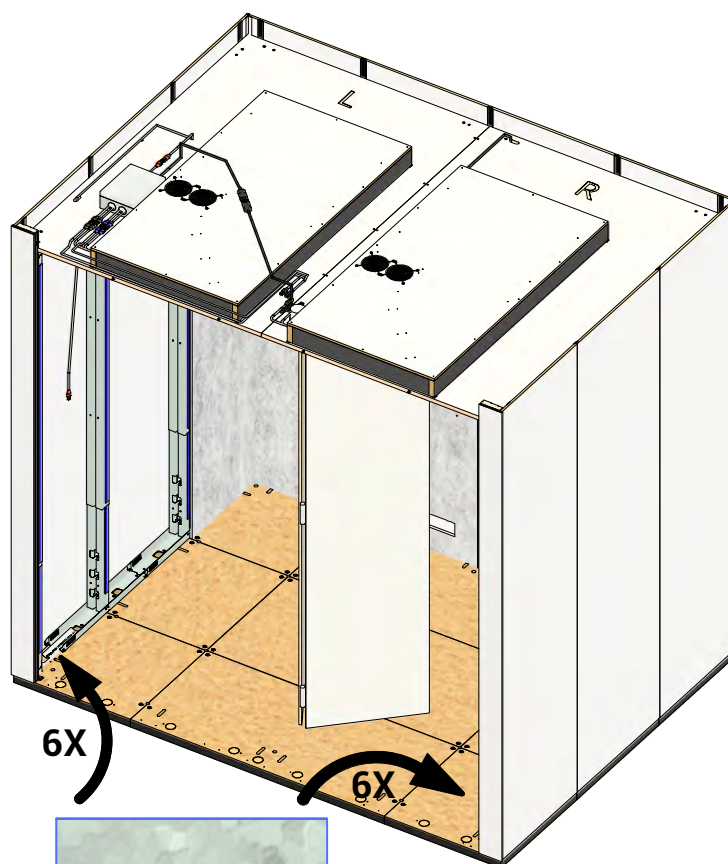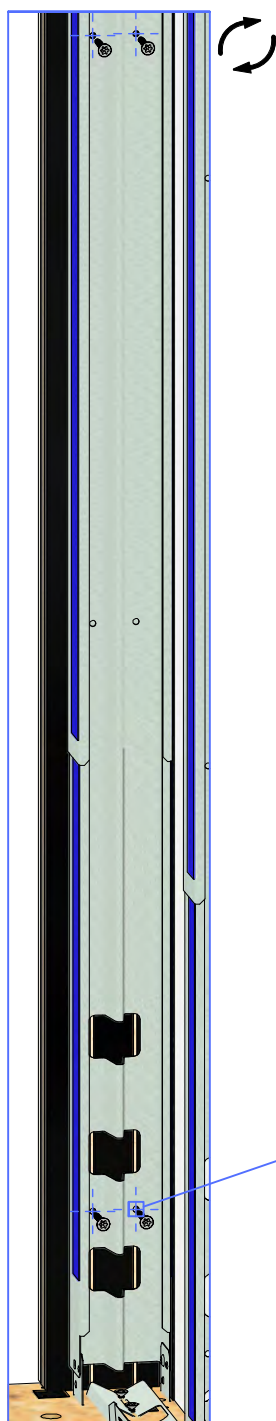



X12

**SCREW INTO
THE GROOVES**


STEP 18.6

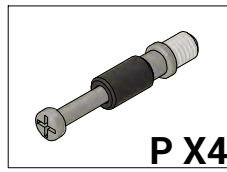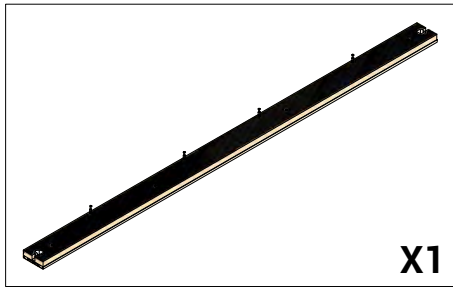



TOOLS NEEDED

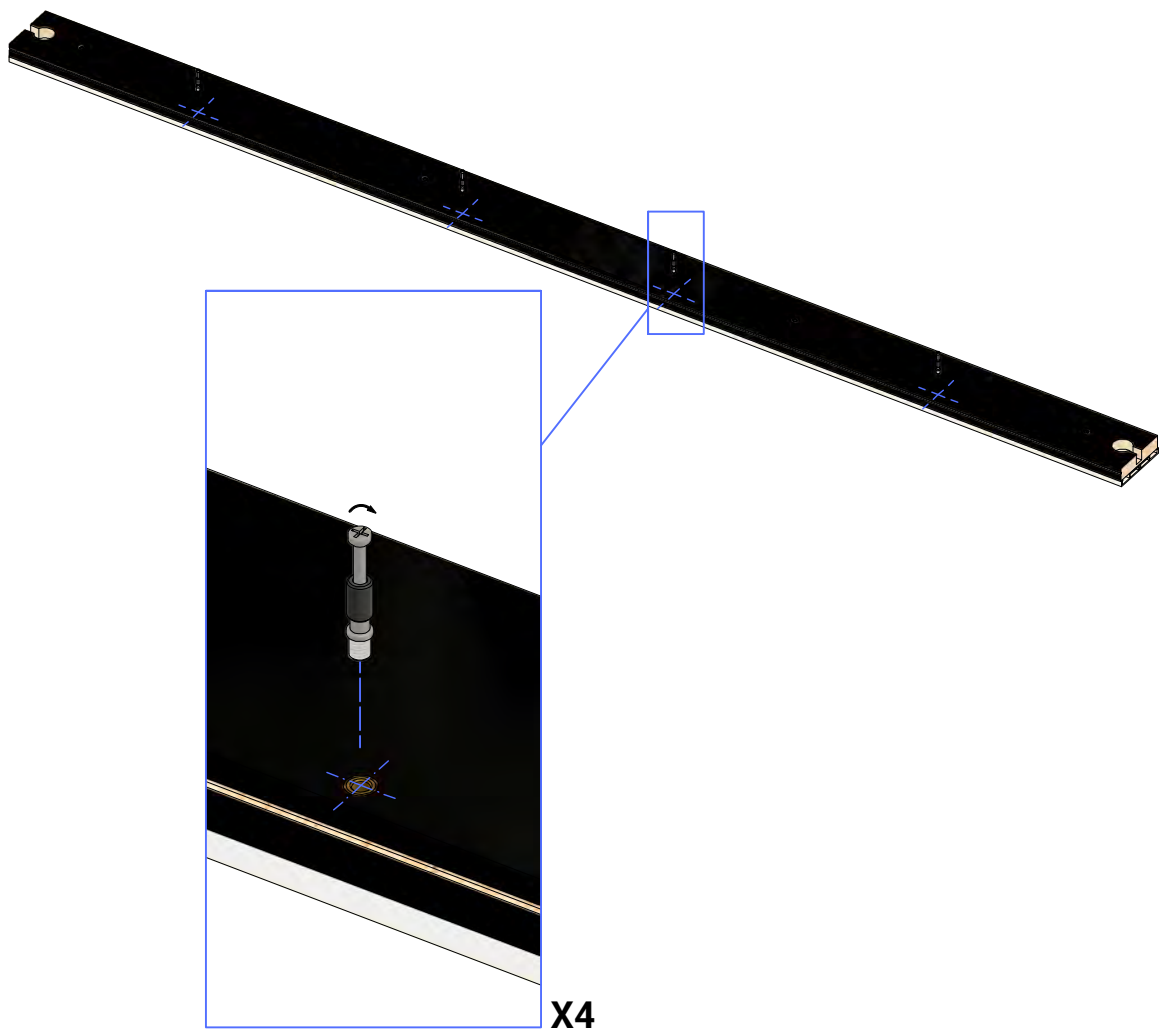


STEP 18.7

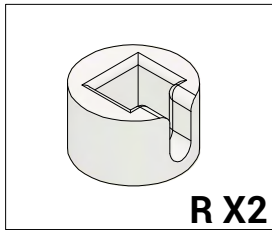







TOOLS NEEDED

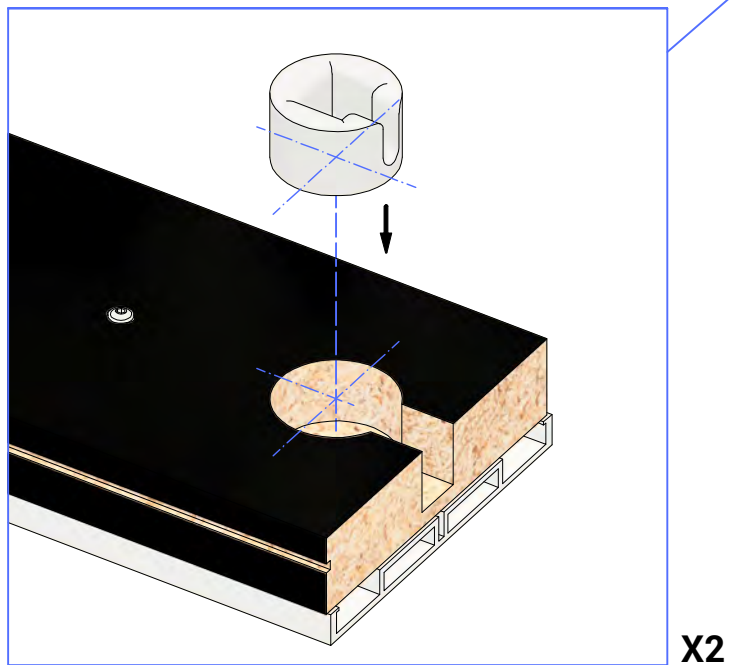

STEP 18.8

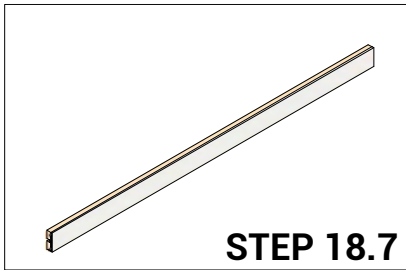


TOOLS NEEDED

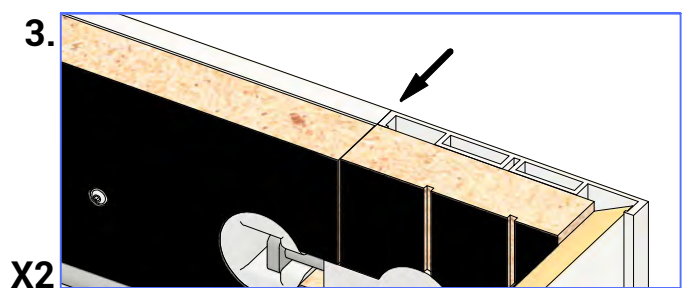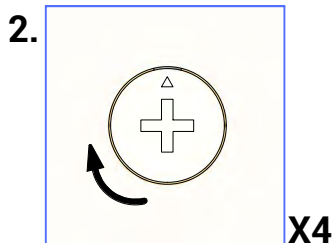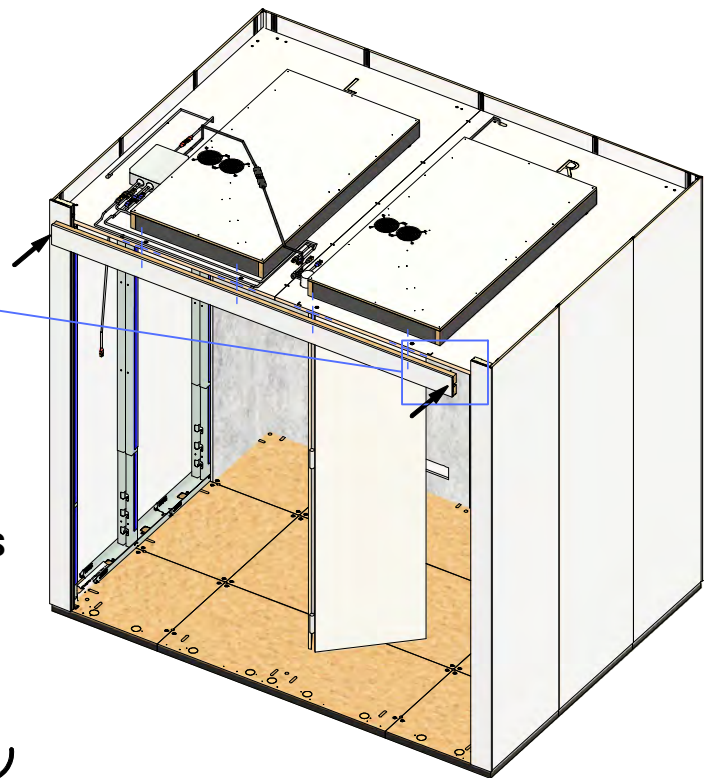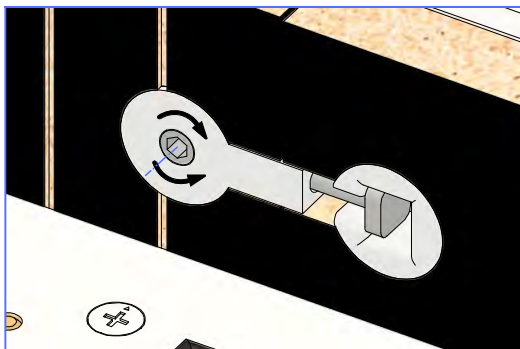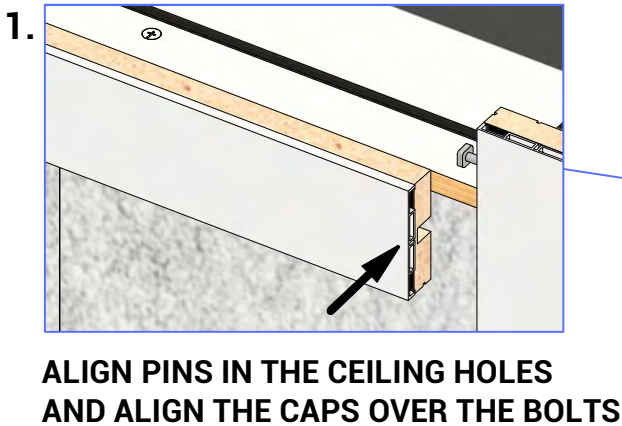


TIGHTEN THE CONNECTION TO CLOSE THE SEAM. ALIGN THE HORIZONTAL AND VERTICAL TOPS FLUSH. IF NECESSARY, A SECOND PERSON CAN PUSH UP OR PULL DOWN ON THE HORIZONTAL FACADE TO ASSIST IN THE FLUSH SEAM.

STEP 19

TOOLS NEEDED




H 5

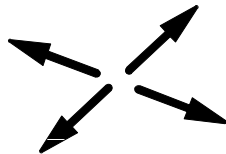





MOVE POD TO FINAL LOCATION + RELEVEL(STEP 1.7)



STEP 20

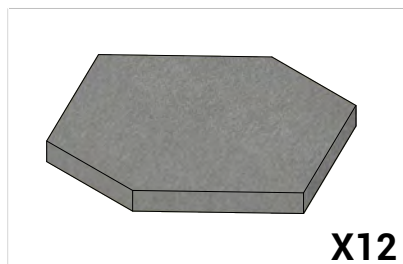


TOOLS NEEDED

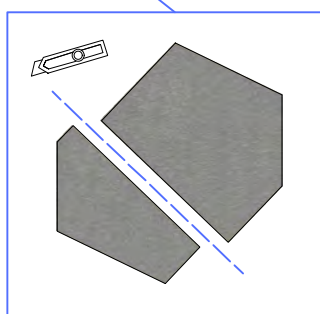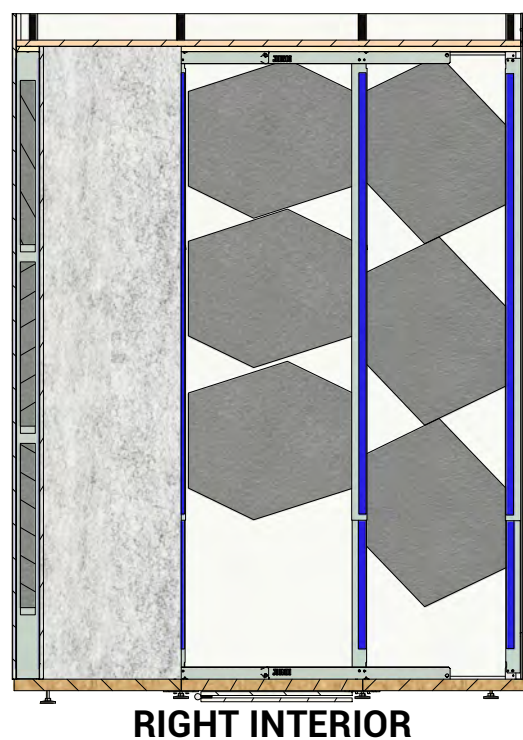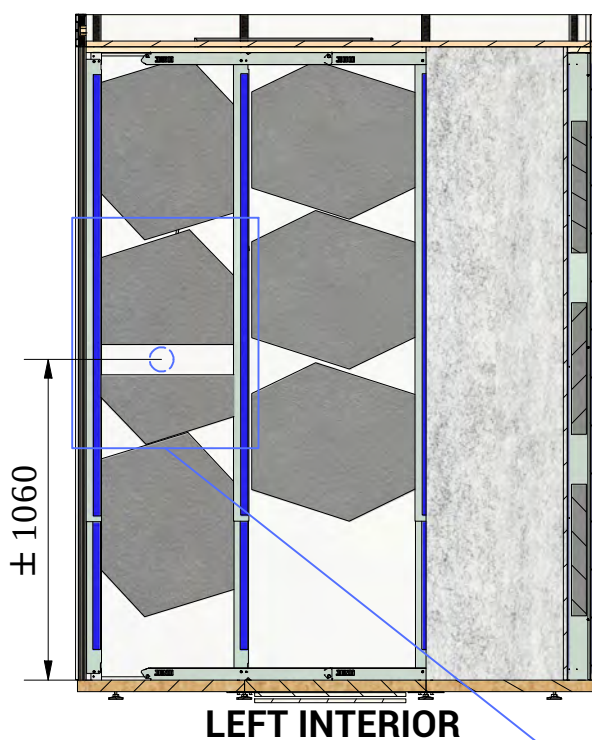


**A DIMMER WILL BE
MOUNTED HERE LATER.**

STEP 21.1

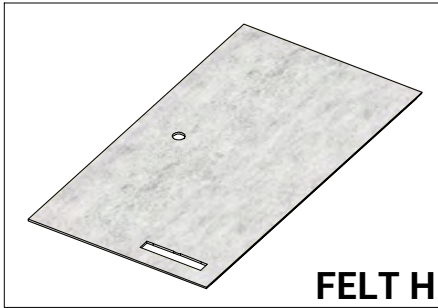


1. OVERLAP THE MITERED EDGE ON THE INSTALLED PANEL BY HALF THE PANELS THICKNESS & HOLD IT LIKE THAT.
- 2 & 3. CAREFULLY ADHERE THE VELCRO MAKING SURE THE OVERLAP (1.) IS MAINTAINED.
4. WHEN THE PANEL IS TIGHT, FIRMLY AND EVENLY PUSH THE MITER CLOSED WITH THE HEAL OF YOUR HAND.

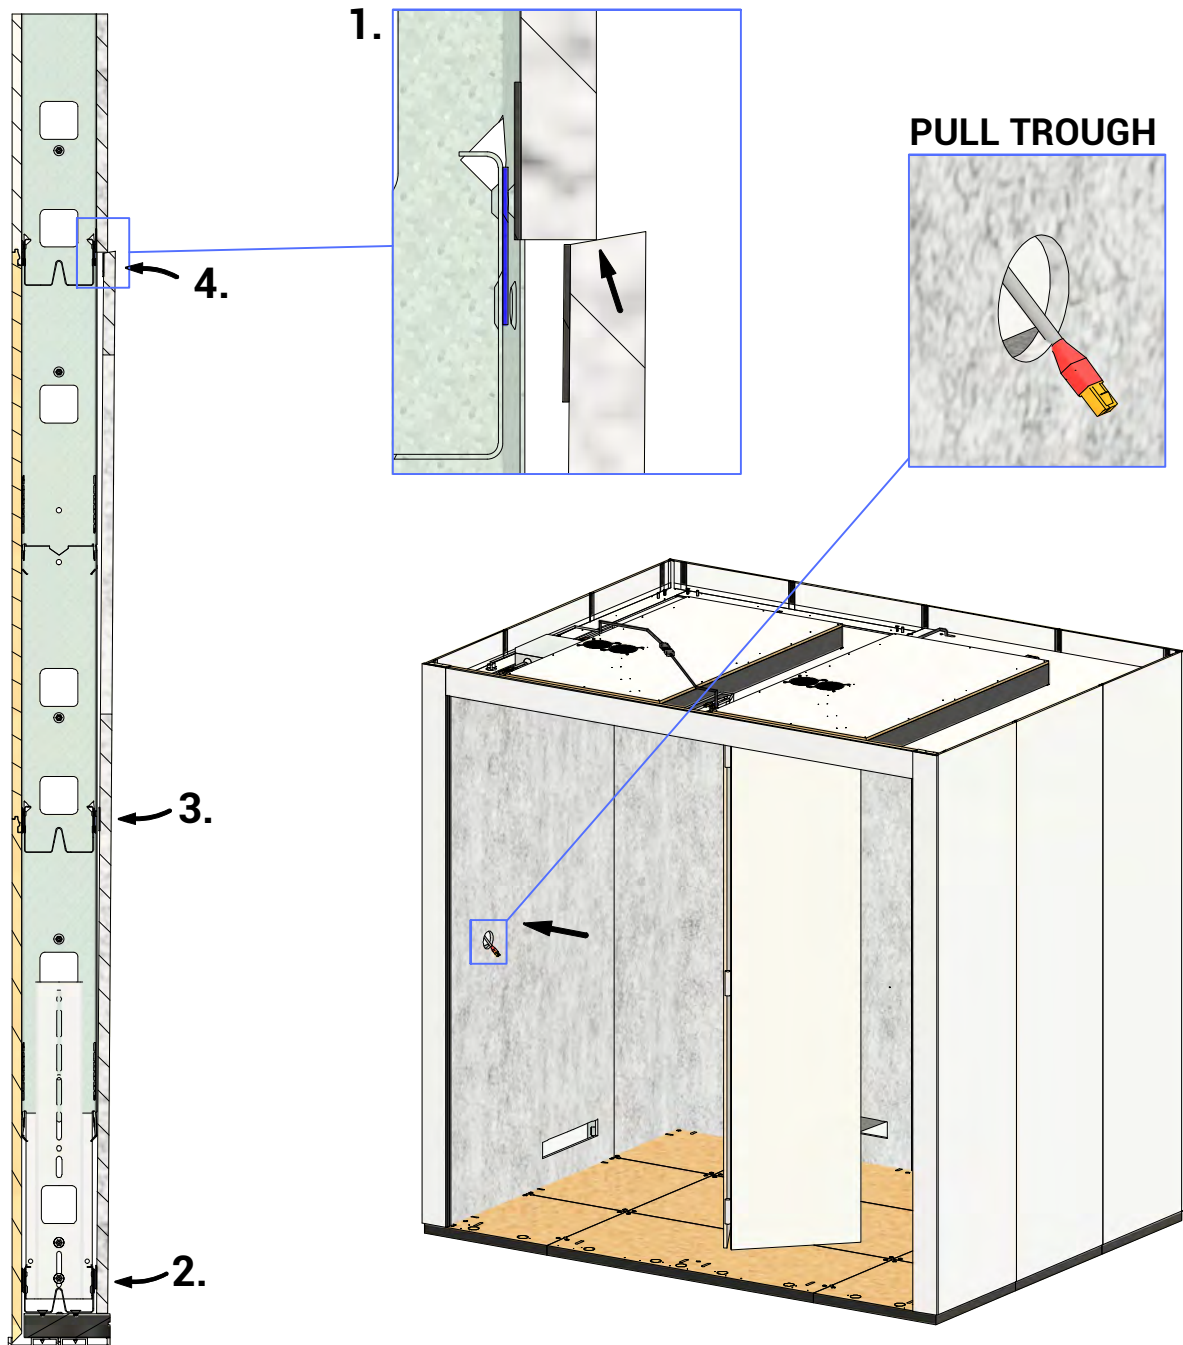


STEP 21.2




REPEAT STEP 21.1 ON THE OPPOSITE SIDE

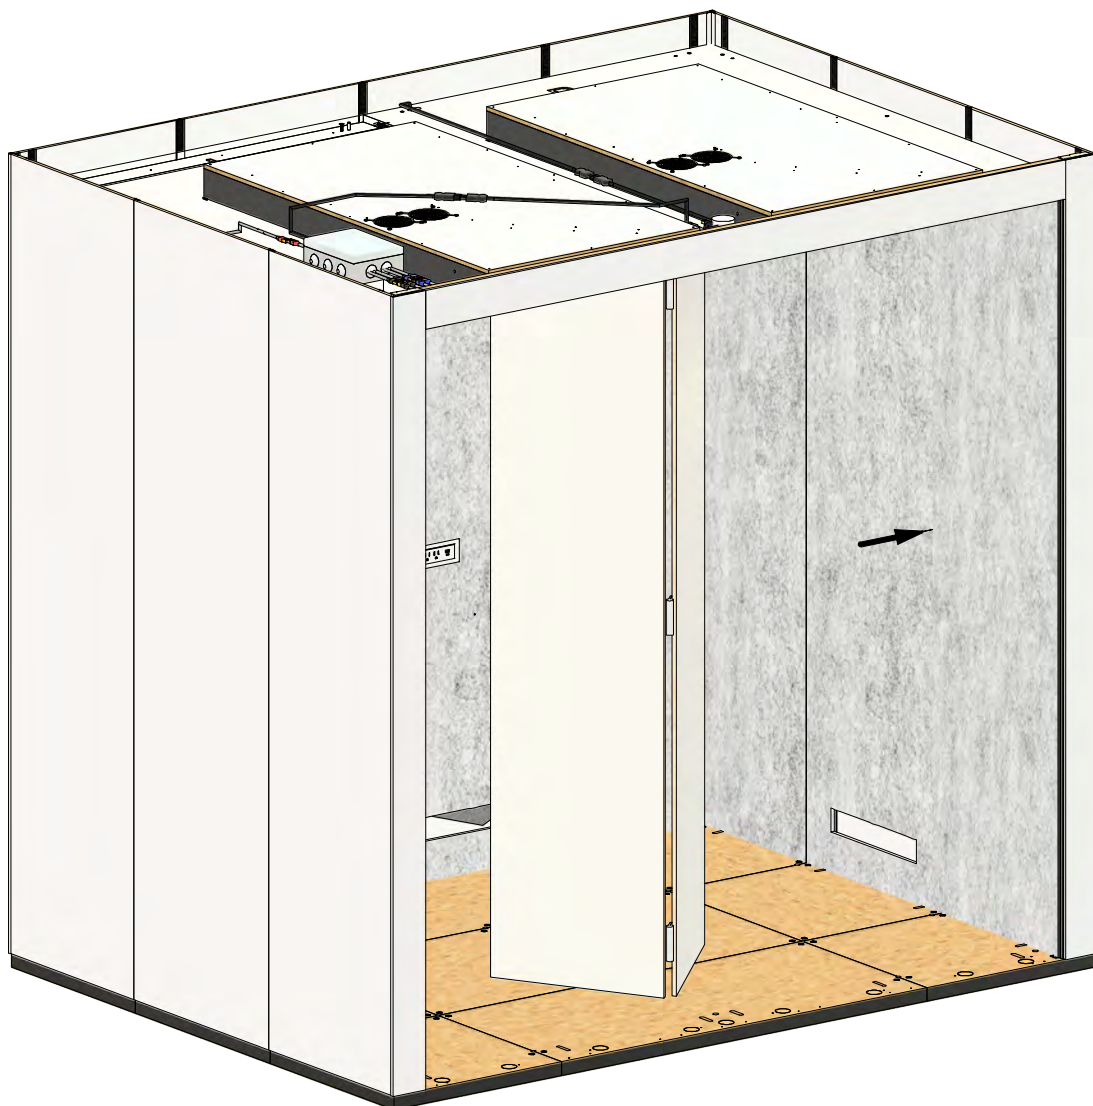


STEP 22.1

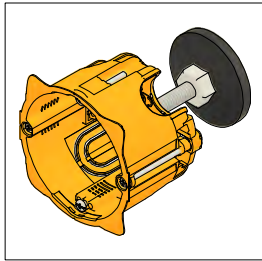

TOOLS NEEDED





H 5




PH 1

1.

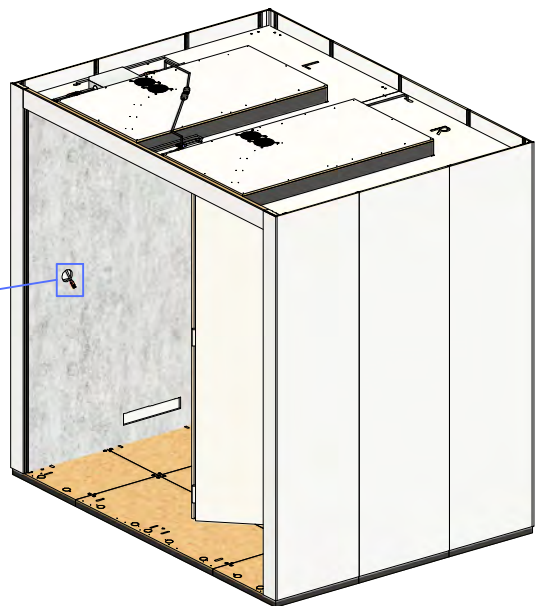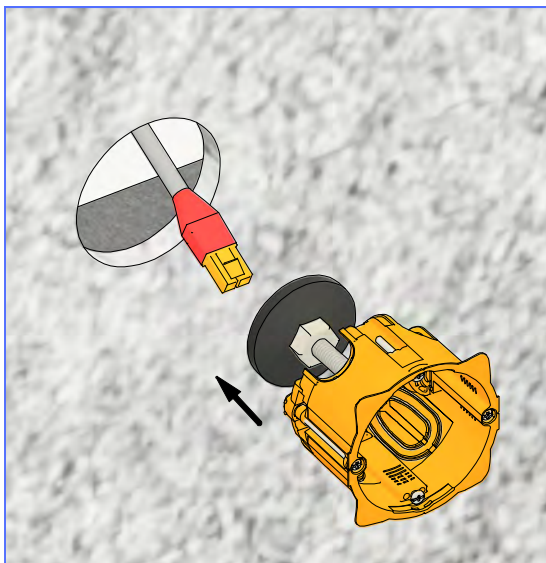


2. TIGHTEN

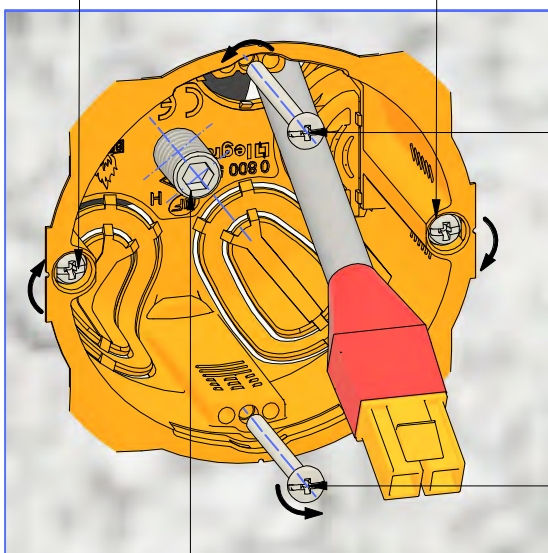


3. REMOVE SCREWS
(BUT KEEP THEM AT HAND)

4. ADJUST THE FOOT TO TOUCH THE EXTERIOR PANEL(H5).


STEP 22.2

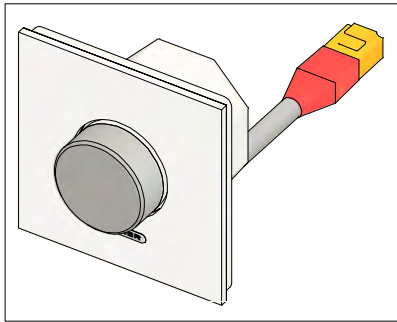




TOOLS NEEDED




PH 1

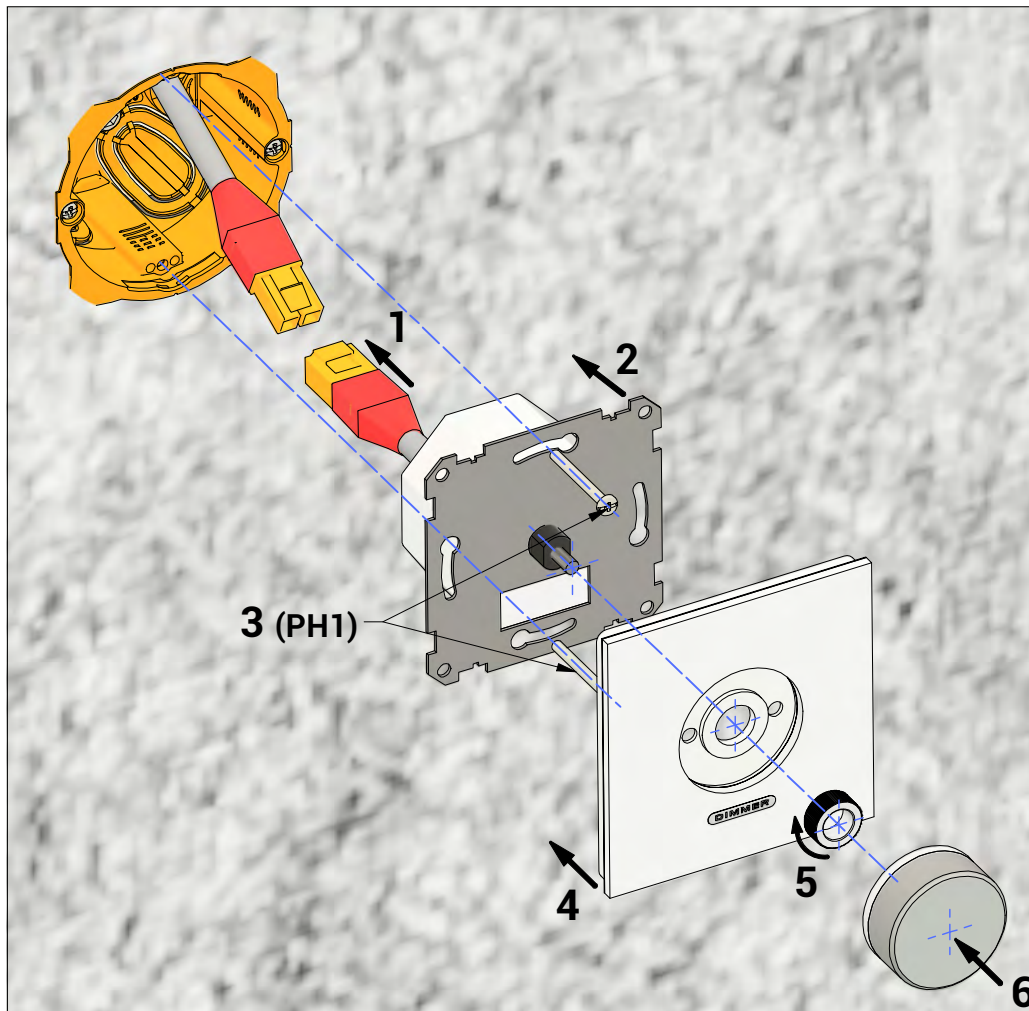

STEP 23

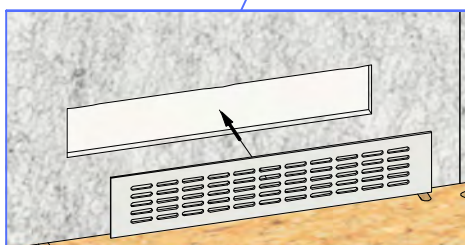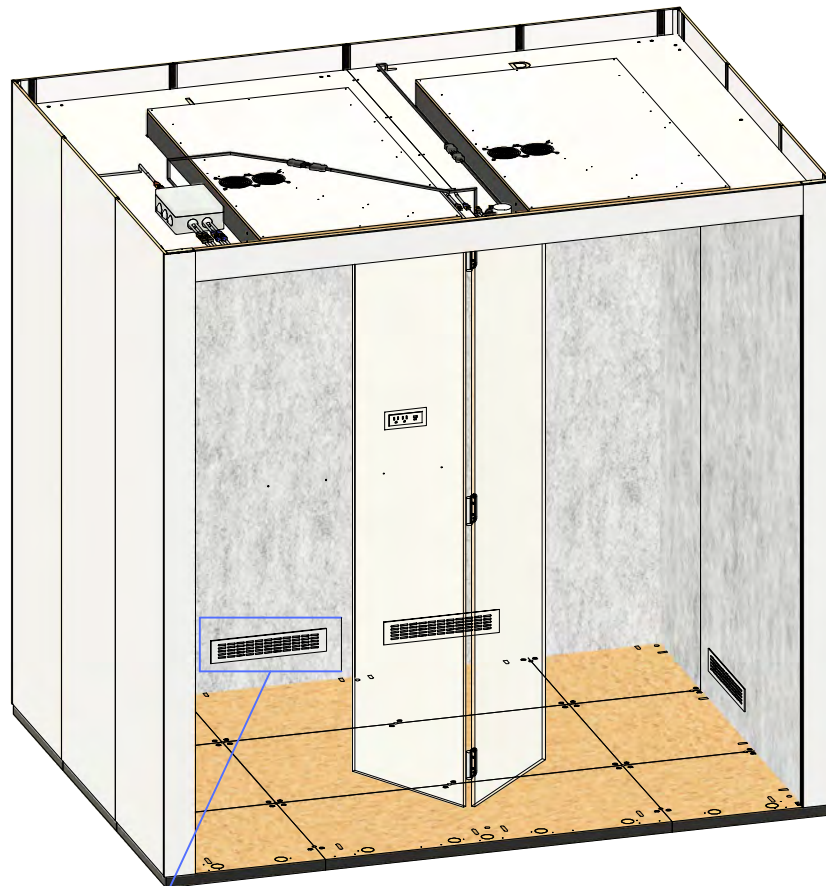
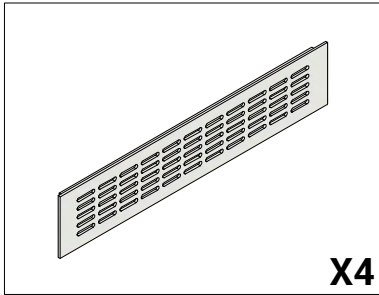


PUSH IN


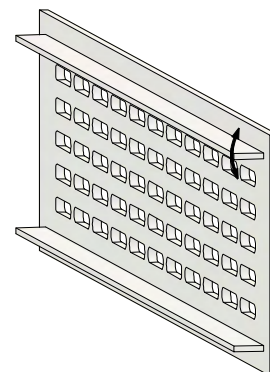


**IF NECESSARY, ADJUST THE
LEGS WITH PLIERS TO FIT**


STEP 24.1

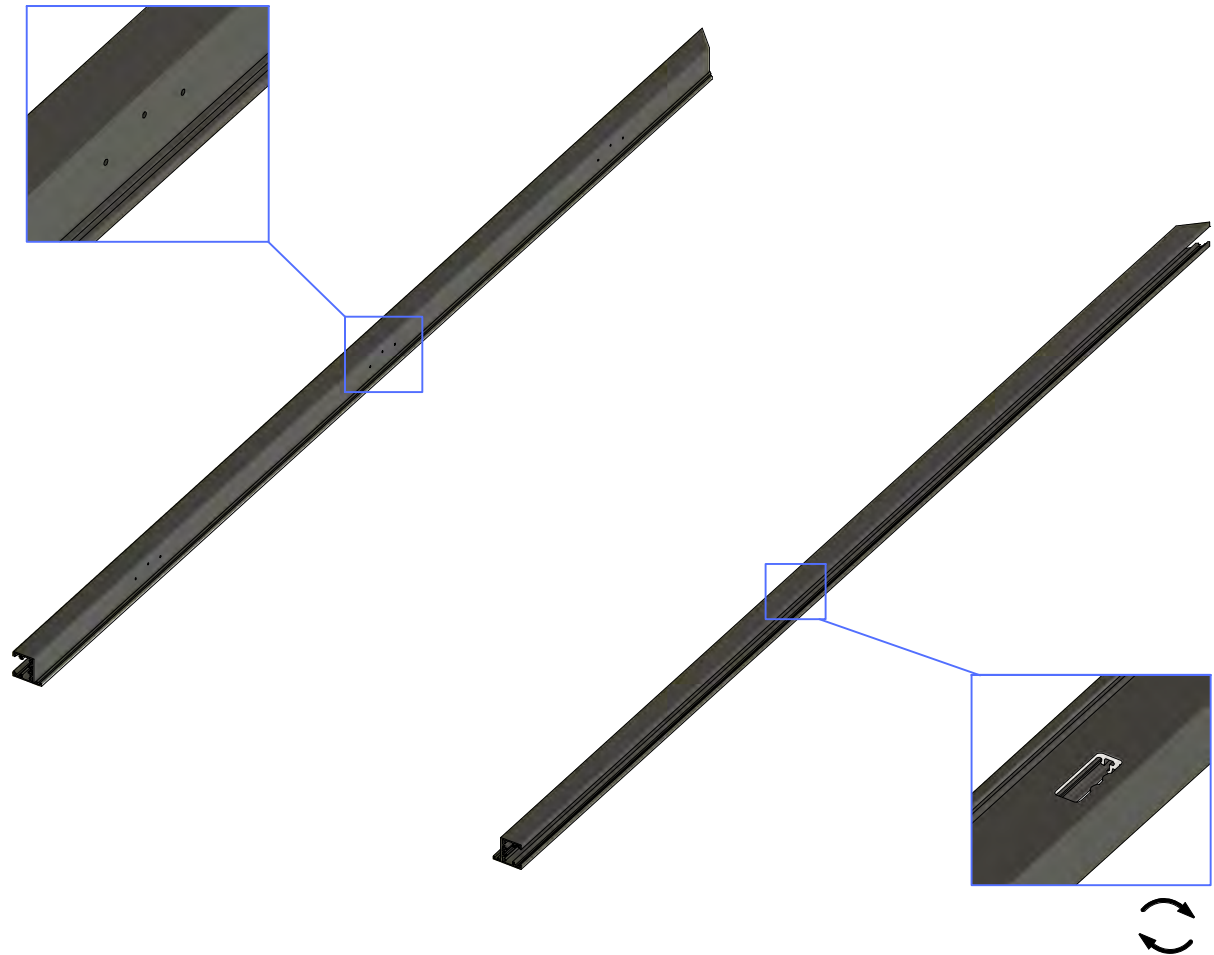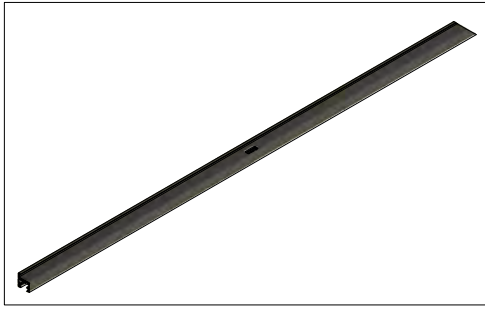



STEP 24.2

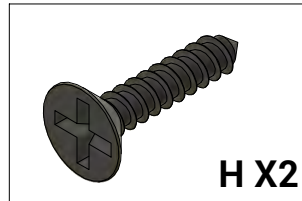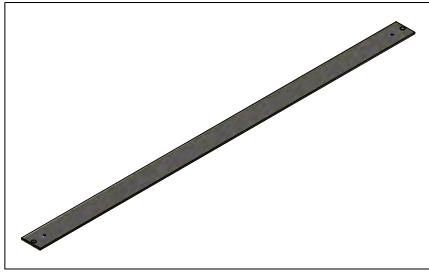



TOOLS NEEDED




PH 2

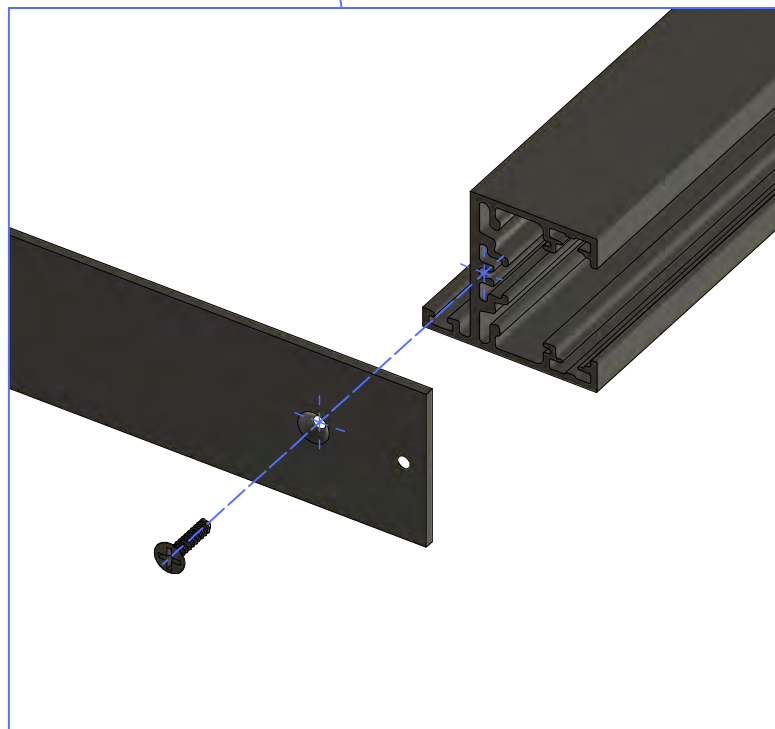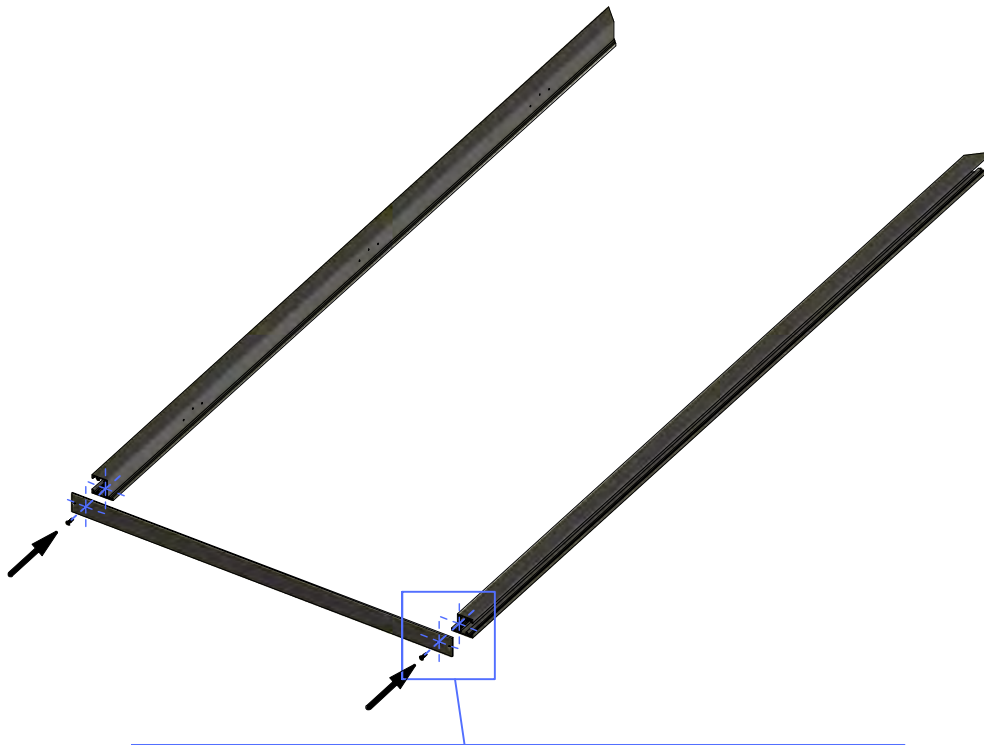


STEP 24.3

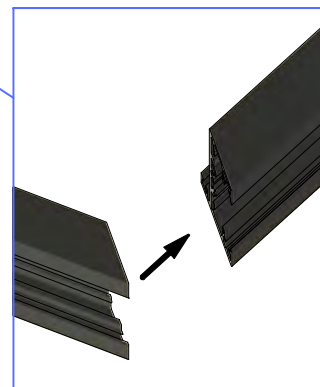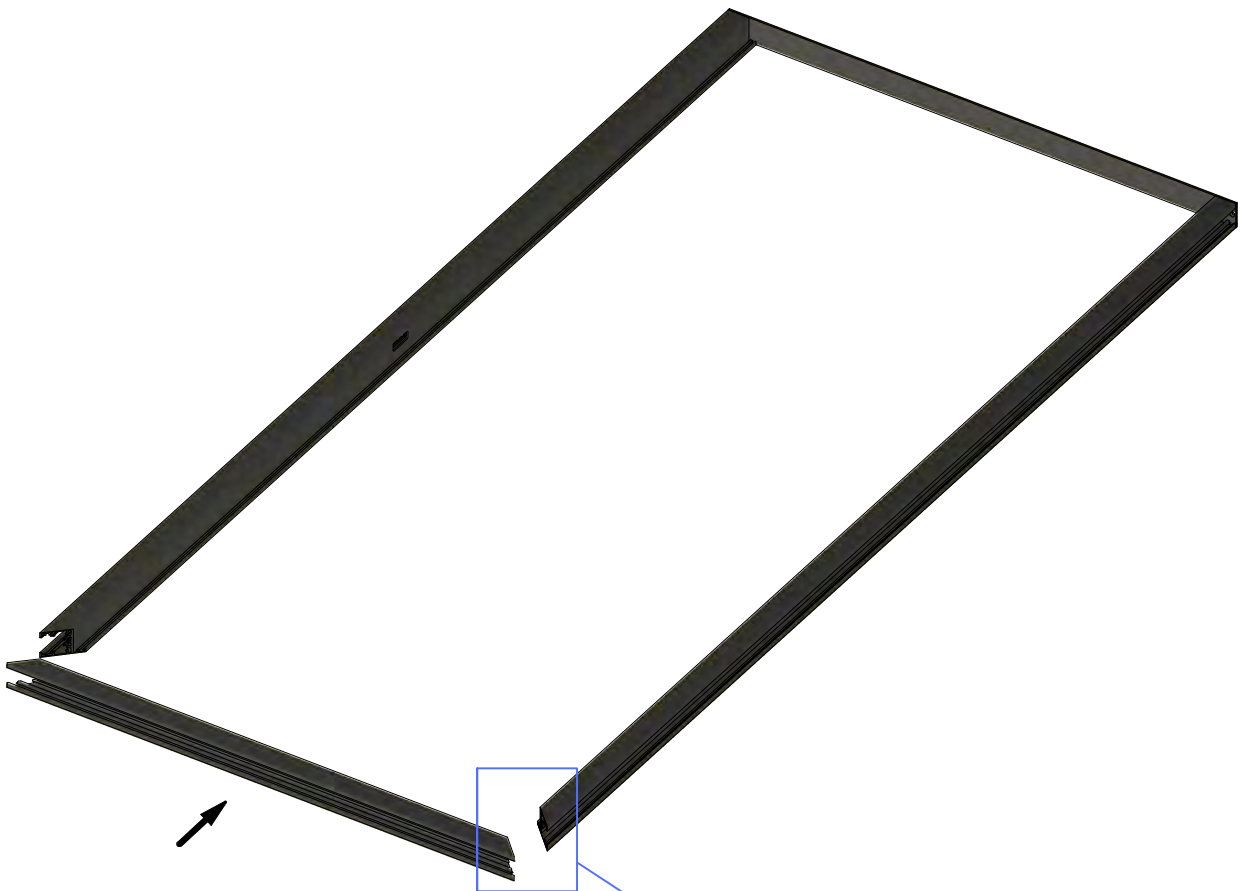






STEP 24.4

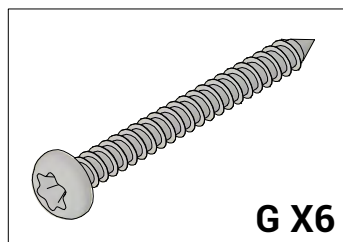


TOOLS NEEDED





TX 15

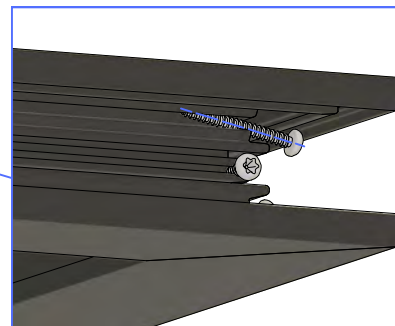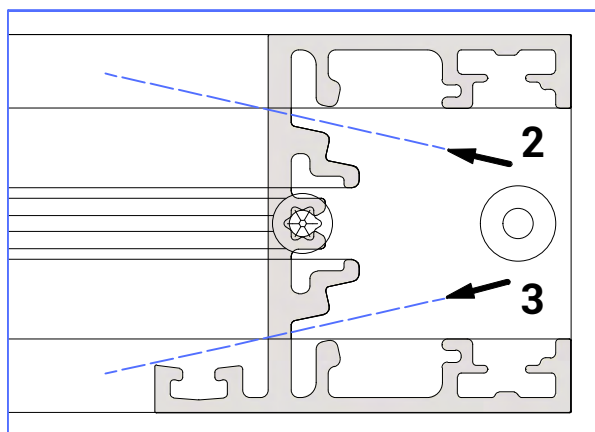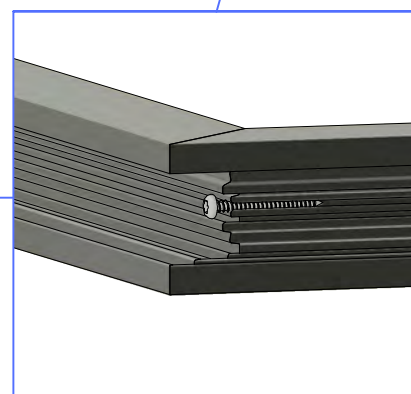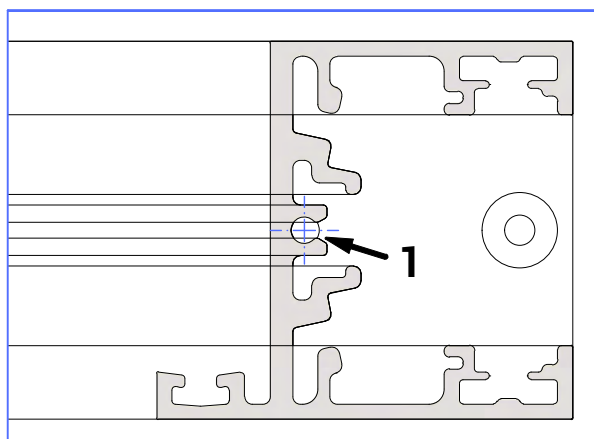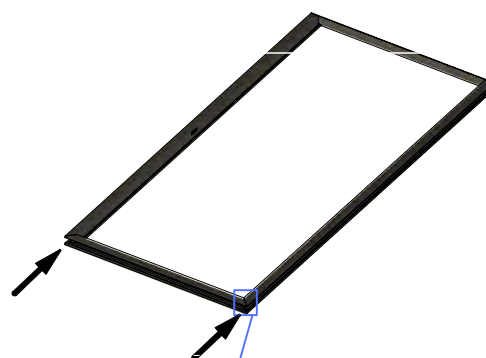


SCAN THE QR-CODE FOR
VIDEO INSTRUCTIONS

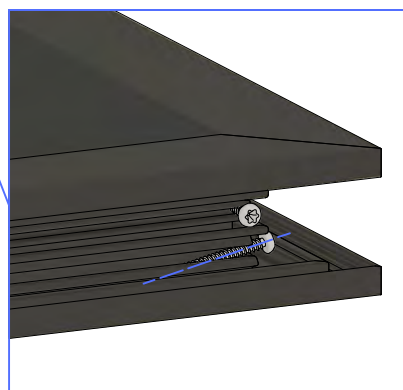


STEP 25.1

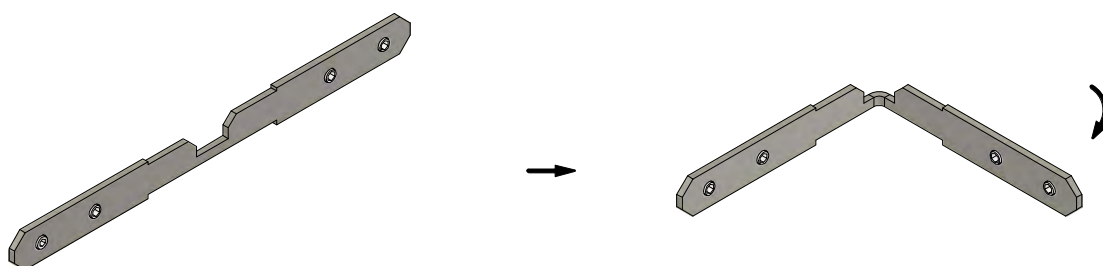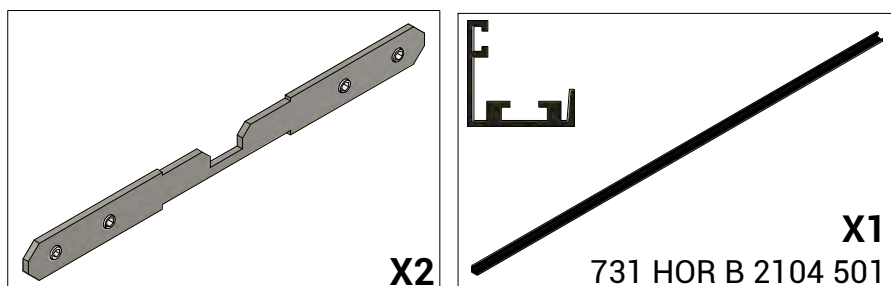



REMOVE 1 SETSCREW

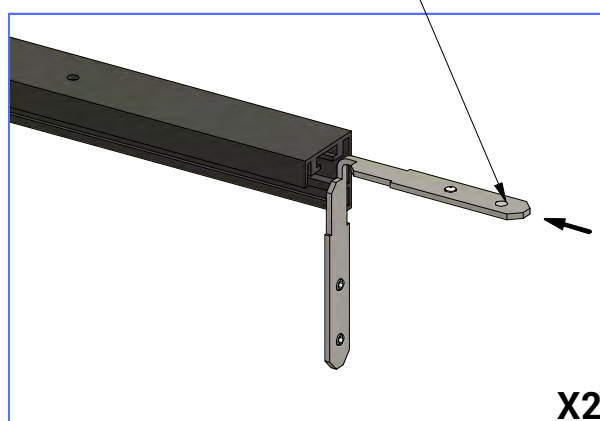


**METRIC
H 3**

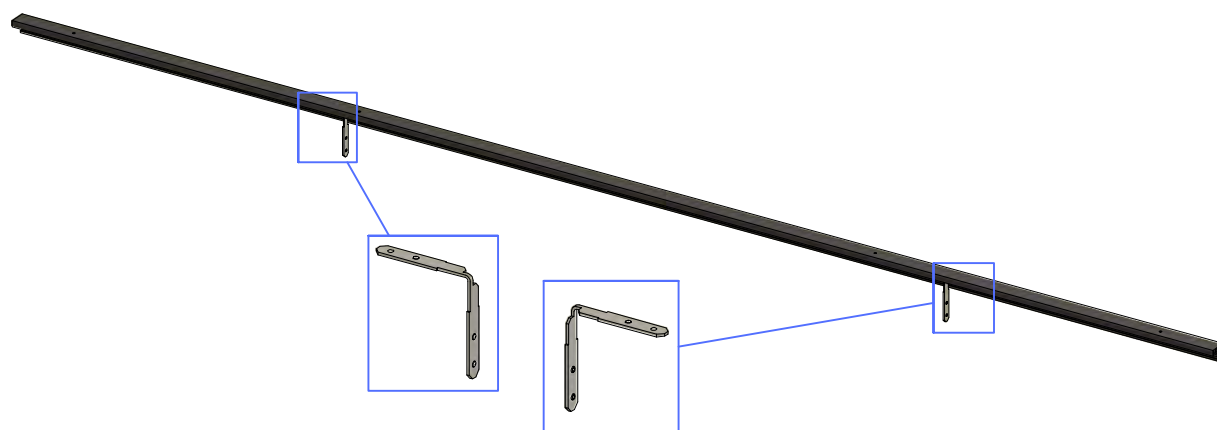


STEP 25.2

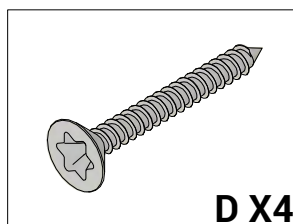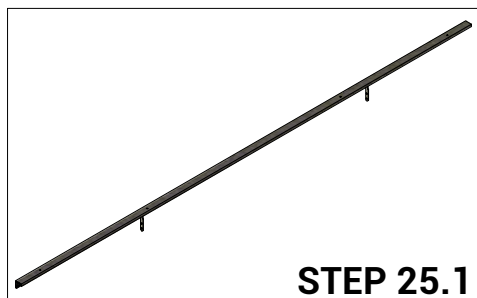


TOOLS NEEDED




TX 20

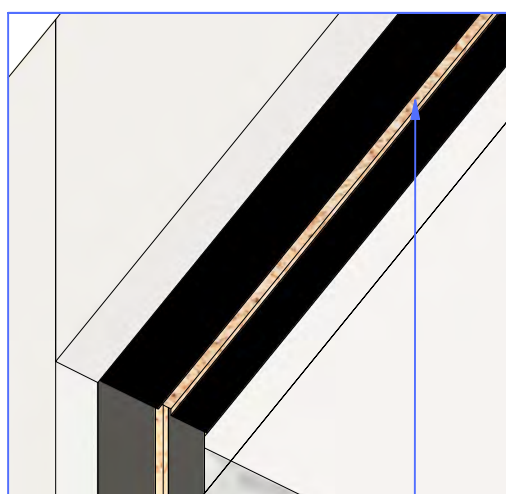



SCREW INTO GROOVE

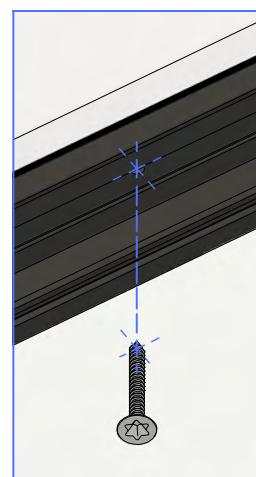


X4

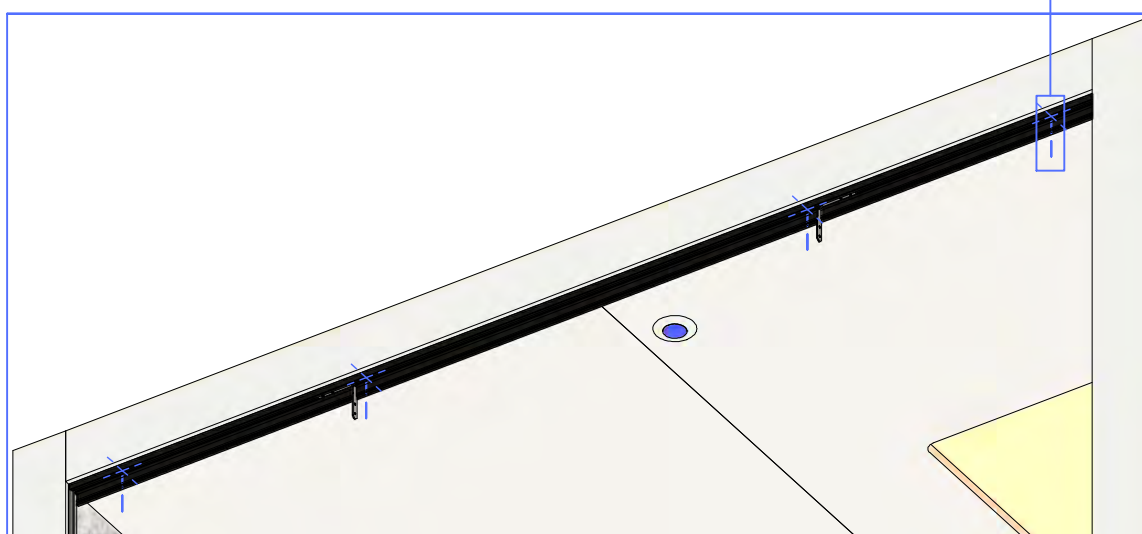


STEP 25.3

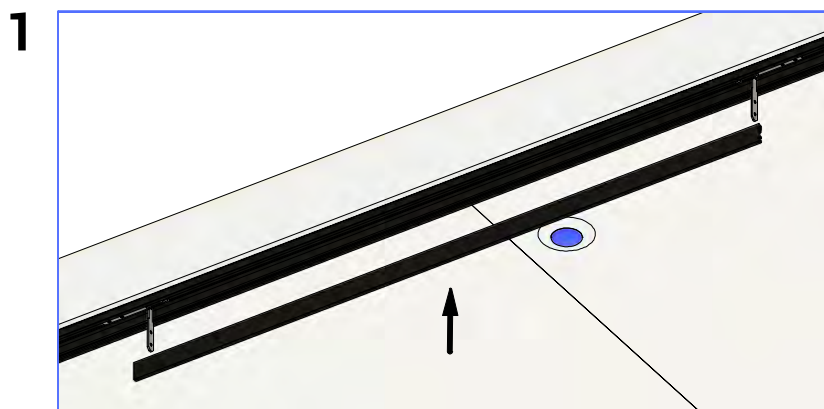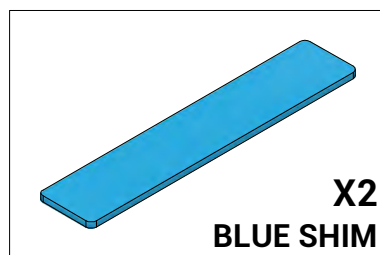



ALIGN CLICK PROFILE ± CENTER

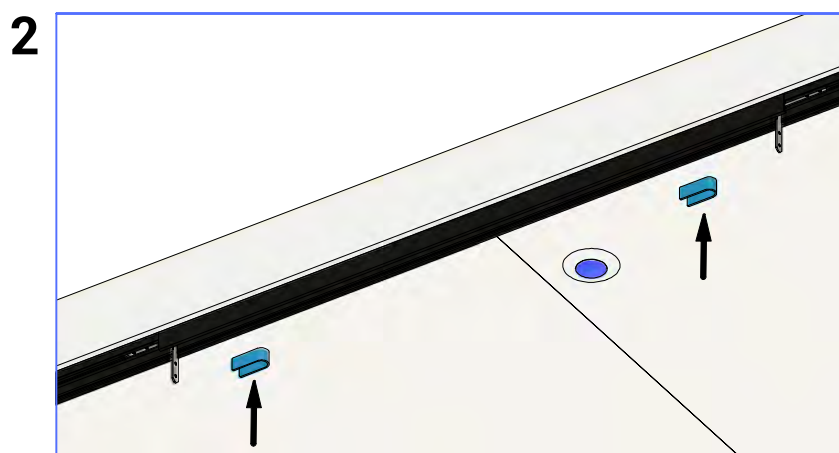

CLAMP THE SHIMS INSIDE THE PROFILES

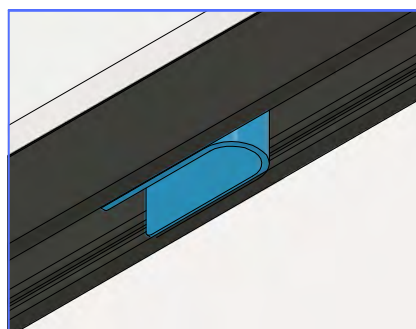


STEP 25.4

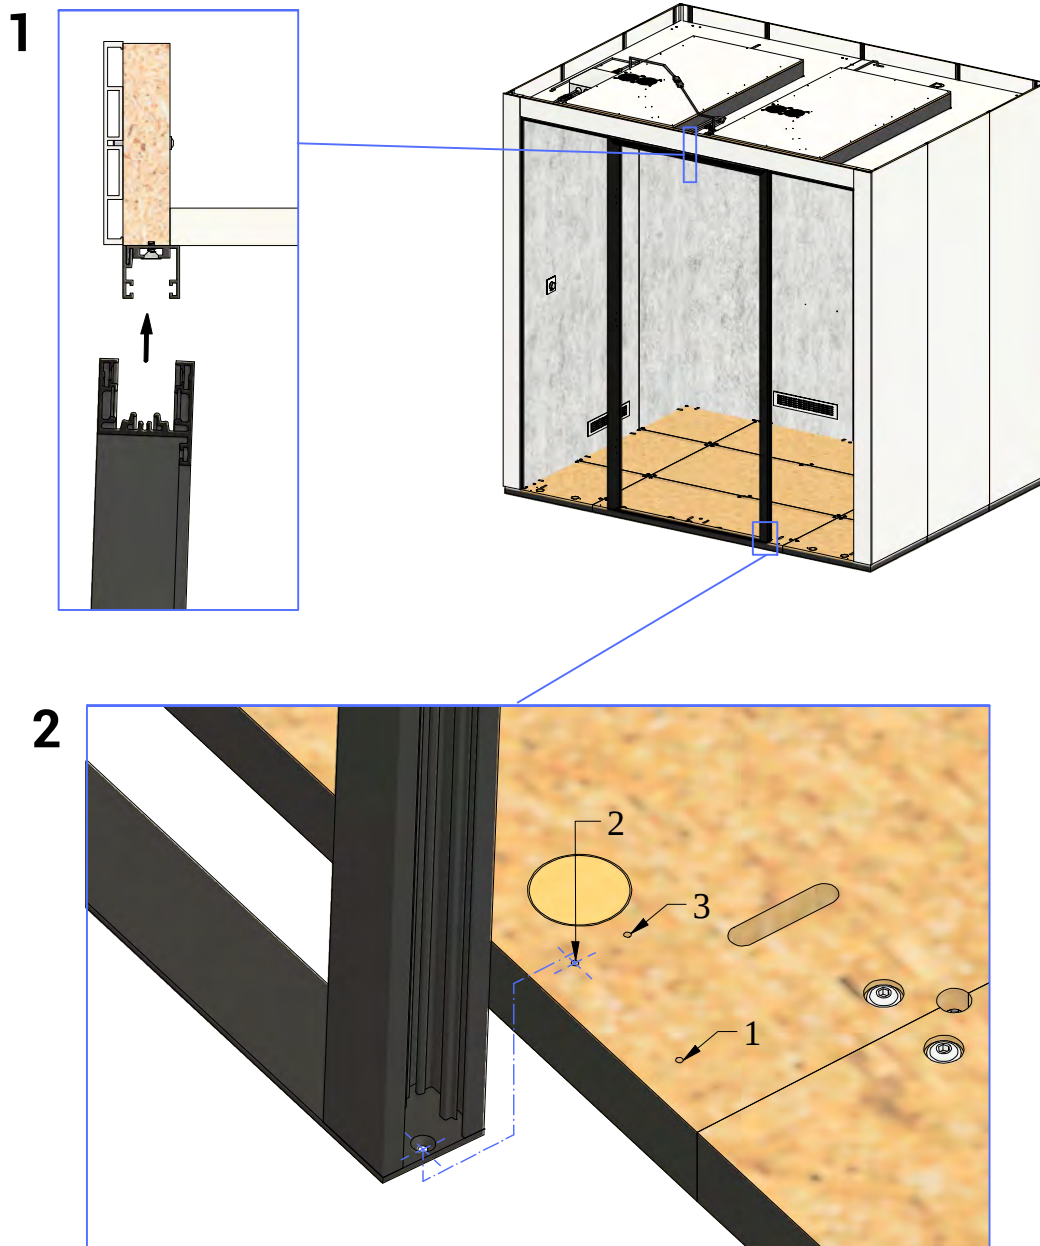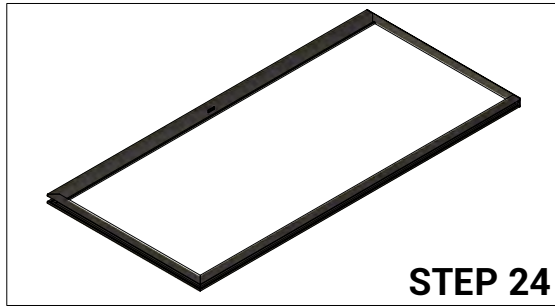


REGISTER DOOR FRAME BASE TO HOLE 2.



STEP 25.5

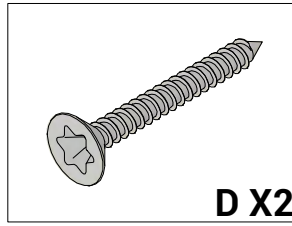


TOOLS NEEDED




TX 20

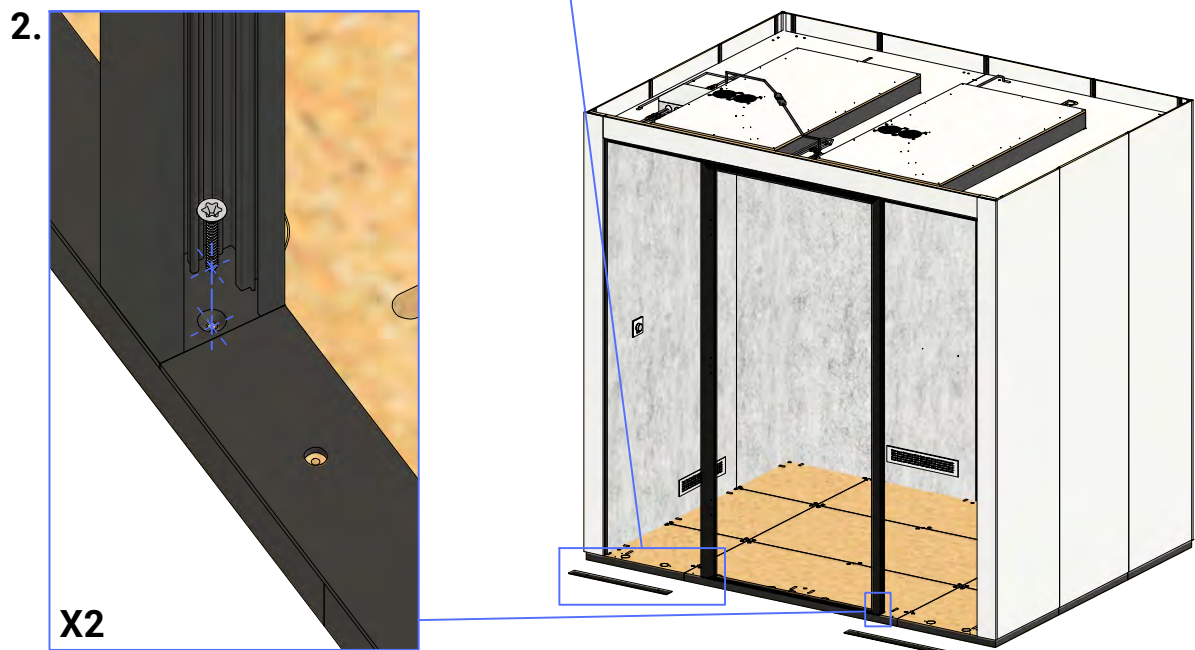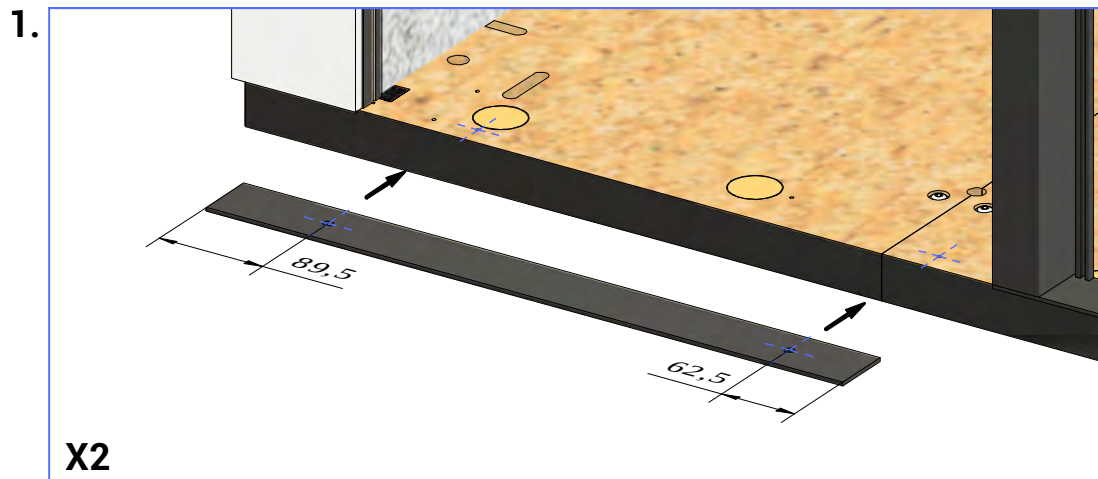




STEP 25.6

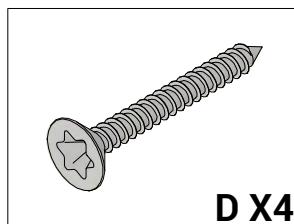



TOOLS NEEDED




TX 20

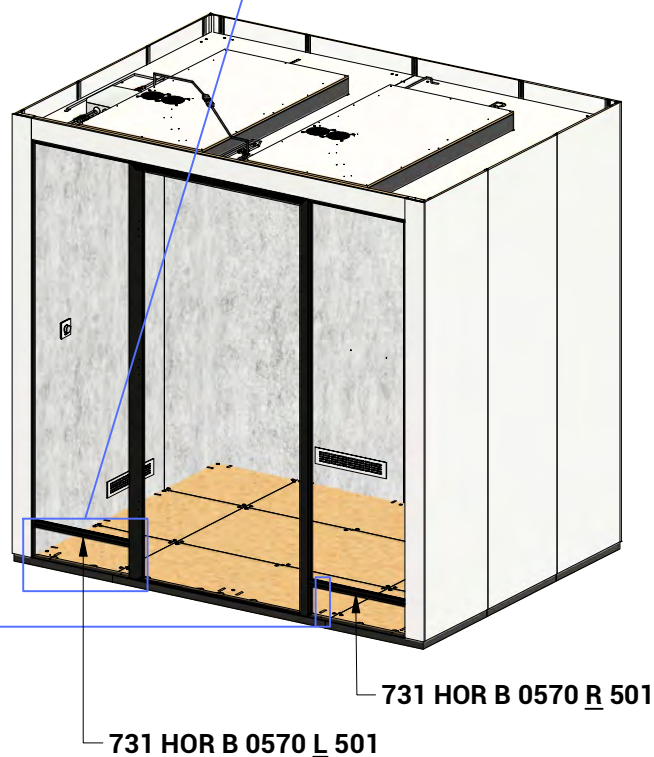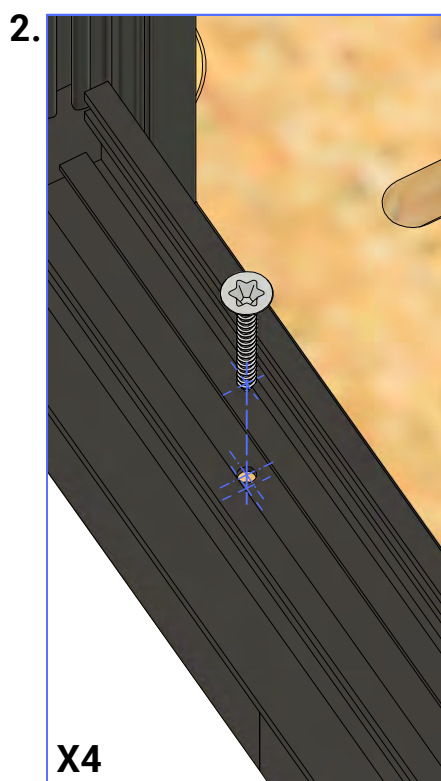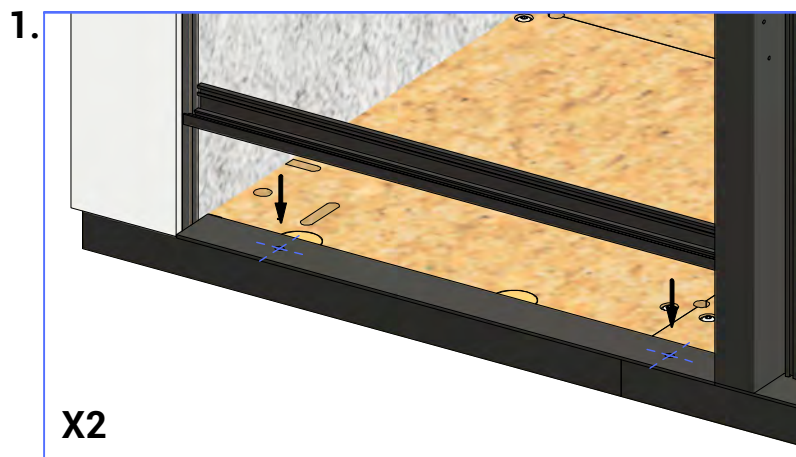


STEP 25.7

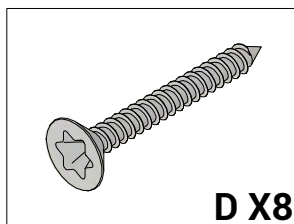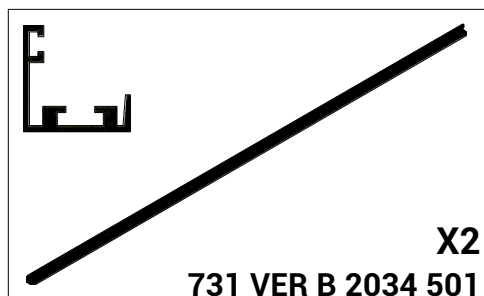



TOOLS NEEDED




TX 20

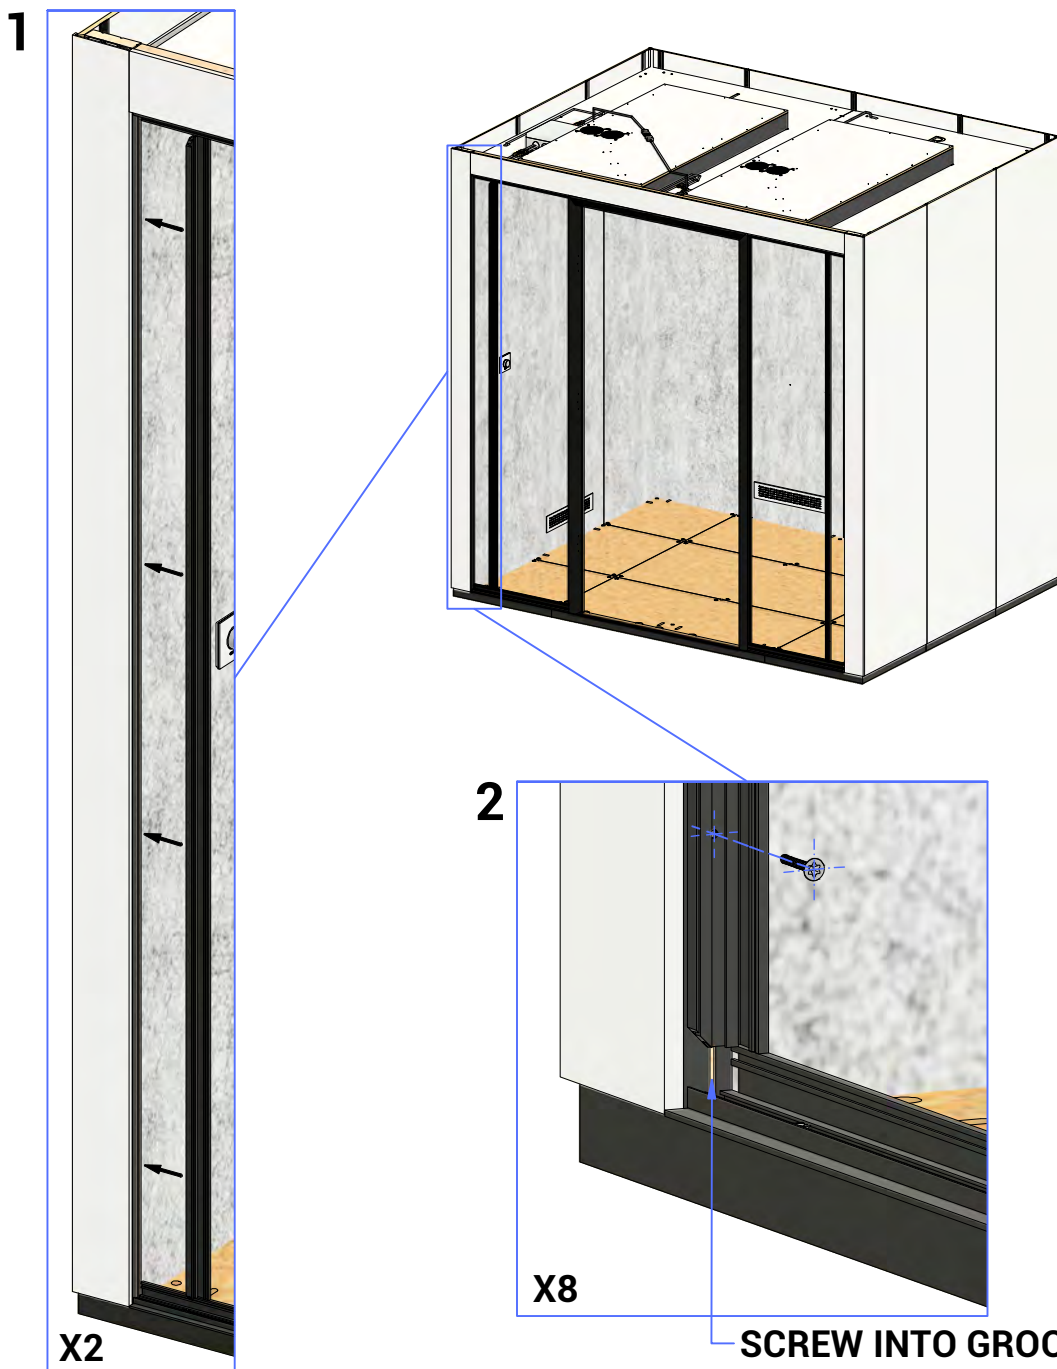


STEP 25.8

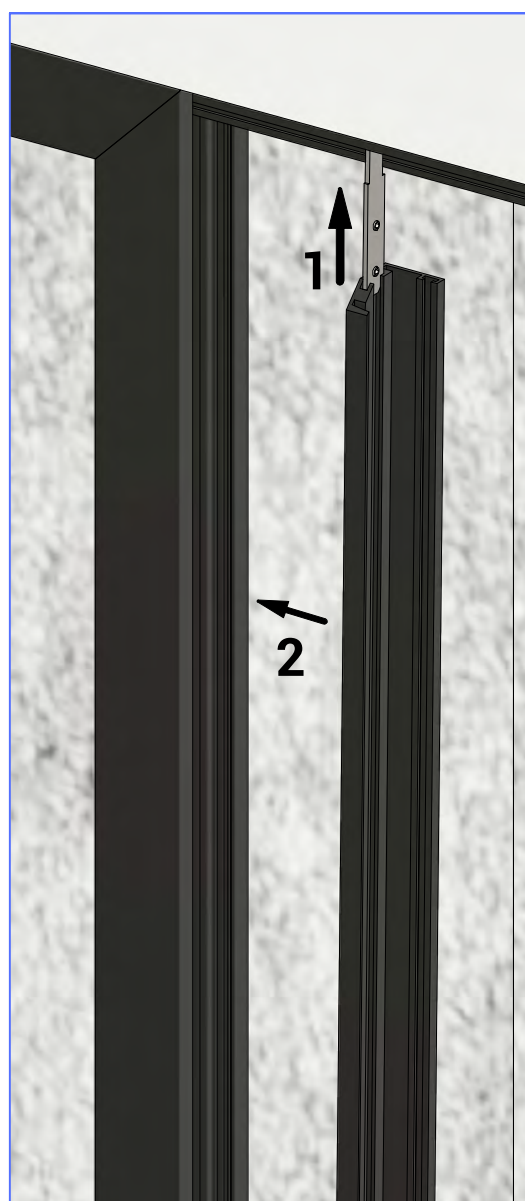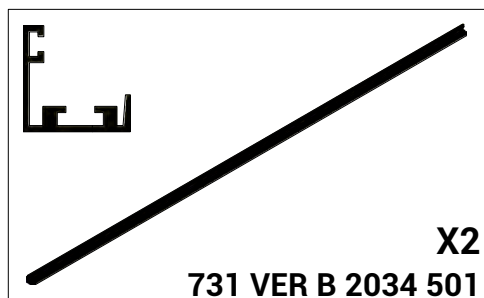


X2

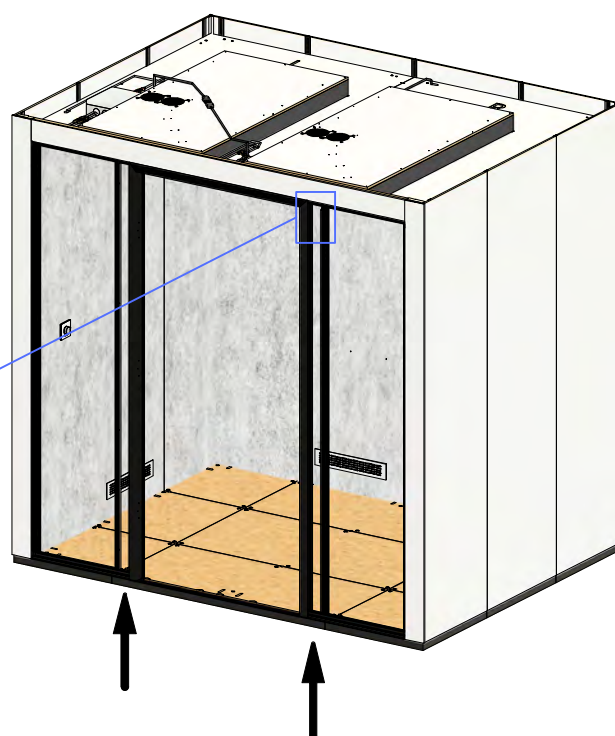

STEP 25.9

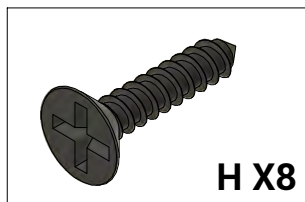

TOOLS NEEDED




PH 2





**METRIC
H 2**

1.

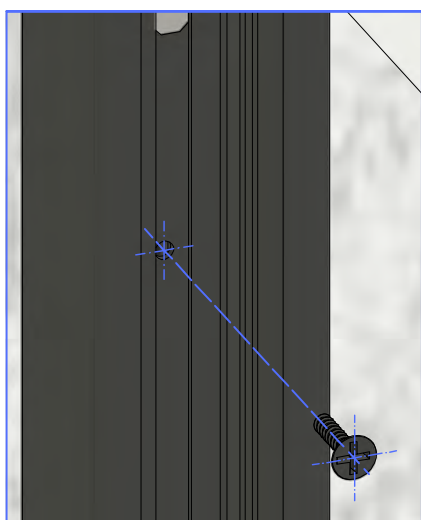


X8

**FIX THE PROFILES INSIDE
THE DOORFRAME**

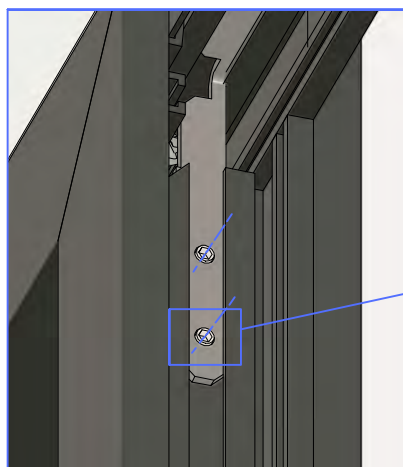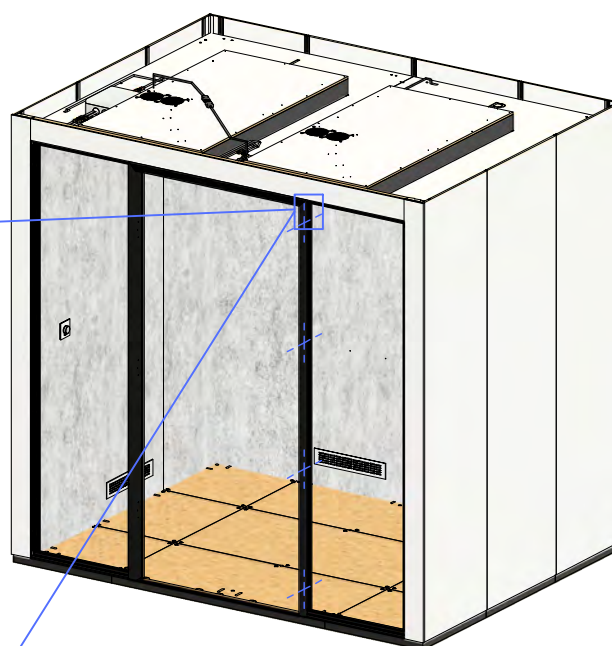

2.

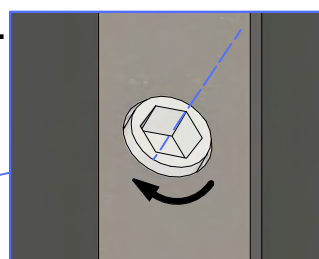


X4





**TIGHTEN THE
VERTICAL SET
SCREWS**

STEP 25.10


TOOLS NEEDED





**METRIC
H 3**

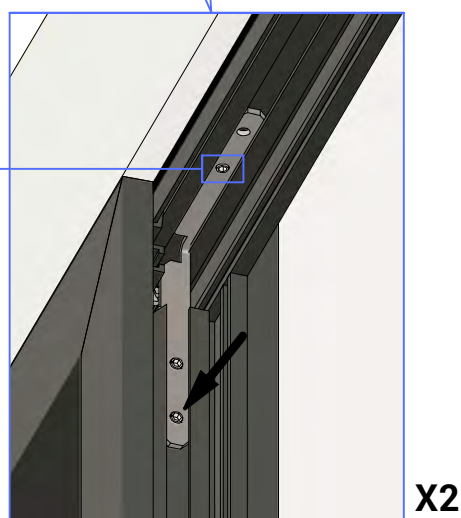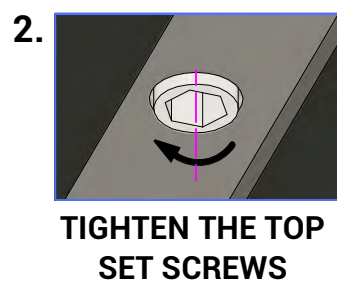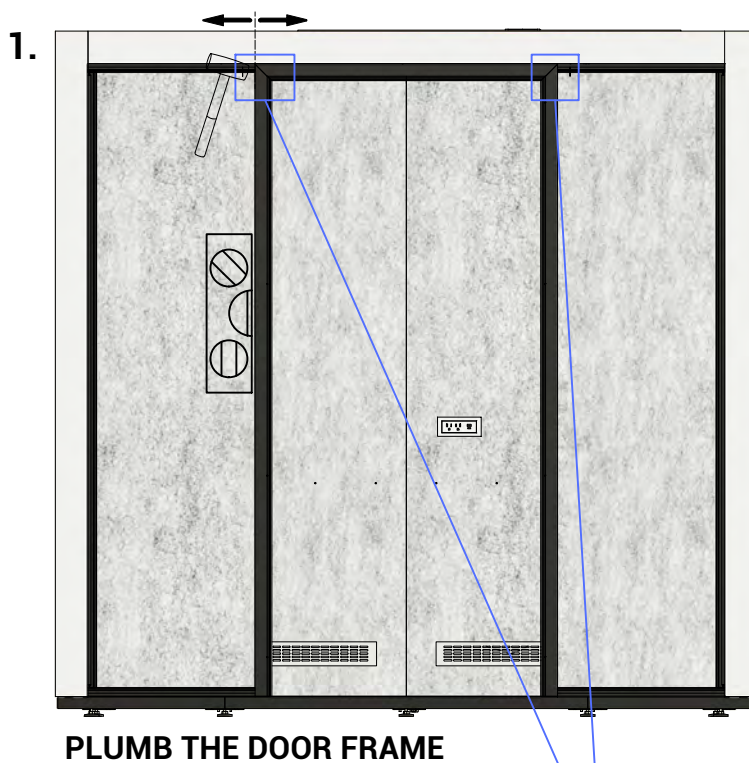

STEP 25.11

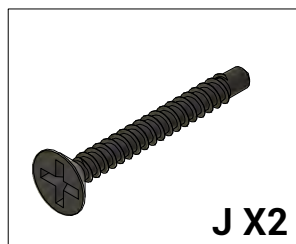


TOOLS NEEDED

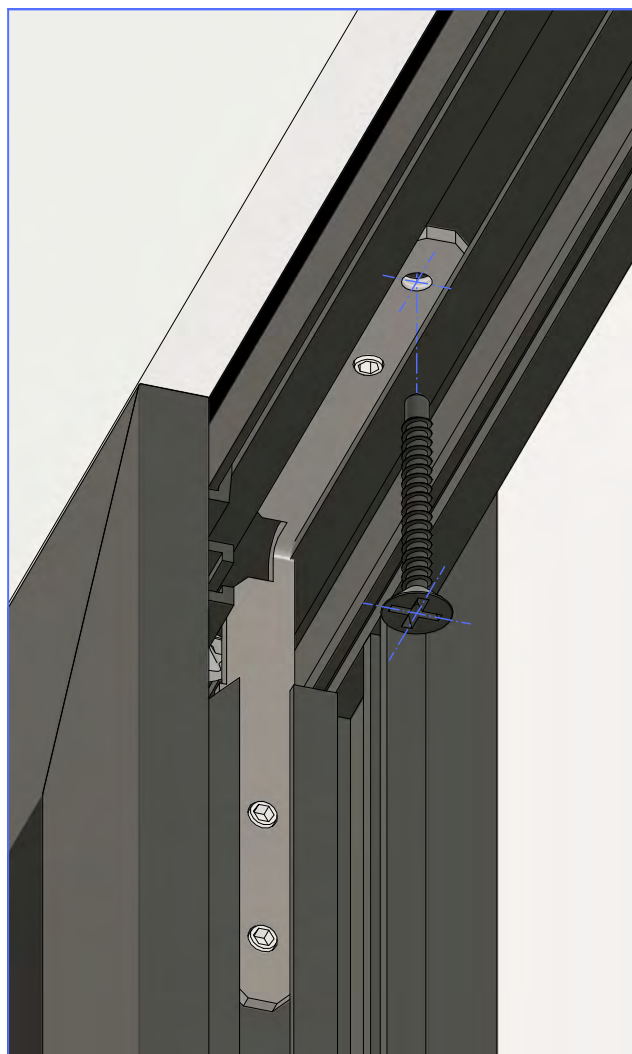



**DRILL SCREW THROUGH
BRACKET TO FIX DOORFRAME**


X2

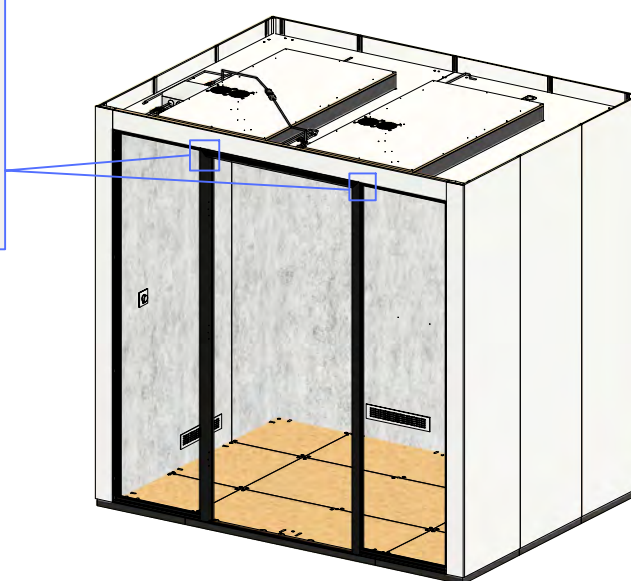


STEP 26.1

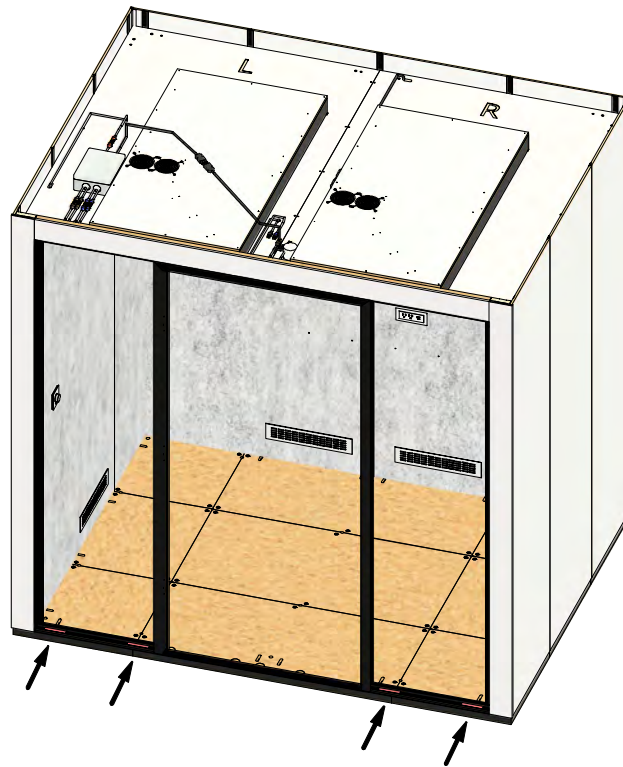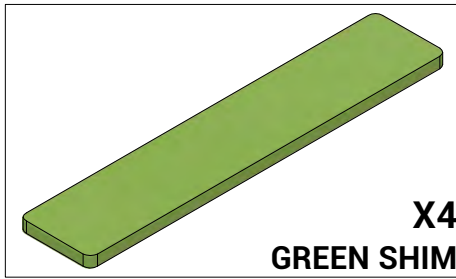




X2

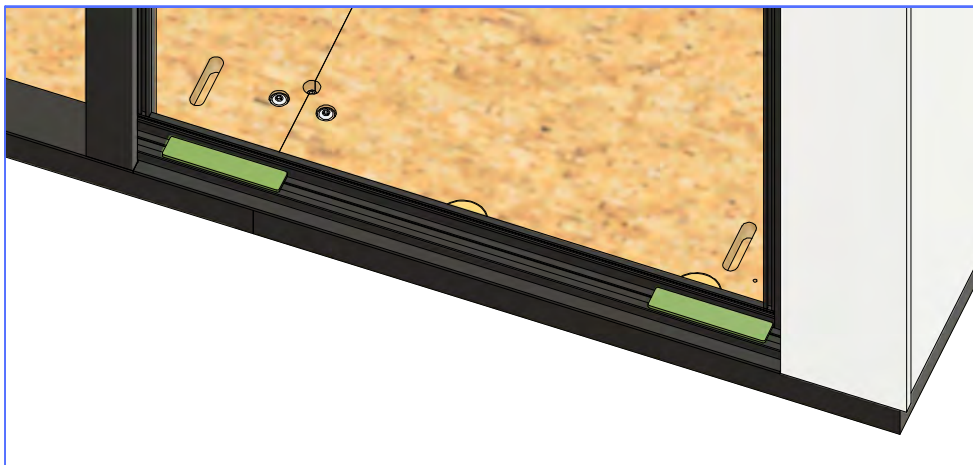

STEP 26.2

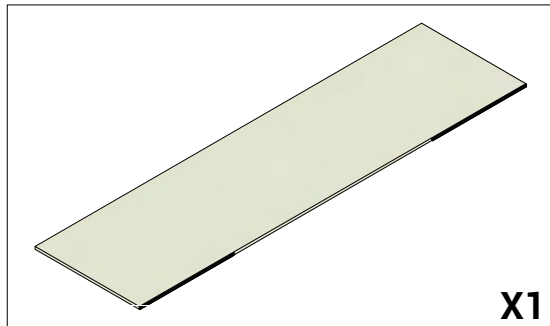

TOOLS NEEDED

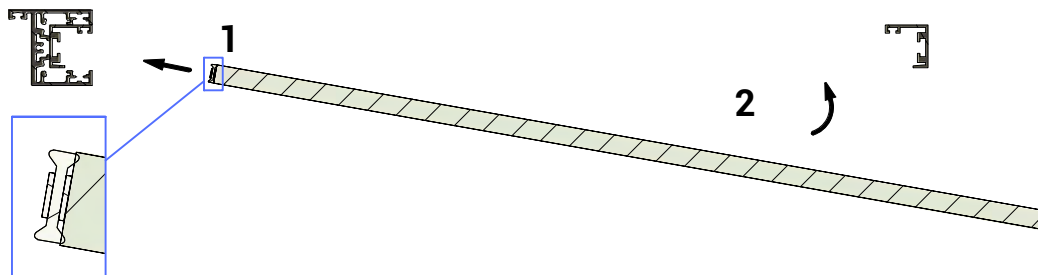
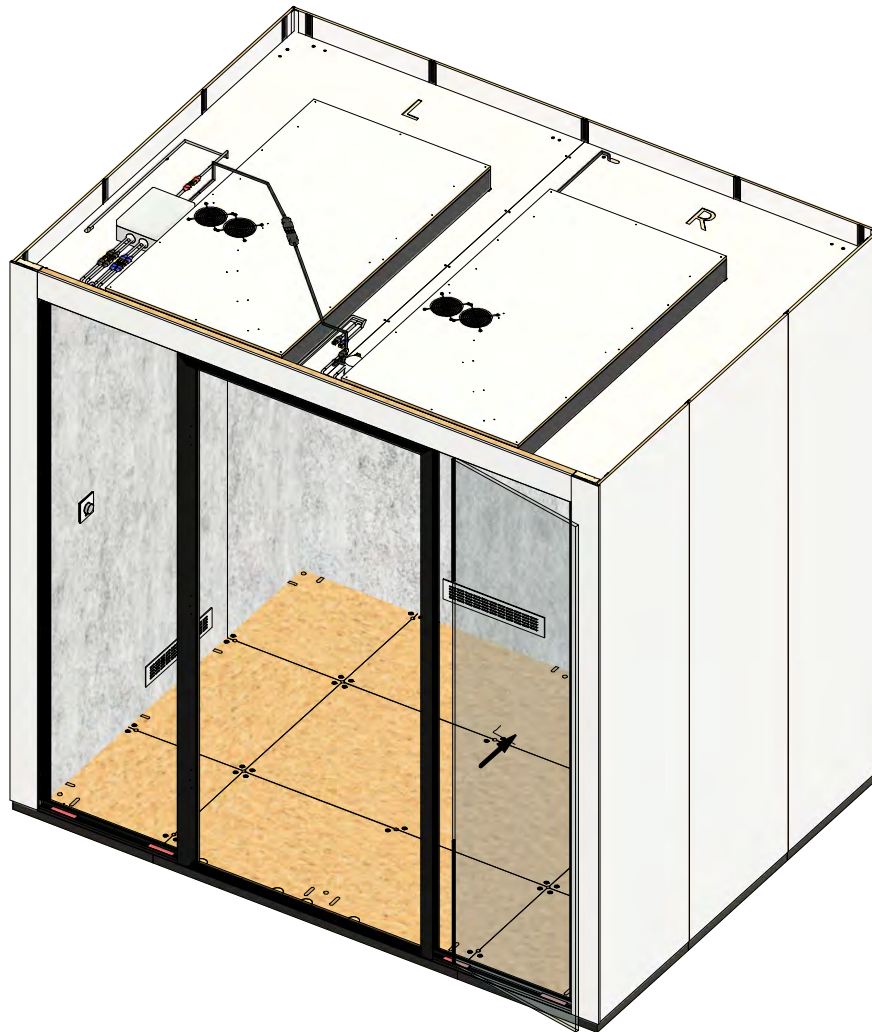
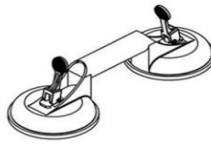


AIM THE PLASTIC FINISHING INSIDE THE DOORFRAME

STEP 26.3



TOOLS NEEDED


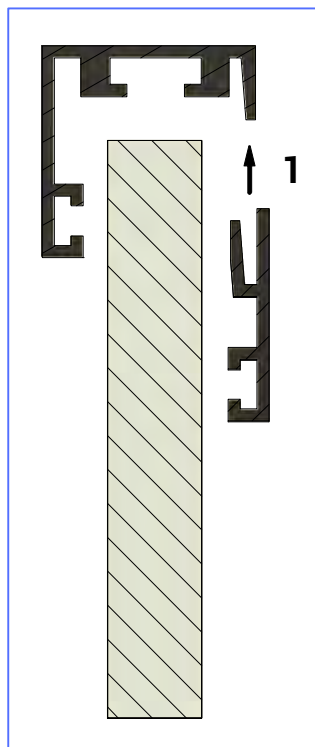
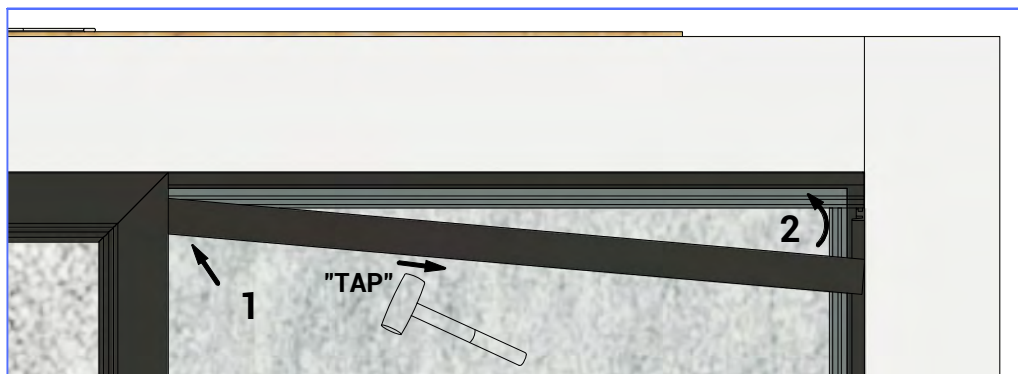



STARTING AT THE DOOR FRAME, ENGAGE THE CLICK PROFILE WITH THE BASE. SNAP IT IN FULLY WITH A Mallet, WORKING YOUR WAY ALONG THE LENGTH OF THE PROFILE.

STEP 26.4




TOOLS NEEDED

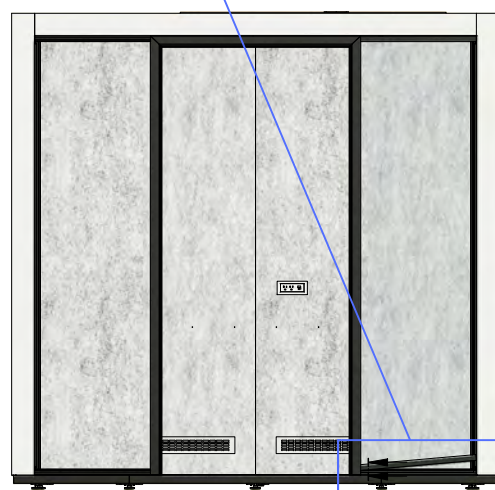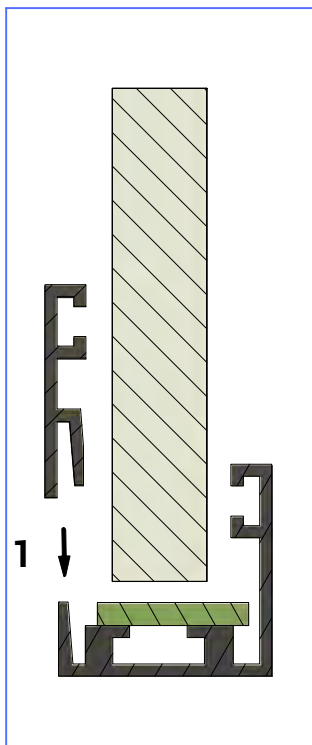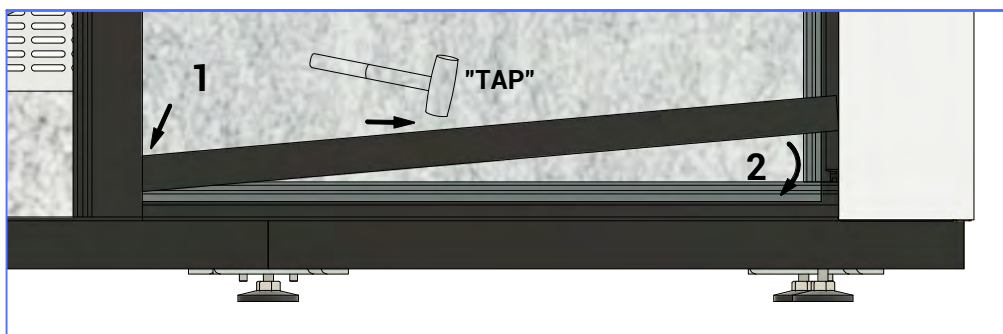



STARTING AT THE DOOR FRAME, ENGAGE THE CLICK PROFILE WITH THE BASE. SNAP IT IN FULLY WITH A Mallet, WORKING YOUR WAY ALONG THE LENGTH OF THE PROFILE.

STEP 26.5

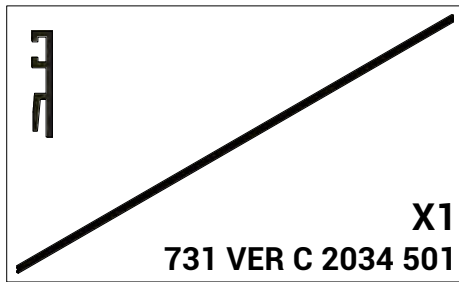


TOOLS NEEDED

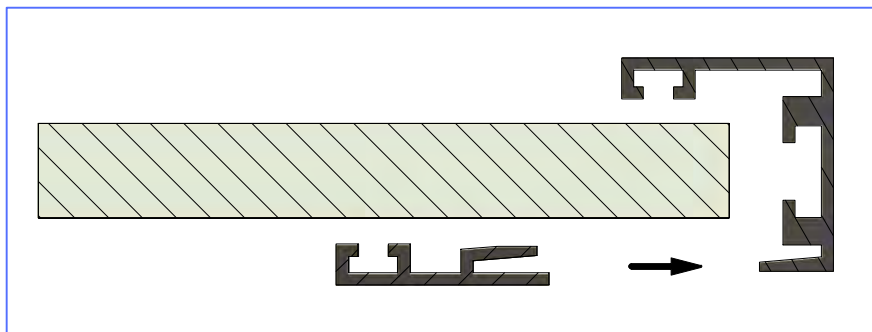


STARTING BELOW, ENGAGE THE CLICK PROFILE WITH THE BASE. SNAP IT IN FULLY WITH A Mallet, WORKING YOUR WAY ALONG THE LENGTH OF THE PROFILE.


STEP 26.6

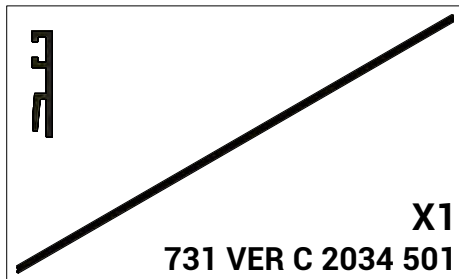



TOOLS NEEDED





INSERT THE CLICK PROFILE OVER THE LEG IN THE BOTTOM AT AN ANGLE & TWIST THE CLICK SLIGHTLY OUTWARD TO FIND THE BASE CORRECTLY.

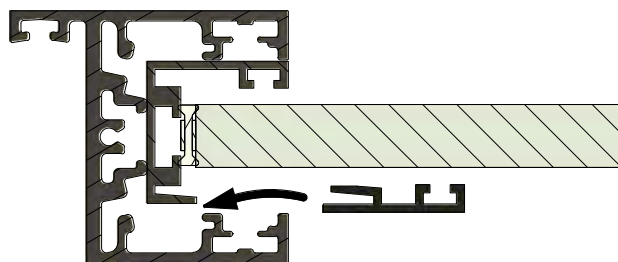


WHEN THE CLICK PROFILE IS PERFECTLY FLUSH WITH THE DOORFRAME THE PIECE IS CORRECTLY MOUNTED.

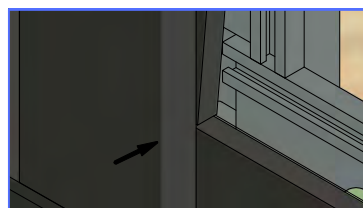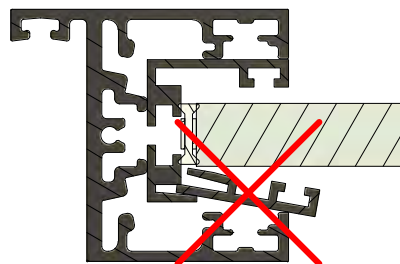

STEP 26.7

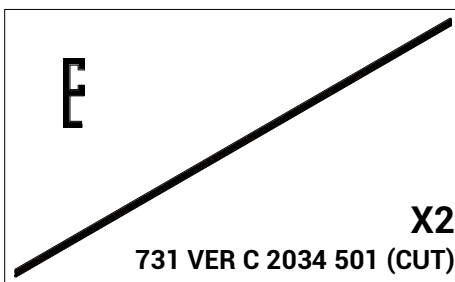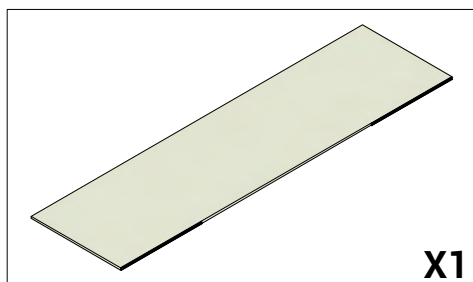

TOOLS NEEDED

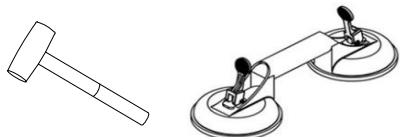

REPEAT STEPS 26.2 TO 26.6 ON THE OTHER SIDE



STEP 27.1




TOOLS NEEDED



REMOVE
STOCK BUSHINGS





INSERT
PROVIDED BUSHINGS




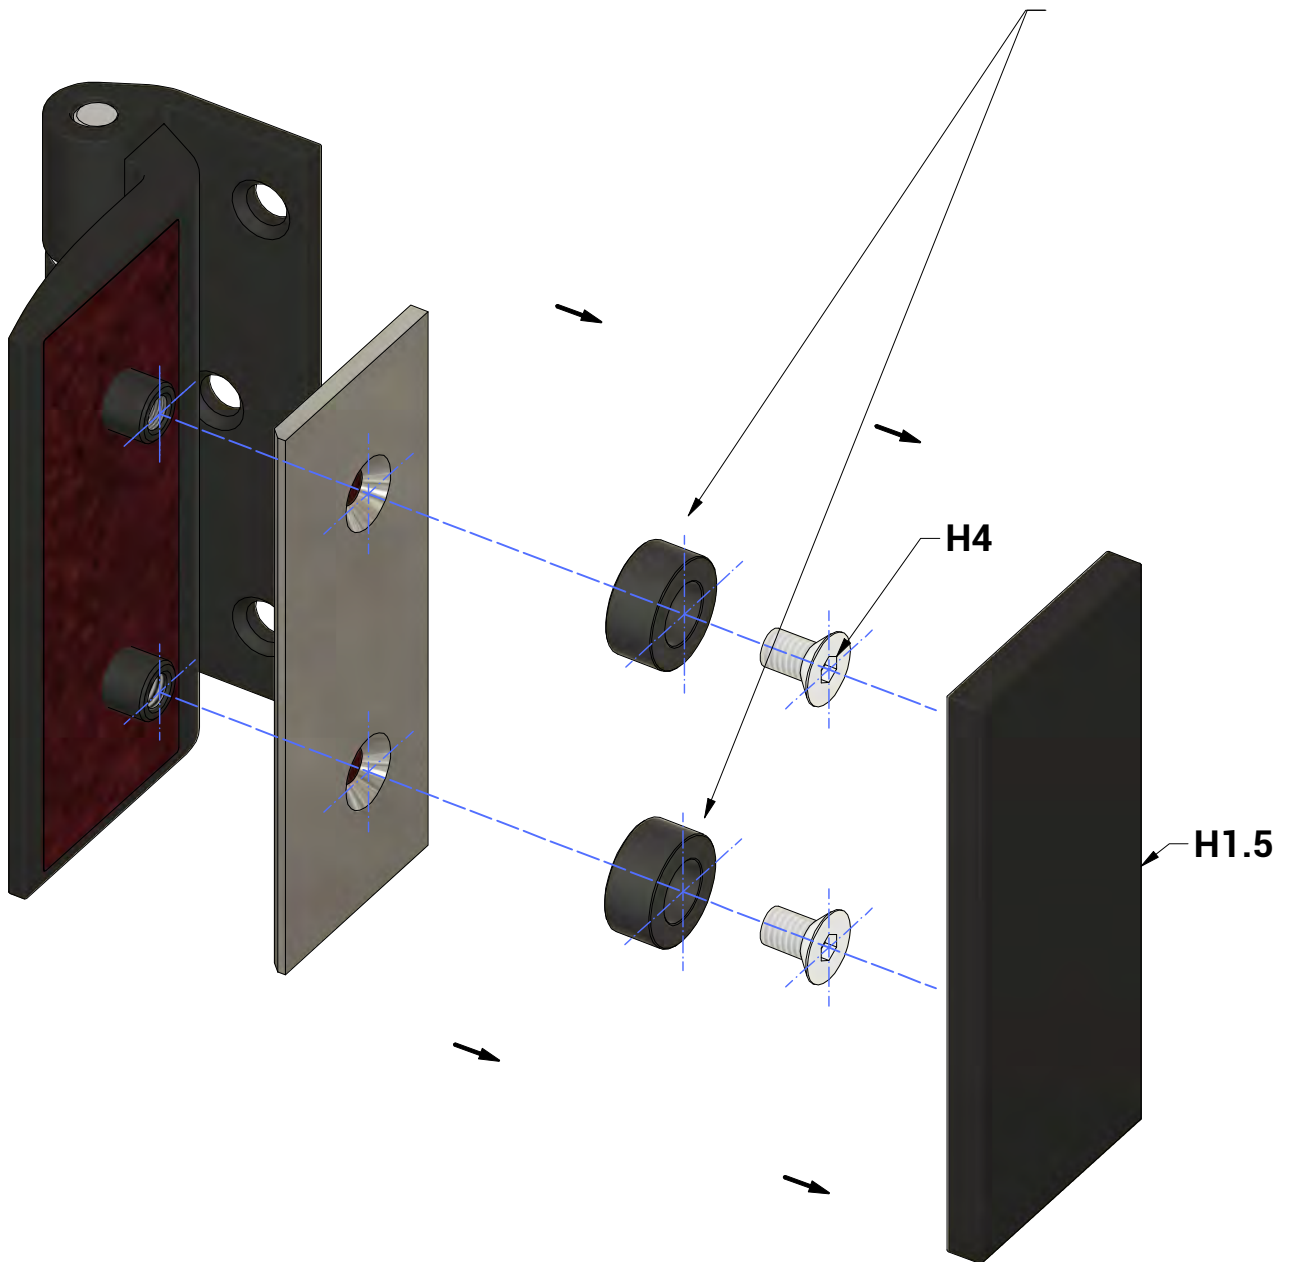


DISASSEMBLE X3

STEP 27.2

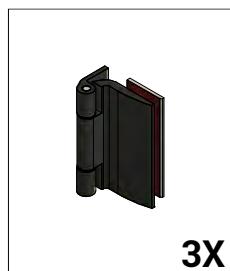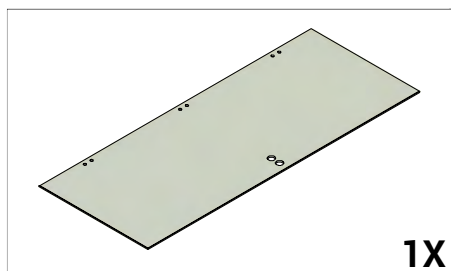


TOOLS NEEDED

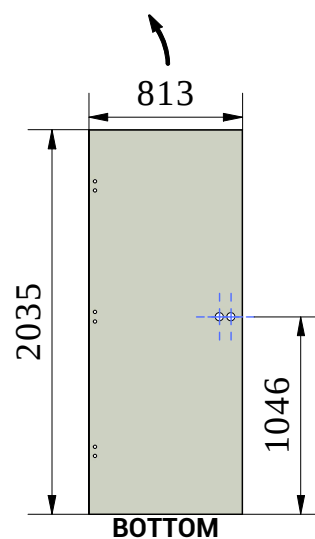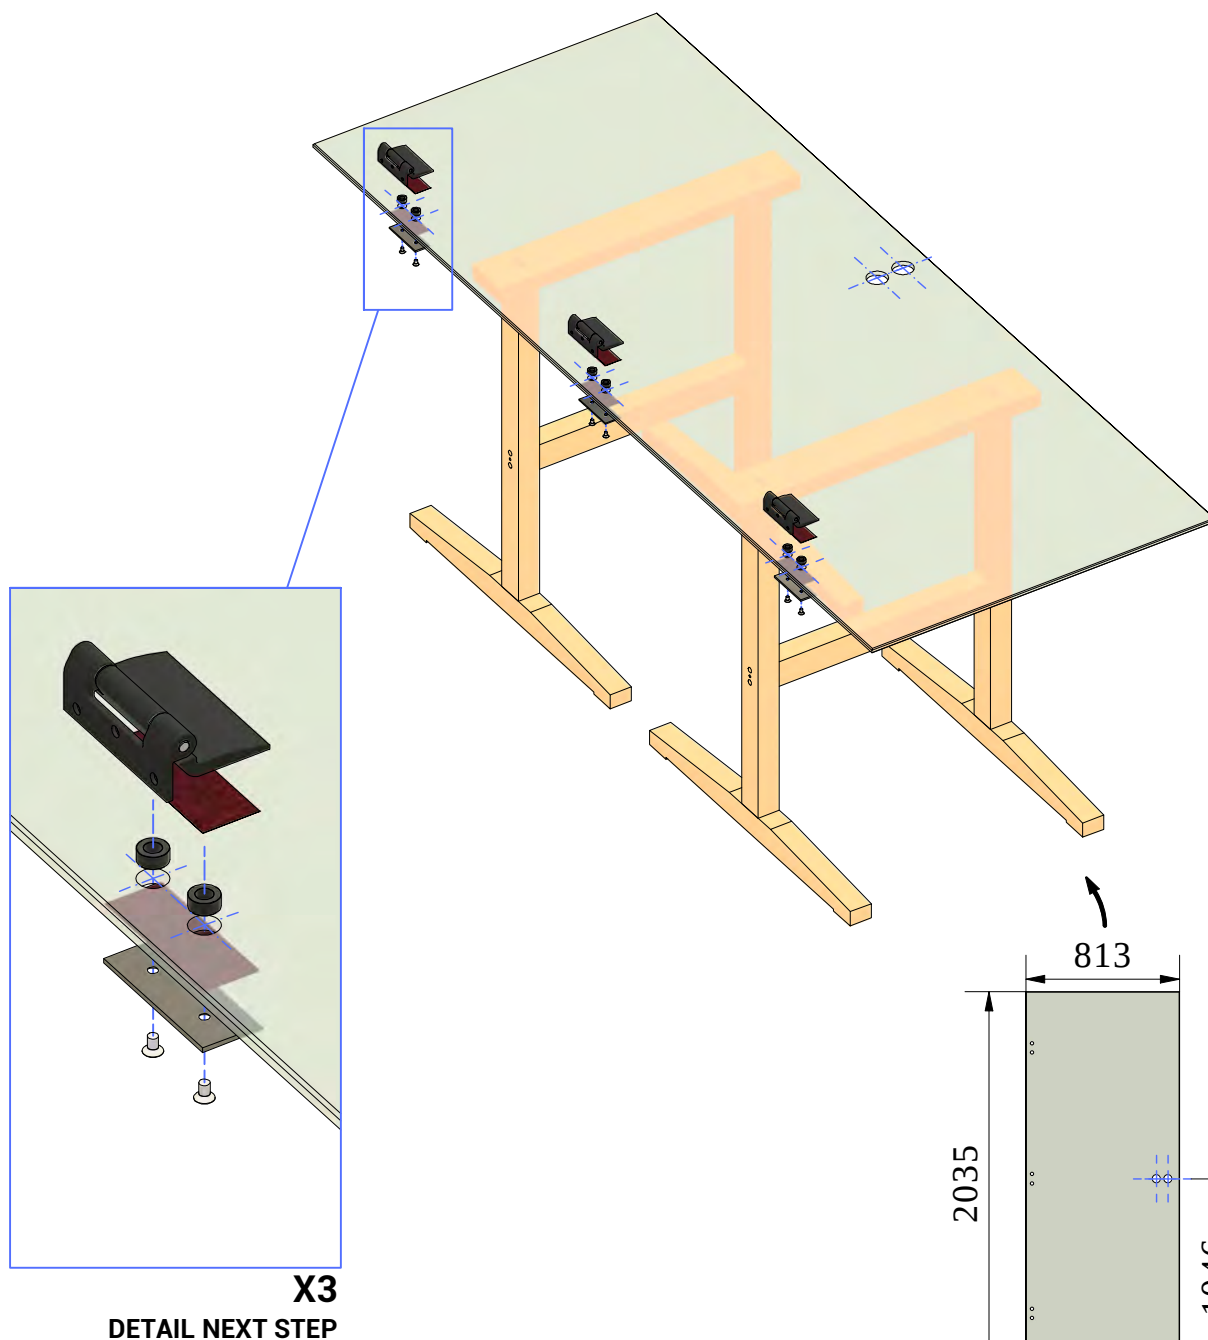
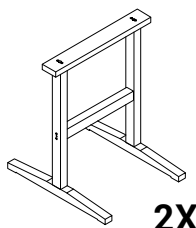


STEP 27.3


TOOLS NEEDED

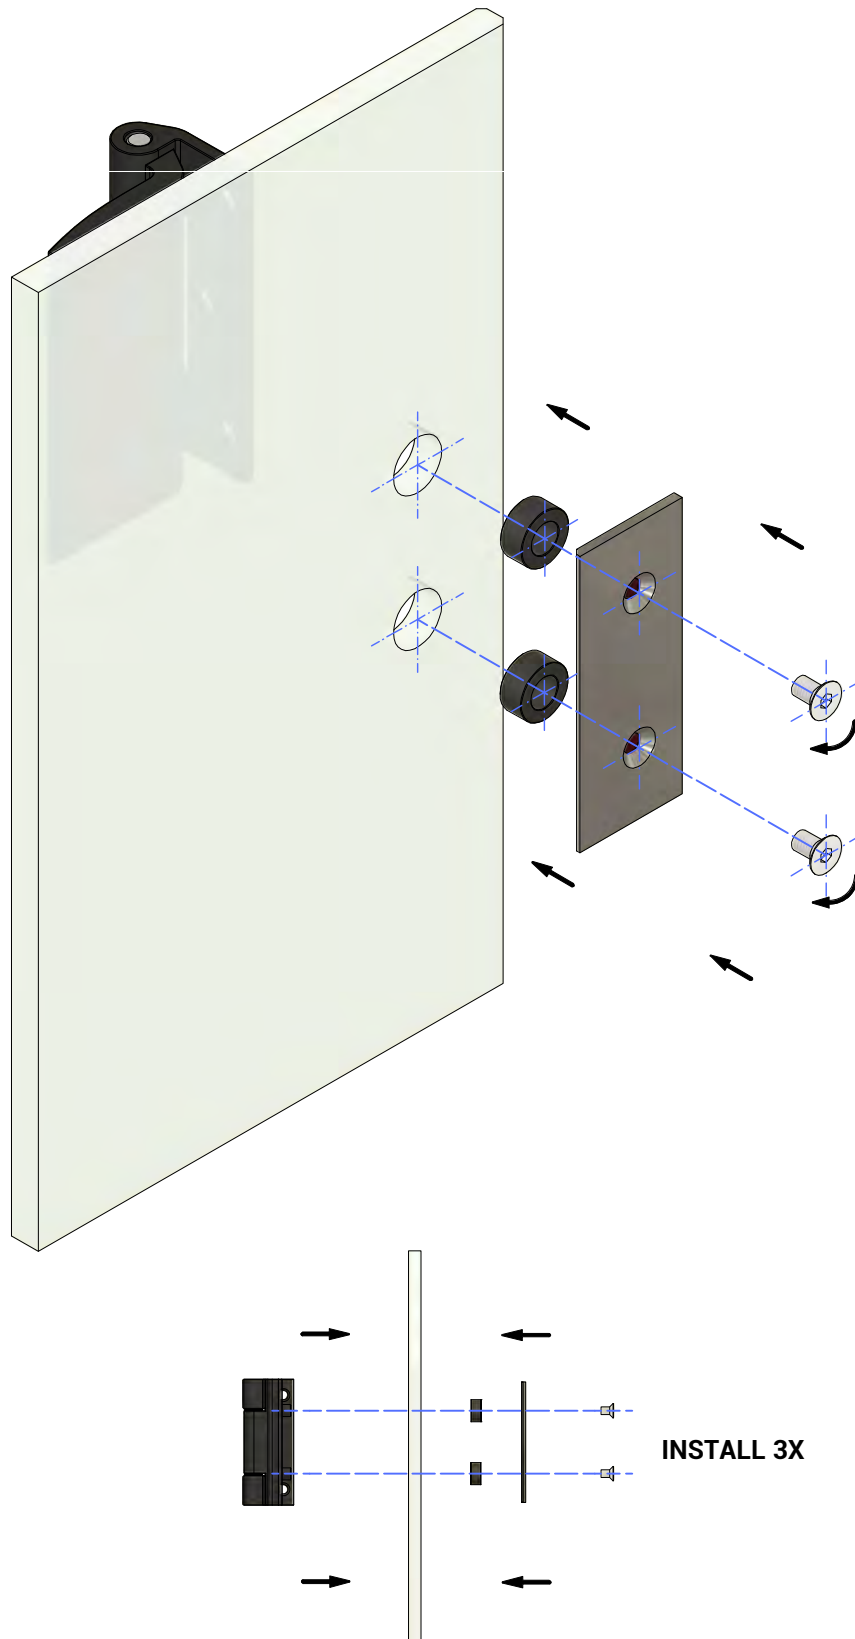


STEP 28.1

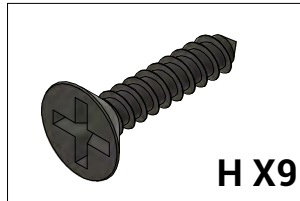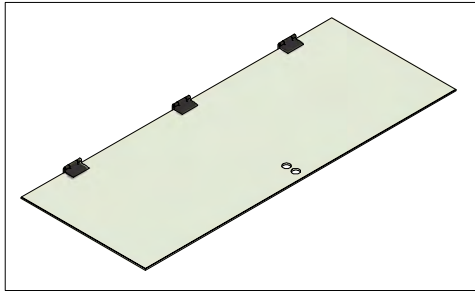

TOOLS NEEDED







PH 2

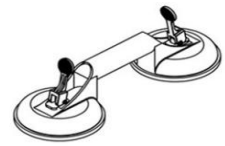


PACKING FELT

OPEN HINGE

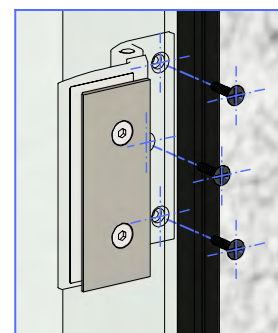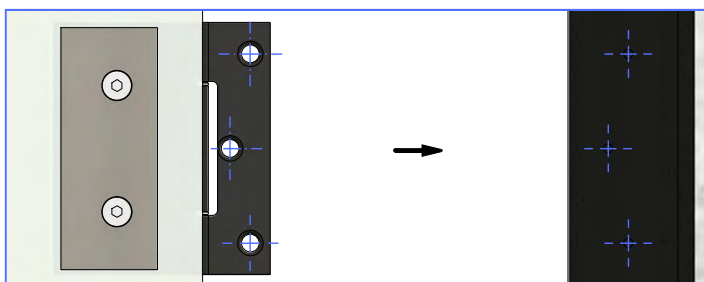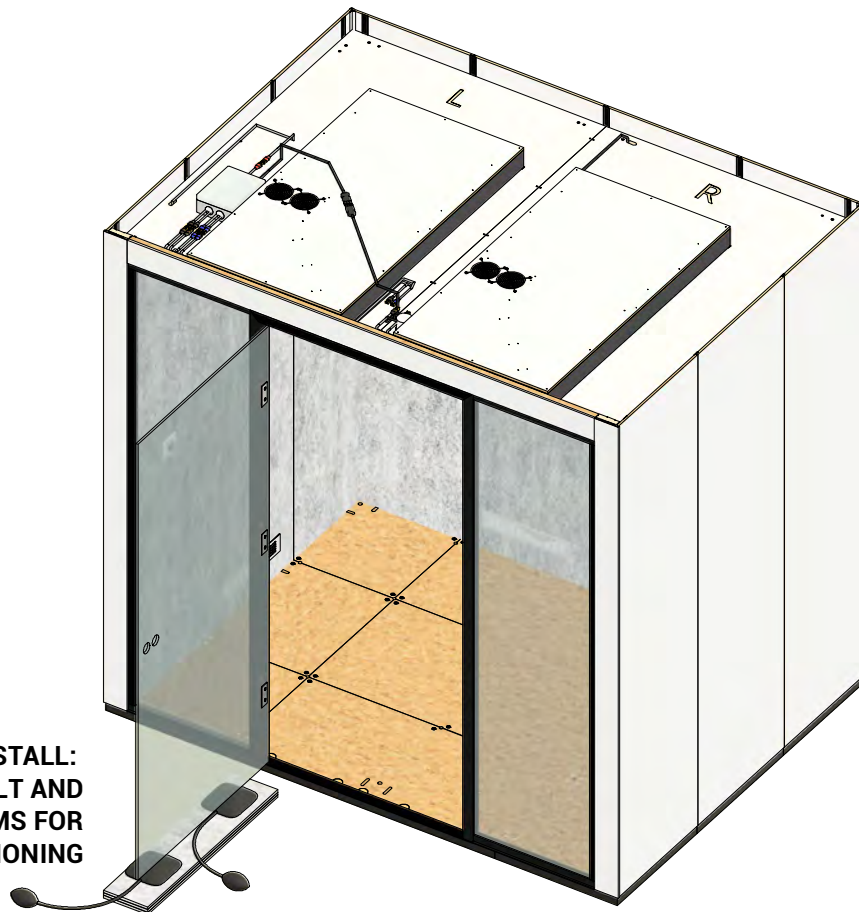
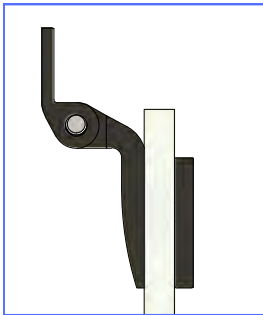


X3

STEP 28.2

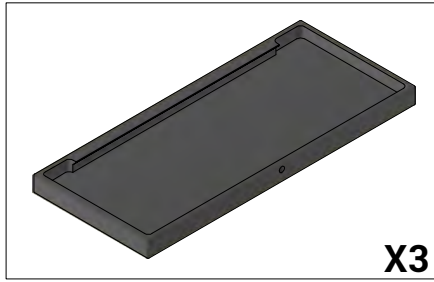


TOOLS NEEDED

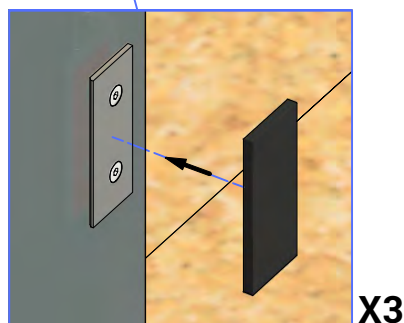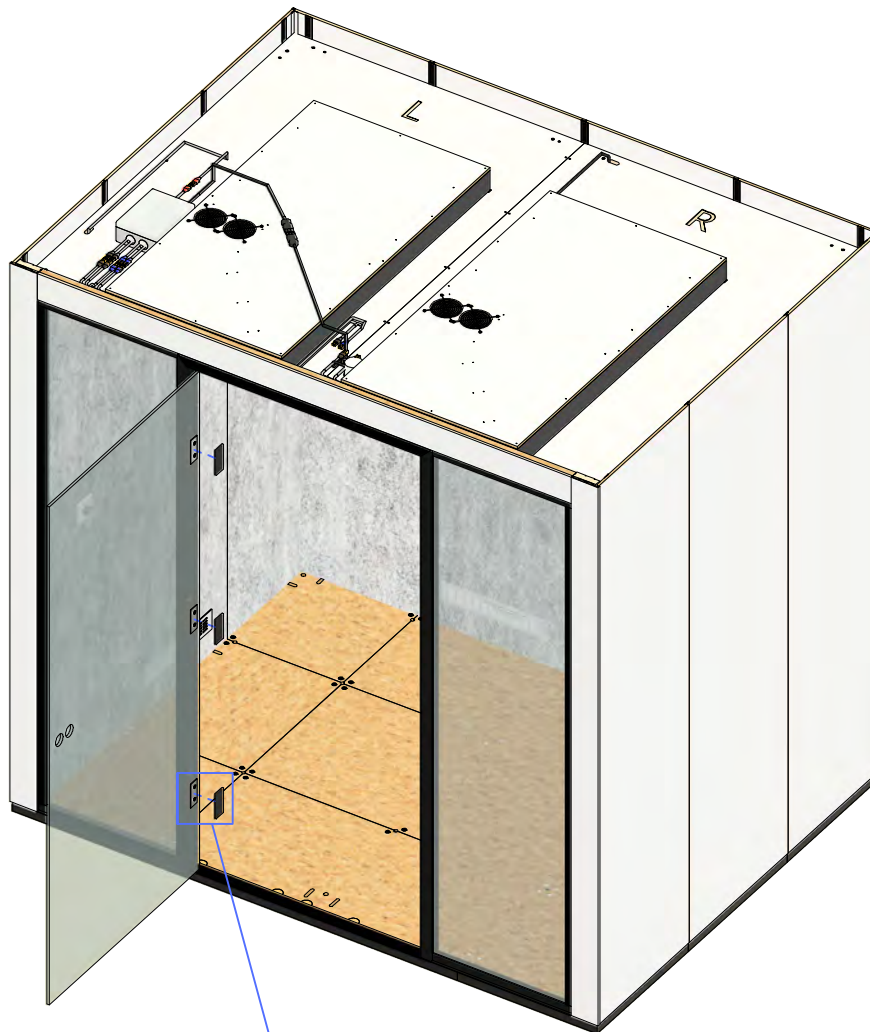

STEP 29.1



TOOLS NEEDED

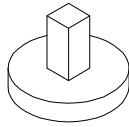


IN THE BOX



DISASSEMBLE

STEP 29.2

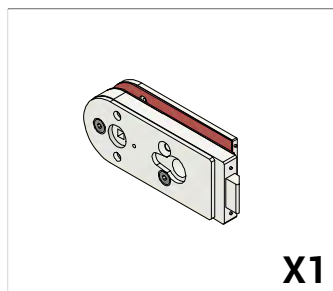


TOOLS NEEDED



**METRIC
H 4**

IN THE BOX



PEEL OFF THE ADHESIVE BACKING AND STICK
TO INSIDE OF FACE OF MORTICE ASSEMBLY

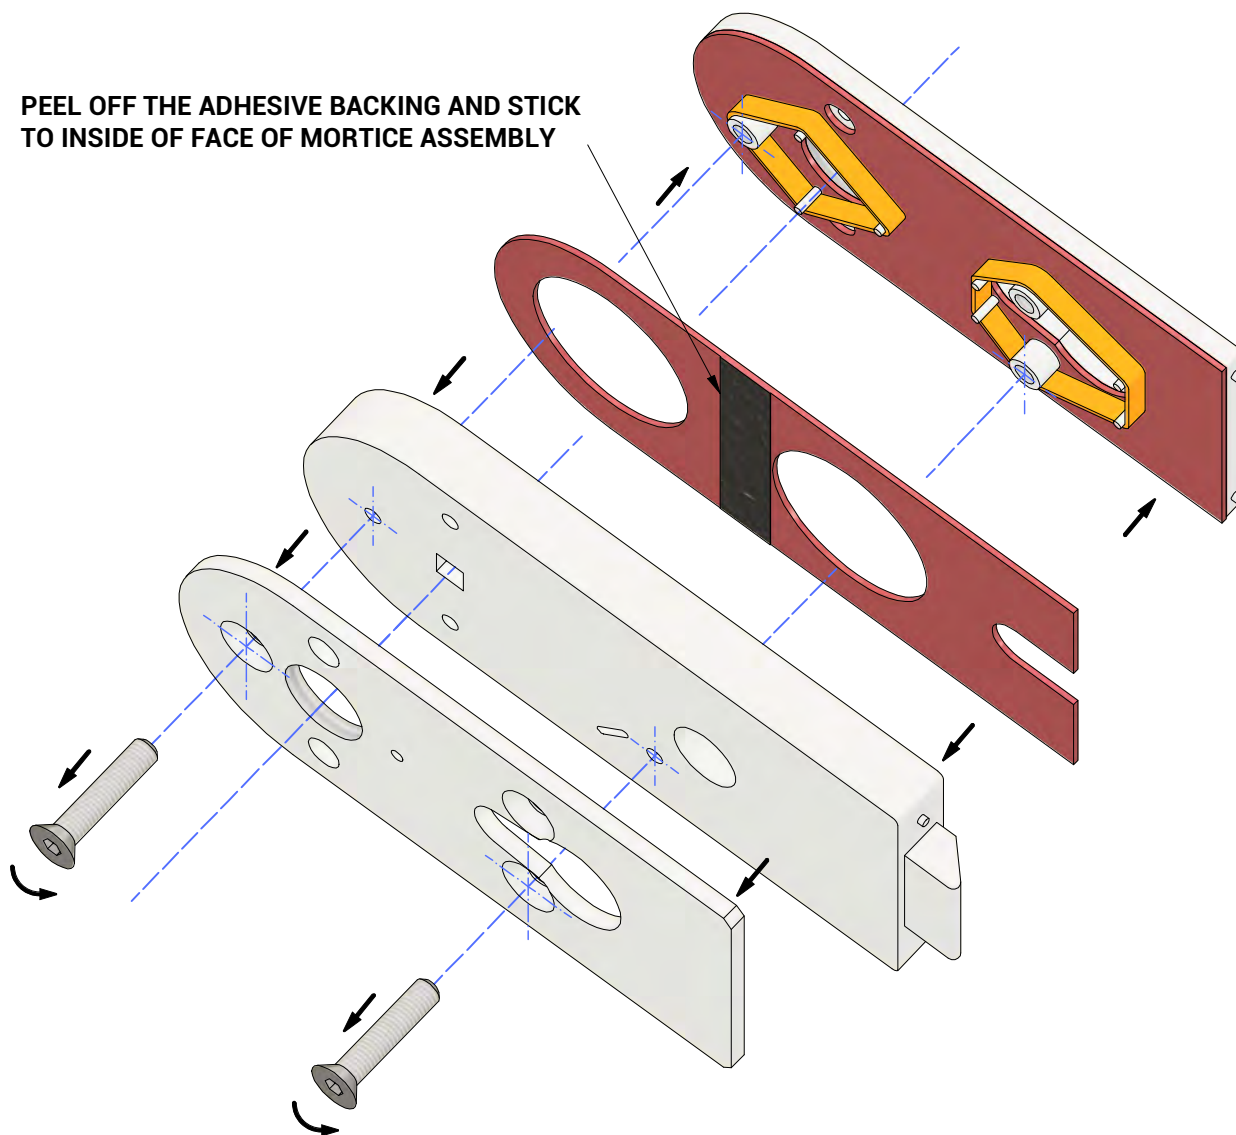


DISASSEMBLE

STEP 29.3

TOOLS NEEDED

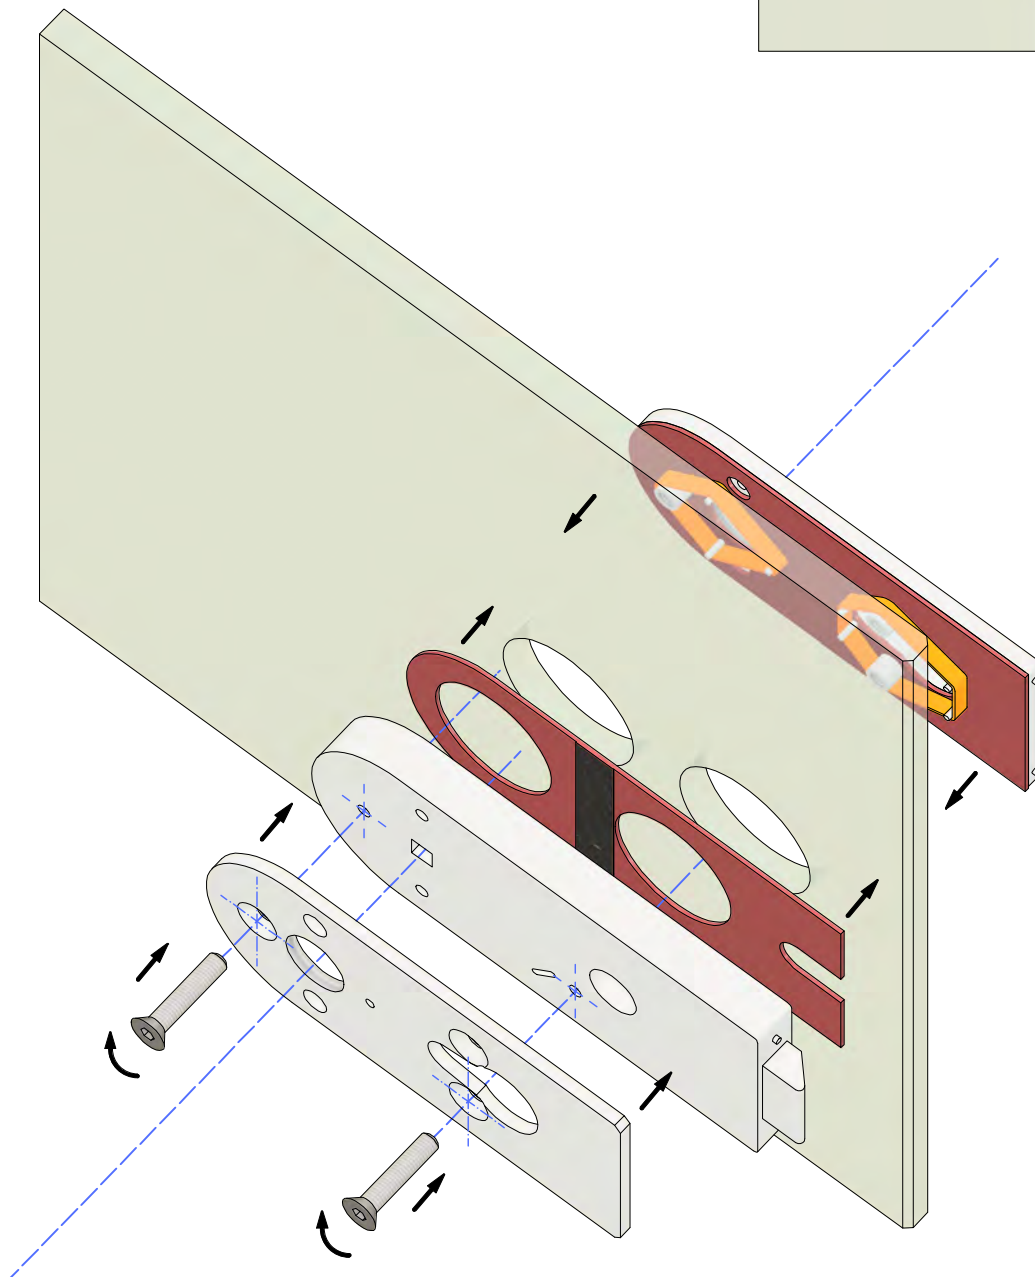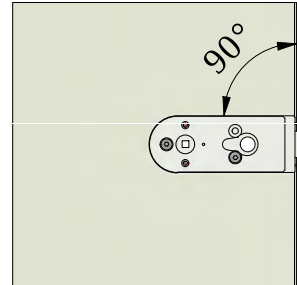

STEP 29.4

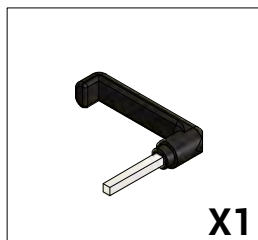


TOOLS NEEDED



**METRIC
H 3**

IN THE BOX

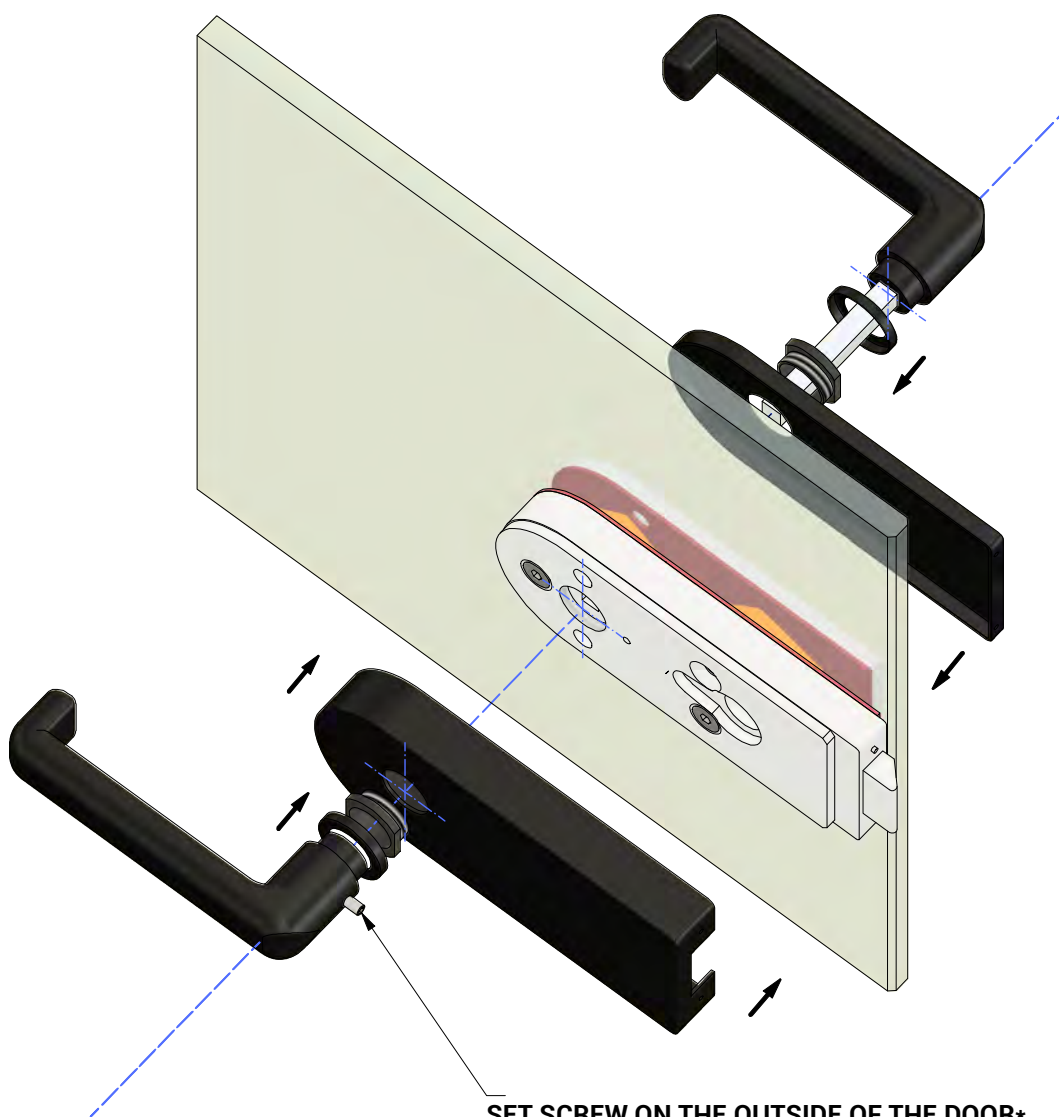


* EMERGENCY SAFETY REASON
HANDLE WITH CRANK NEEDS TO BE ACCESSIBLE FROM THE INSIDE TO ESCAPE THE POD IN CASE OF EMERGENCY

STEP 30.1



1

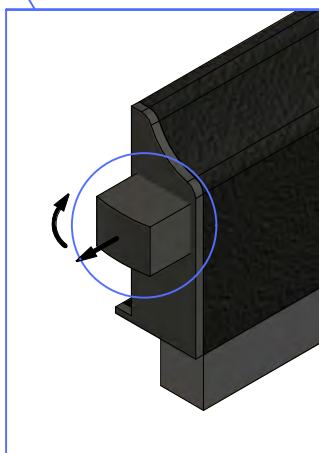


2




PULL & TURN THE SEAL BUTTON UNTIL FLUSH WITH FRAME

STEP 30.2

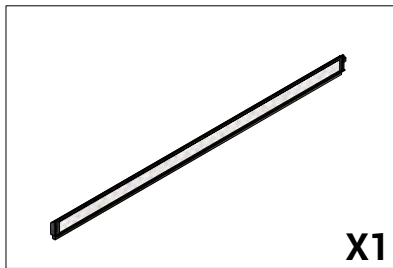


**BEFORE REMOVING THE ADHESIVE BACKING ON THE SEAL,
CHECK THAT YOU ARE ALIGNED AT THE ENDS
AND THE BOTTOM OF THE DOOR LEAF.**


**THE ADHESIVE IS EXTREMELY STRONG AND
A MISALIGNED SEAL WILL REQUIRE A RETURN TO SITE**

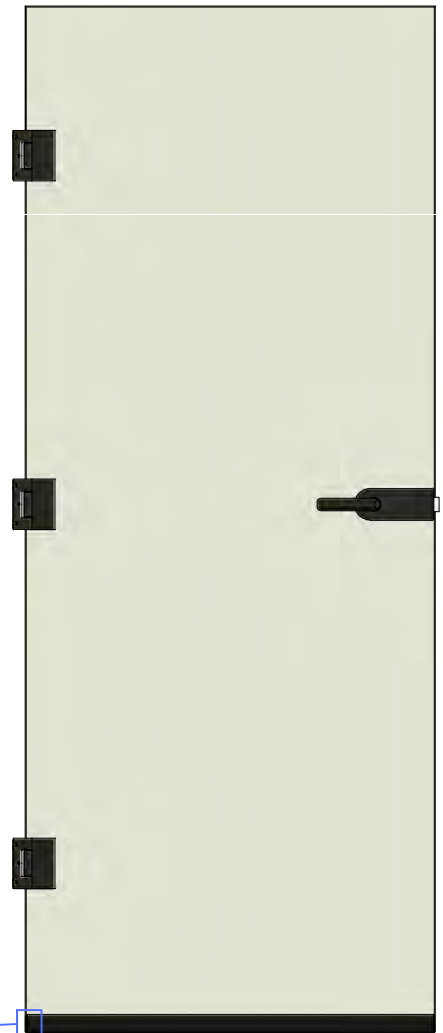


1

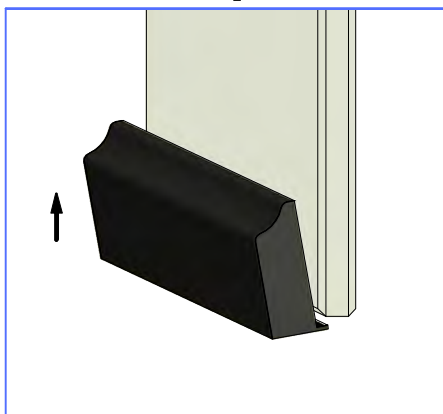

2

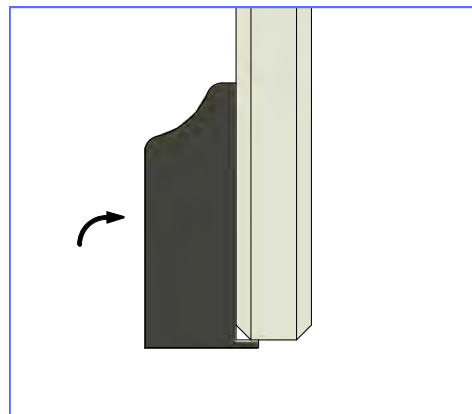

STEP 30.3

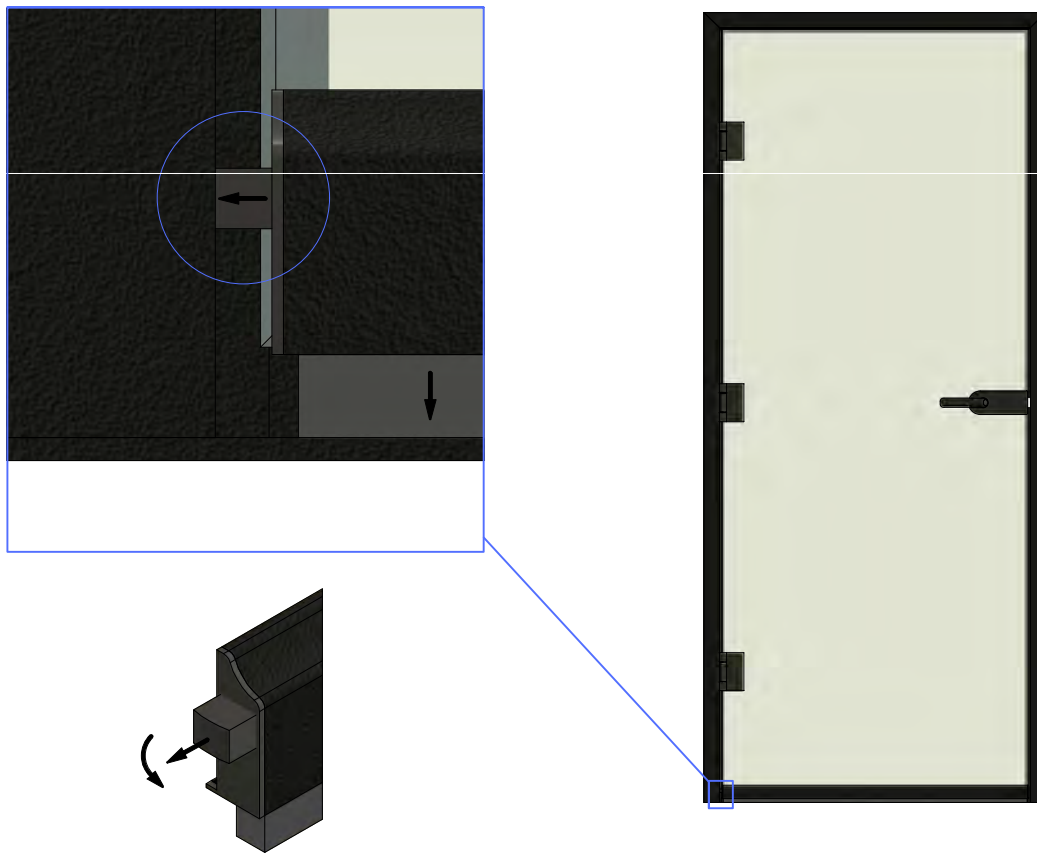

OPEN THE DOOR AND PULL CAREFULLY ON THE SEAL BUTTON - ROTATE TO ADJUST POSITION.



CLOSE THE DOOR TO CHECK IF THE SEAL IS ENGAGING SUFFICIENTLY. CONTINUE TO BACK IT OUT UNTIL THE DOOR SEAL FULLY CLOSES THE GAP AT THE BOTTOM OF THE DOOR.

THE THRESHOLD WILL PROVIDE UPWARD FORCE ON THE HINGE SIDE OF THE SEAL.

IF THE GAP IS STILL SKEWED IT MEANS THAT THE LEVEL NEEDS MORE ADJUSTING.


CONTINUE TO BACK OUT THE BUTTON 1/4 TURN AT A TIME UNTIL THE SEAL IS FULLY ENGAGED.

STEP 30.4

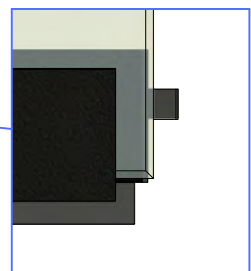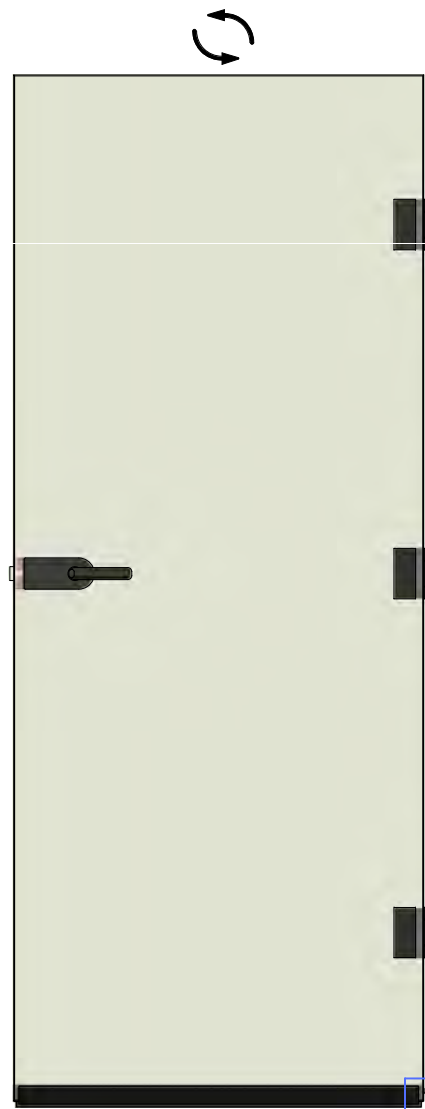


**REMOVE ADHESIVE BACKING &
ALIGN AT CENTER USING
GUIDELINES IN PREVIOUS STEP**


1

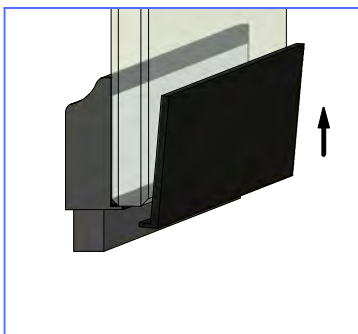



2

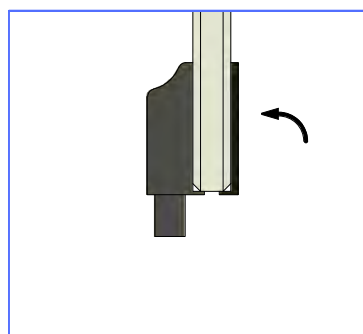

STEP 31.1

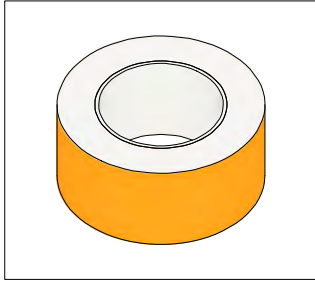

TOOLS NEEDED

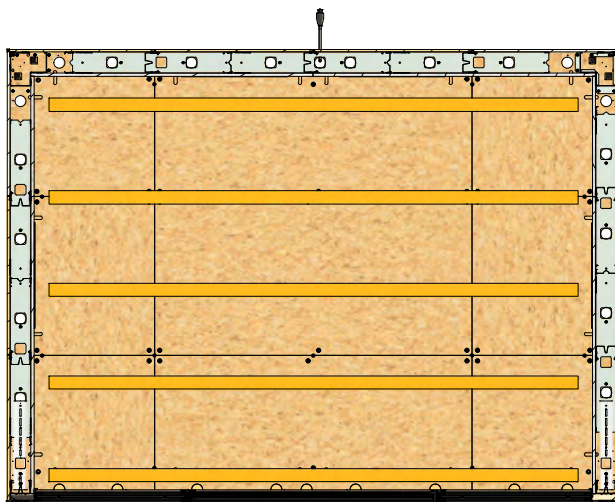



**STICK STRIPS OF DOUBLE
SIDED TAPE ON THE FLOOR**

STEP 31.2




TOOLS NEEDED



CUT TILES IN DEPTH OR WIDTH
ACCORDINGLY TO FIT .

POSITION **CUT EDGES** TOWARD
THE FELT & VICE VERSA THE
FACTORY EDGES TOWARD
EACH OTHER AND THE FRONT
PLINTHS.





ADVISED TO USE A STRAIGHT
EDGE AND A CLEAN KNIFE.

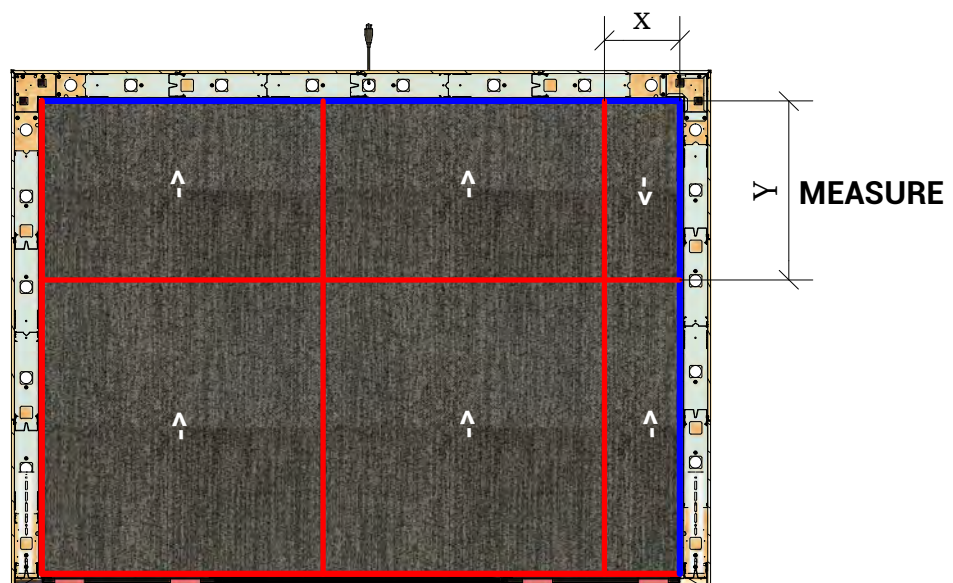



START WITH 2 FULL TILES.

STEP 32.1

TOOLS NEEDED

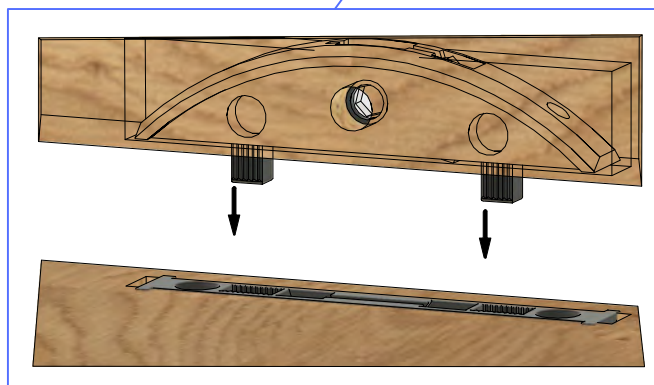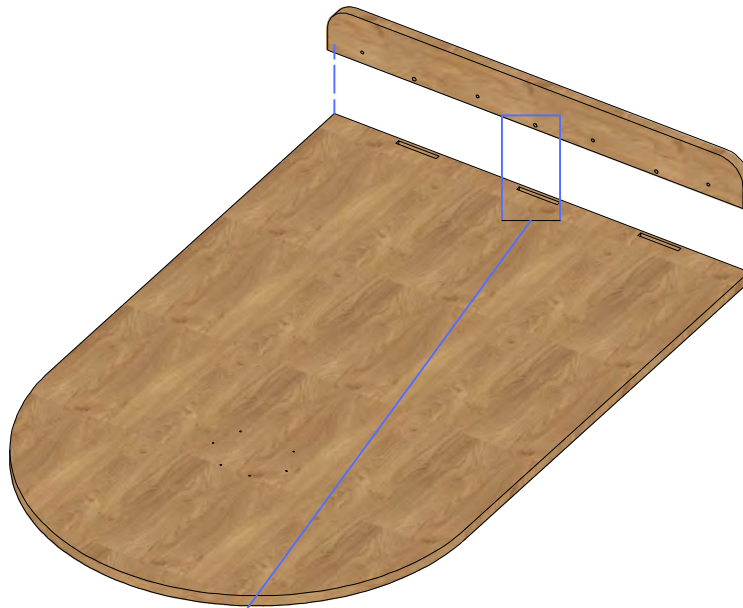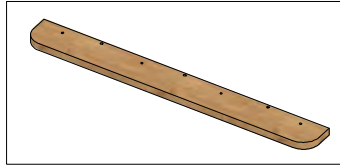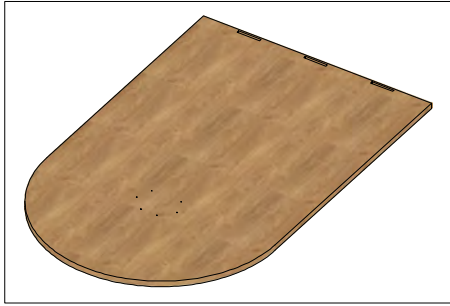


X3

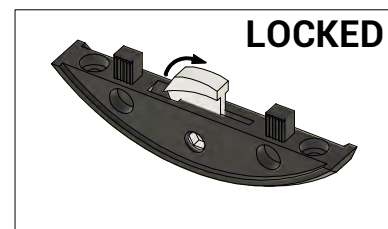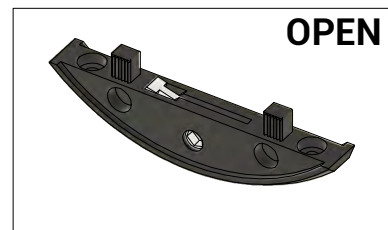


CONNECT THE COFFIN LOCKS

STEP 32.2


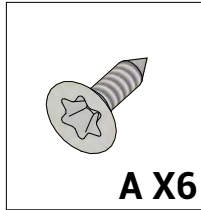


TOOLS NEEDED




TX 20


**ROTATE THE
BOTTOM LEG PIECE
TO ADJUST HEIGHT**

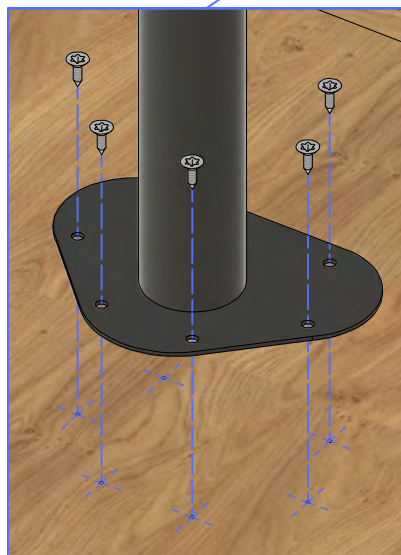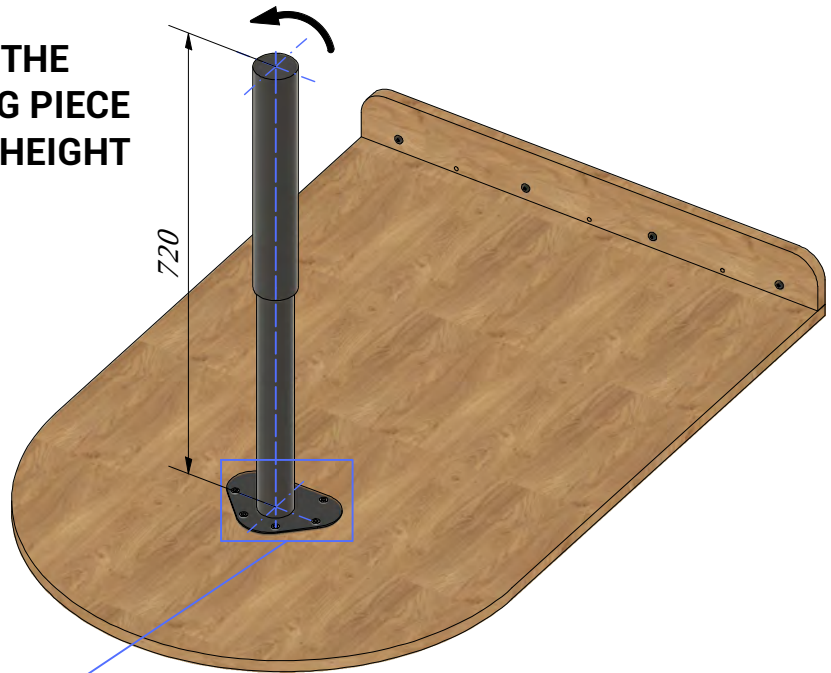




STEP 32.3

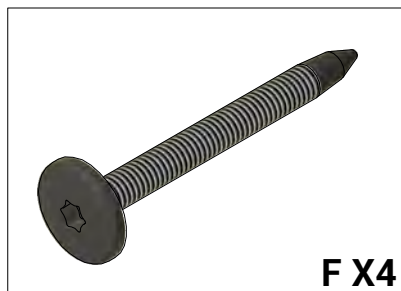

TOOLS NEEDED



TX 20

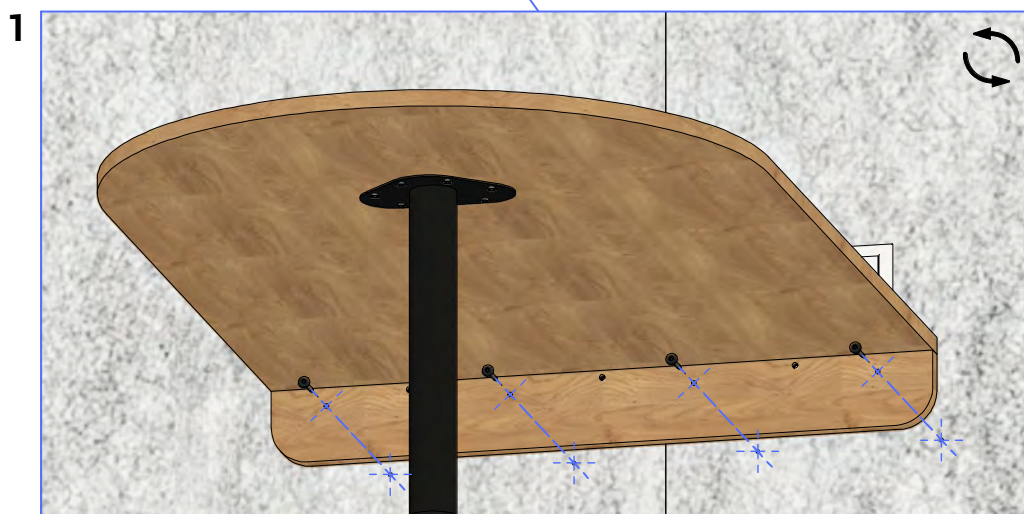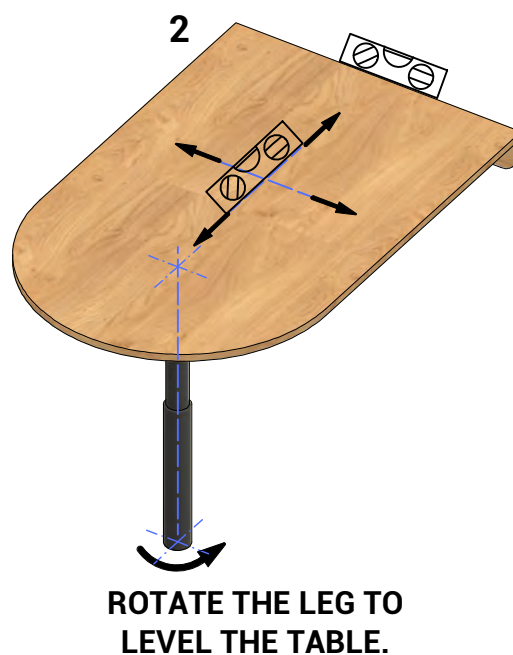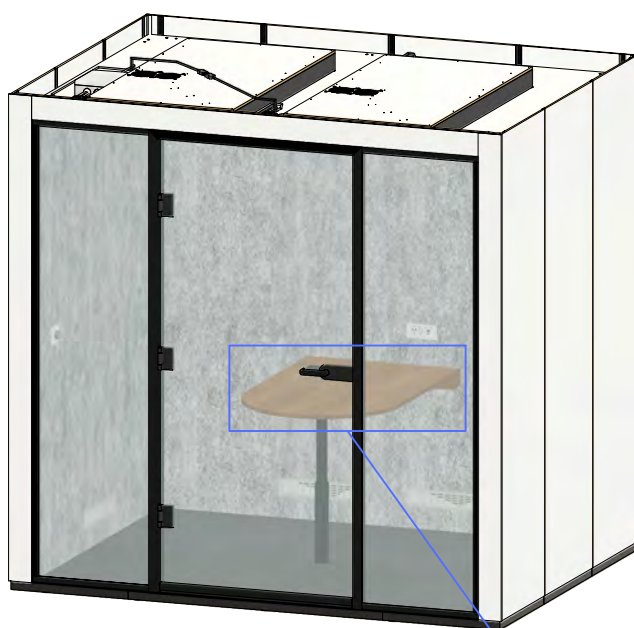

ALIGN SCREWS INSIDE PRE-DRILLED HOLES FROM STEP 7

STEP 33



CLEAN ALL SURFACES AND INSTALLATION AREA:
CLEAN THE TABLE
REMOVE ANY VISIBLE STICKERS OR DEBRIS
CLEAN THE GLASS INTERIOR
VACCUUM THE POD AND WORKING SPACE
CLEAN THE EXTERIOR GLASS AND PANELS