


INSTALLATION GUIDE

CALL 1 (US)



JUUNOO Call 1

Technical data sheet

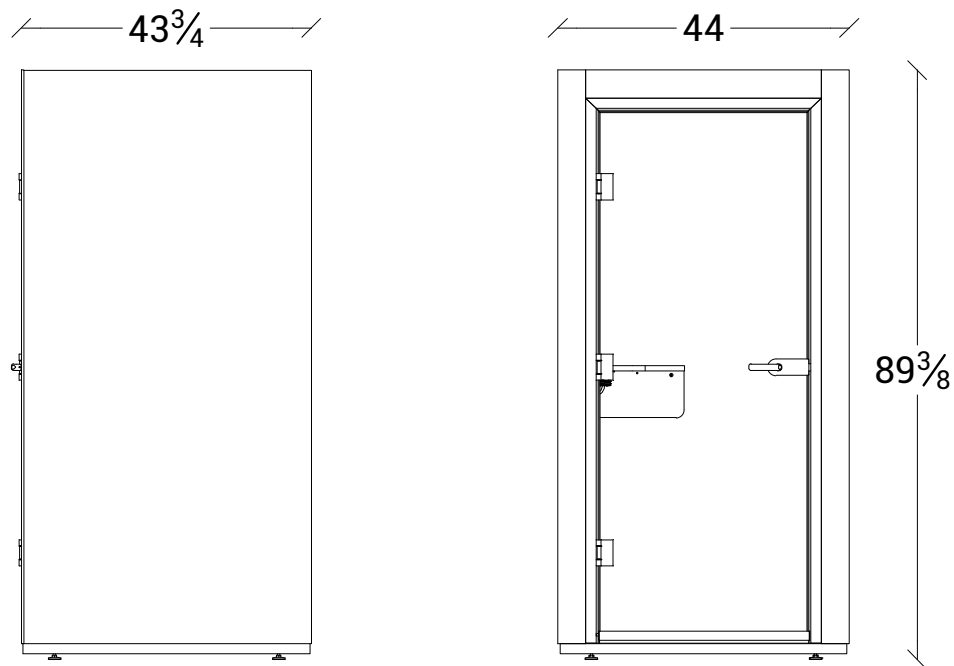

Exterior dimensions

(W x D x H) 44" x 43 3/4" x 89 3/8"

Height tolerance for leveling feet

±1/2"

Interior dimensions

(W x D x H) 35 3/4" x 37 7/8" x 82 3/16"

Doorway

(W x H) 35" x 80 1/8"

Desktop dimensions

(W x D) 37 3/8" x 15"

Desk height

42"

Acoustics

30 dB

Airflow

Multiple fans refresh air every 60 seconds

Lighting

Adjustable light dimmer up to 700 lm

Power usage

20 W ~ (0.020 kwh) while in use / 1.2 W standby

Power requirements

120V min., 3 prong plug

Power cord length

84" / 2134 mm

Table outlets

1 power socket, 1 USB-A, 1 USB-C

Capacity (person)

1

Total weight


210 kg / 463 lb

Warranty coverage

2-year protection


JUUNOO CALL 1

Tools included for install



TX 15

Torx bit 15




TX 20

Torx bit 20 (SPAX)



H 4

Hex bit 4



H 5

Hex bit 5




**METRIC
H 1.5**

Allen key H1.5

Tools needed for install




Allen key set



PH 1

Philips bit 1




PH 2


Philips bit 2




Drill Bit Ø3mm

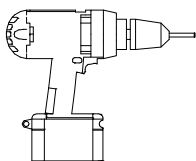

Power drill



Mallet




Cutter



Ruler



Socket 13mm



Spirit level




Gloves




Suction cups




Inflatable shim x2



Laser level

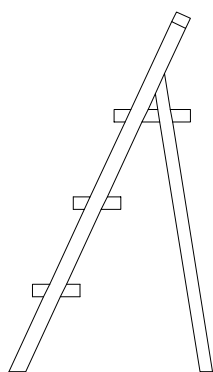


Stepping stool

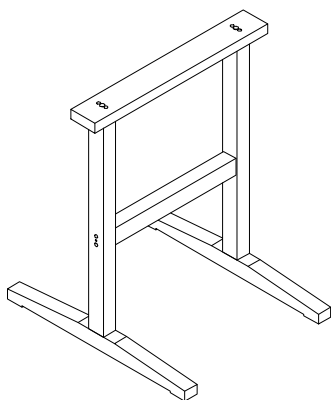

Sawhorse x2




BOX SMALL PARTS
780 BOX CALL 1 US

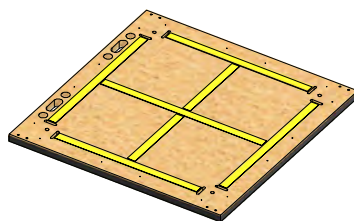


1X
FLOORPLATE
710 A 1100 1100 201




1X
DROPSEAL
734 807 501

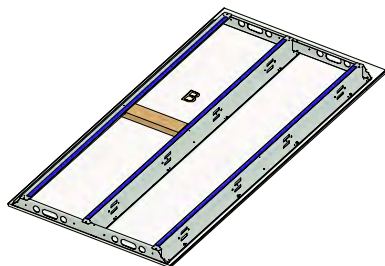

1X
CALL 1 WHITE BACK WALL
720 C1 BACK 222

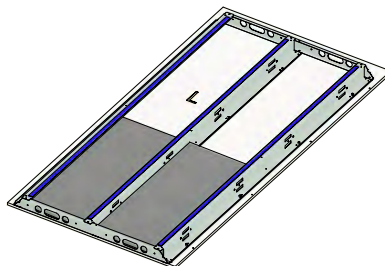


1X
CALL 1 WHITE LEFT WALL
720 C1 LEFT 222

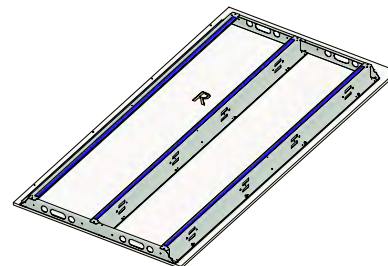


1X
CALL 1 WHITE RIGHT WALL
720 C1 RIGHT 222




1X
CALL 1 VENTILIGHT CEILING
752 DC 1081 1072 202

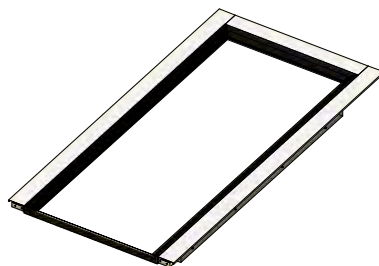

1X
CALL 1 FRONT ASSEMBLY
733 CAL1 L 501/502

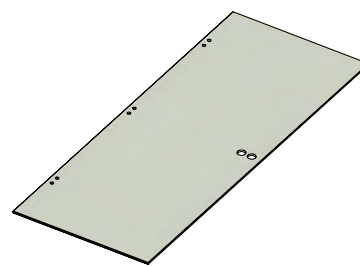

1X
TEMPERED GLASS DOOR LEAF
725 2035 813 10

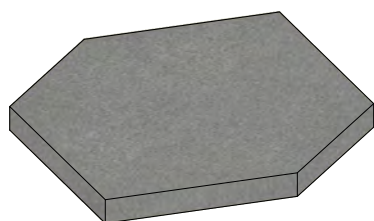

15X
PE FOAM PANEL
720 P 50 465 660 304



1X
CARPET TILE 'SOFT BOB'
711 930 972 310



1X
DESK TABLE TOP WOOD FINISH
770 CAL1 204




1X
FELT PANEL X
722 X 00 T




1X
FELT PANEL Y
722 Y 00 T



1X
FELT PANEL Z
722 Z 00 T



12 X B
WOOD SCREW T20
Ø4 L20mm
635 040 020 T20

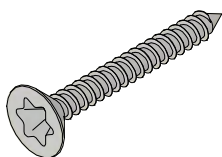


25 X D
WOOD SCREW T20
Ø4 L35mm
635 040 035 T20




9 X E
WOOD SCREW TORX 20
Ø4 L50 mm
635 040 050 T20 BL




5 X F
TRESPA SCREW T20
Ø4.8 L50 mm
637 048 050 T20 511

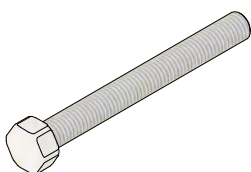


8 X K
HEX BOLT M8
Ø8 L65mm
636 M8 065

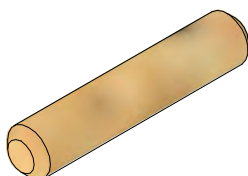


2 X M
WOOD DOWEL
Ø8 L40mm
780 DOW 8 40 290

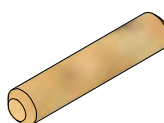

8 X N
WOOD DOWEL
Ø6 L30mm
780 DOW 6 30 290

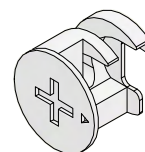


4 X O
RASTEX 15 - NO RIM Ø15
780 RASTEX 15

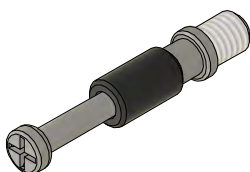

4 X P
RASTEX TWIST M6
Ø6 L30mm
780 TWISTER 30XM6




4X
LEVELING FOOT M10
710 P9 FOOT M10

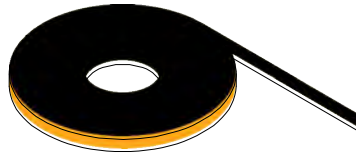


16 ft
INSULATING FOAM TAPE
T=1MM W=10MM
651 1PE 010 20 304




9ft
POWER CABLE US + WIELAND(F)
790 000 012 W

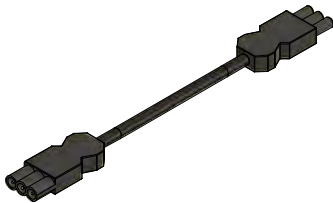


1 x 20"
WIELAND CABLE M-F
790 001 065

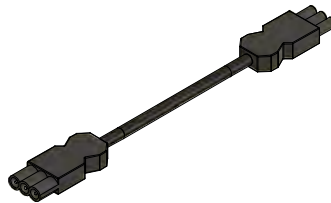


1 x 40"
WIELAND CABLE M-F
790 001 067

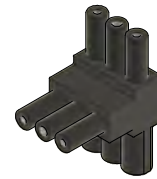


1X
WIELAND GST18-T SPLITTER
790 001 062

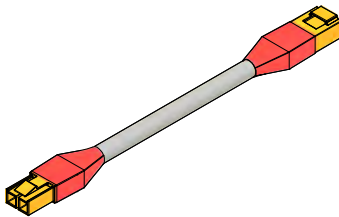


2 x 40"
GRAY CABLE M-F RED
791 001 043 100 MF R

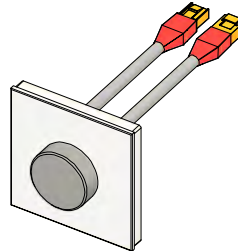


1X
DIMMER KIT CALL 1
790 A DIM C1 002

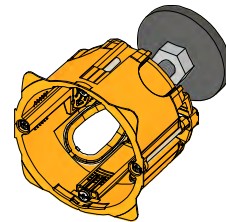

1X
LEGRAND WALL BOX + FOOT
790 001 003 + FOOT

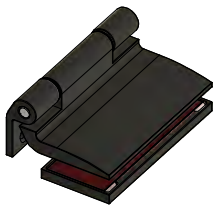


3X
GLASS DOOR HINGE
COLCOM 8674.62 BLACK MATTE
450 GST C8674 501

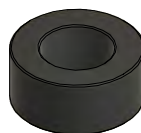

6X
O-RING BUSHING 18MM
450 GST C8674 BUSH S




1X
GLASS DOOR CASE
DORMA 10.200 BLACK
451 GST 501

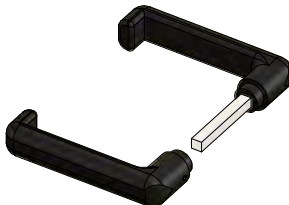

1X
GLASS DOOR HANDLE
DORMA 10.314 BLACK
452 GST 501





1X
US OUTLET + WIELAND MALE
USB A+C
790 001 018 US W

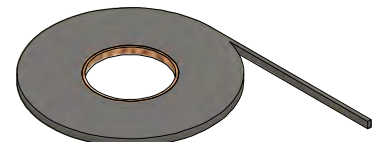


1 Roll
PE FOAM TAPE
T=3 MM W=6 MM
651 3PE 006 20 304


STEP 1.1

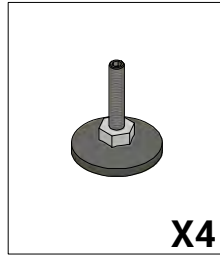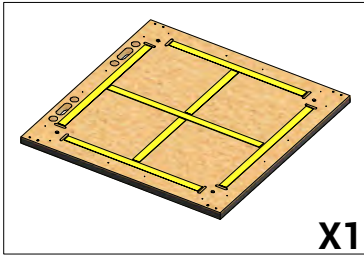


TOOLS NEEDED









TX 20

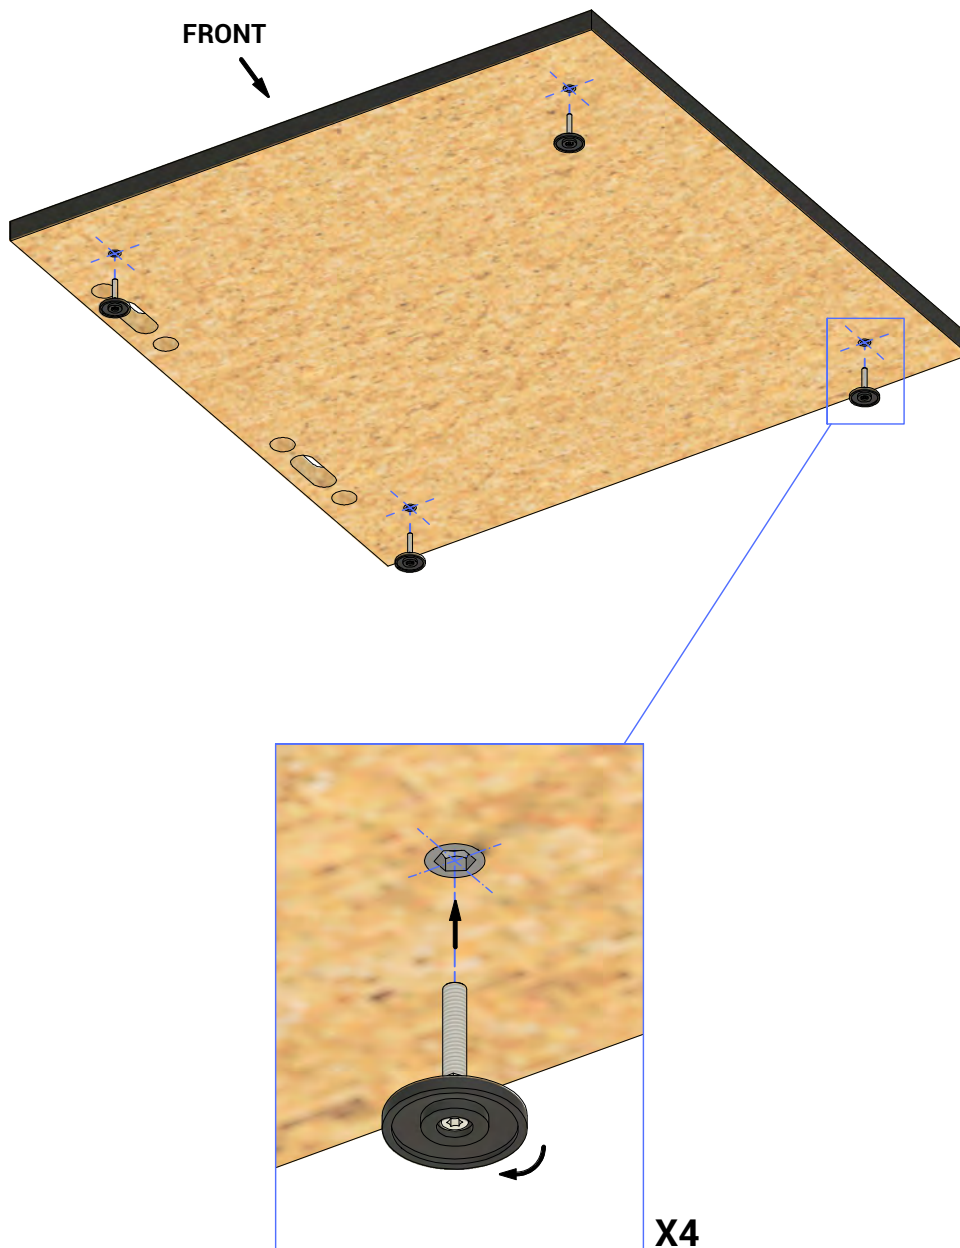

STEP 1.2


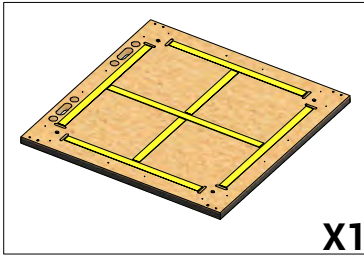


TOOLS NEEDED

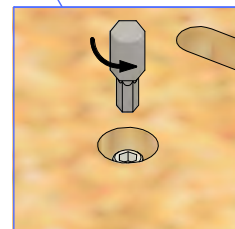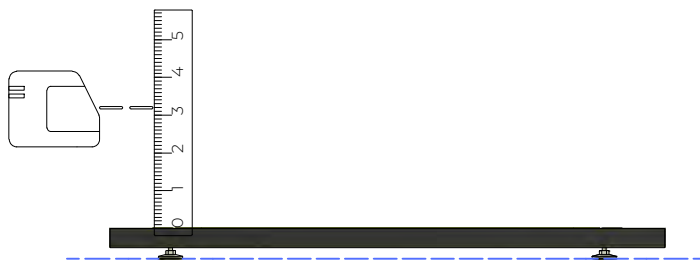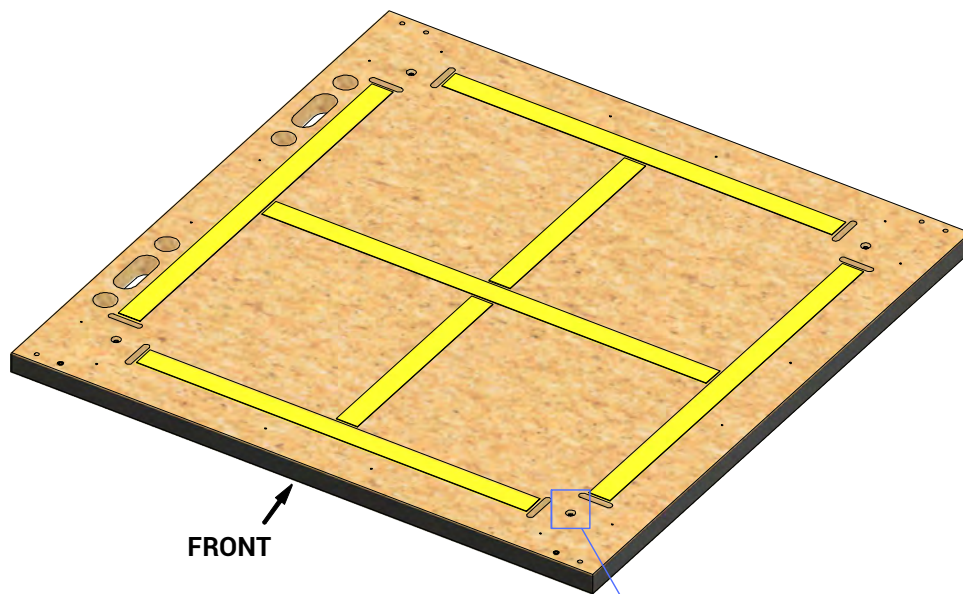




ADJUST LEVEL

STEP 2.1

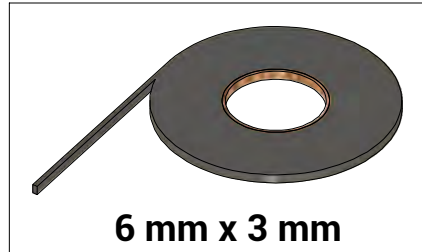
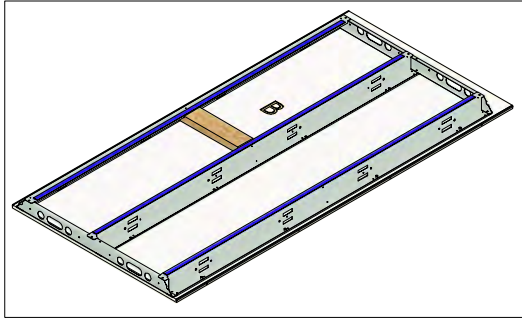


TOOLS NEEDED

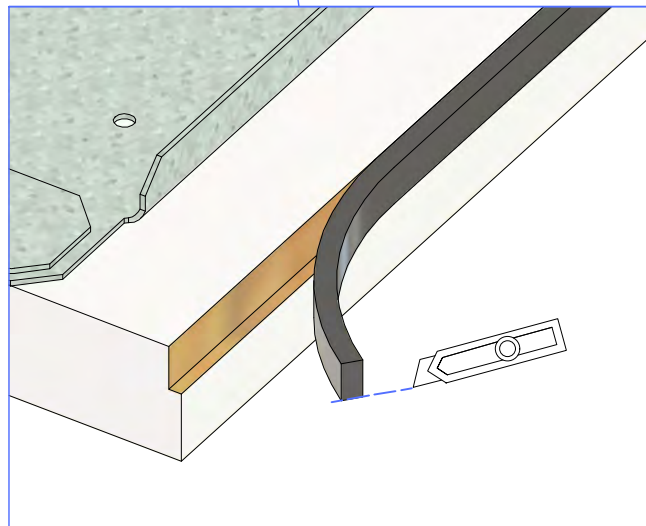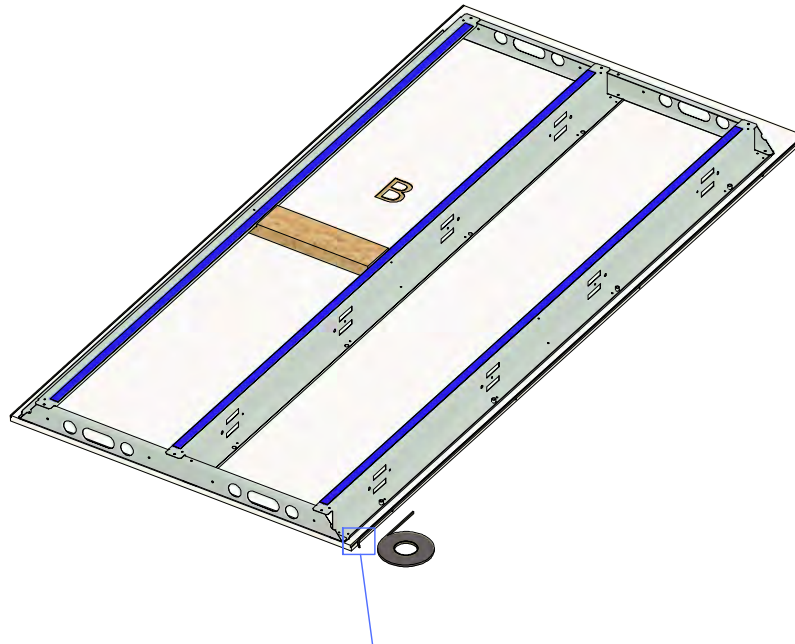


NEATLY STICK THE GRAY FOAM TAPE INSIDE THE GROOVE ON BOTH SIDES OF THE BACK PANEL.


STEP 2.1

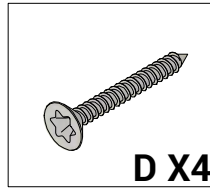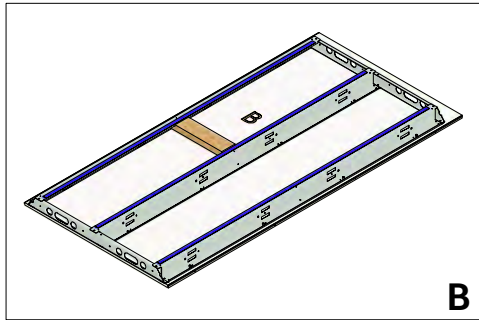


TOOLS NEEDED





TX 20

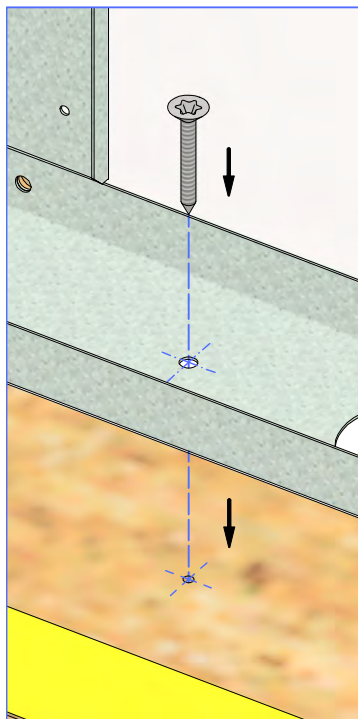




X4

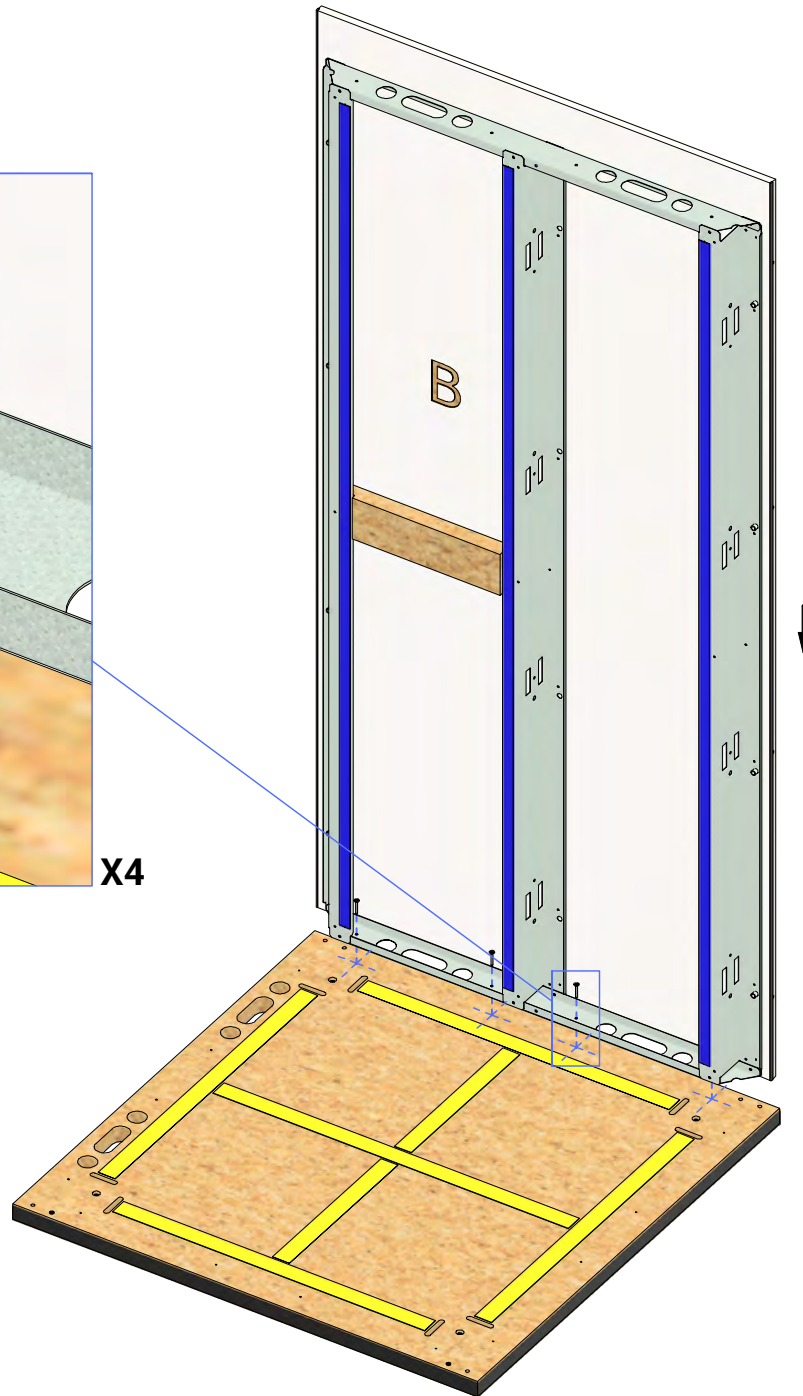


STEP 2.2

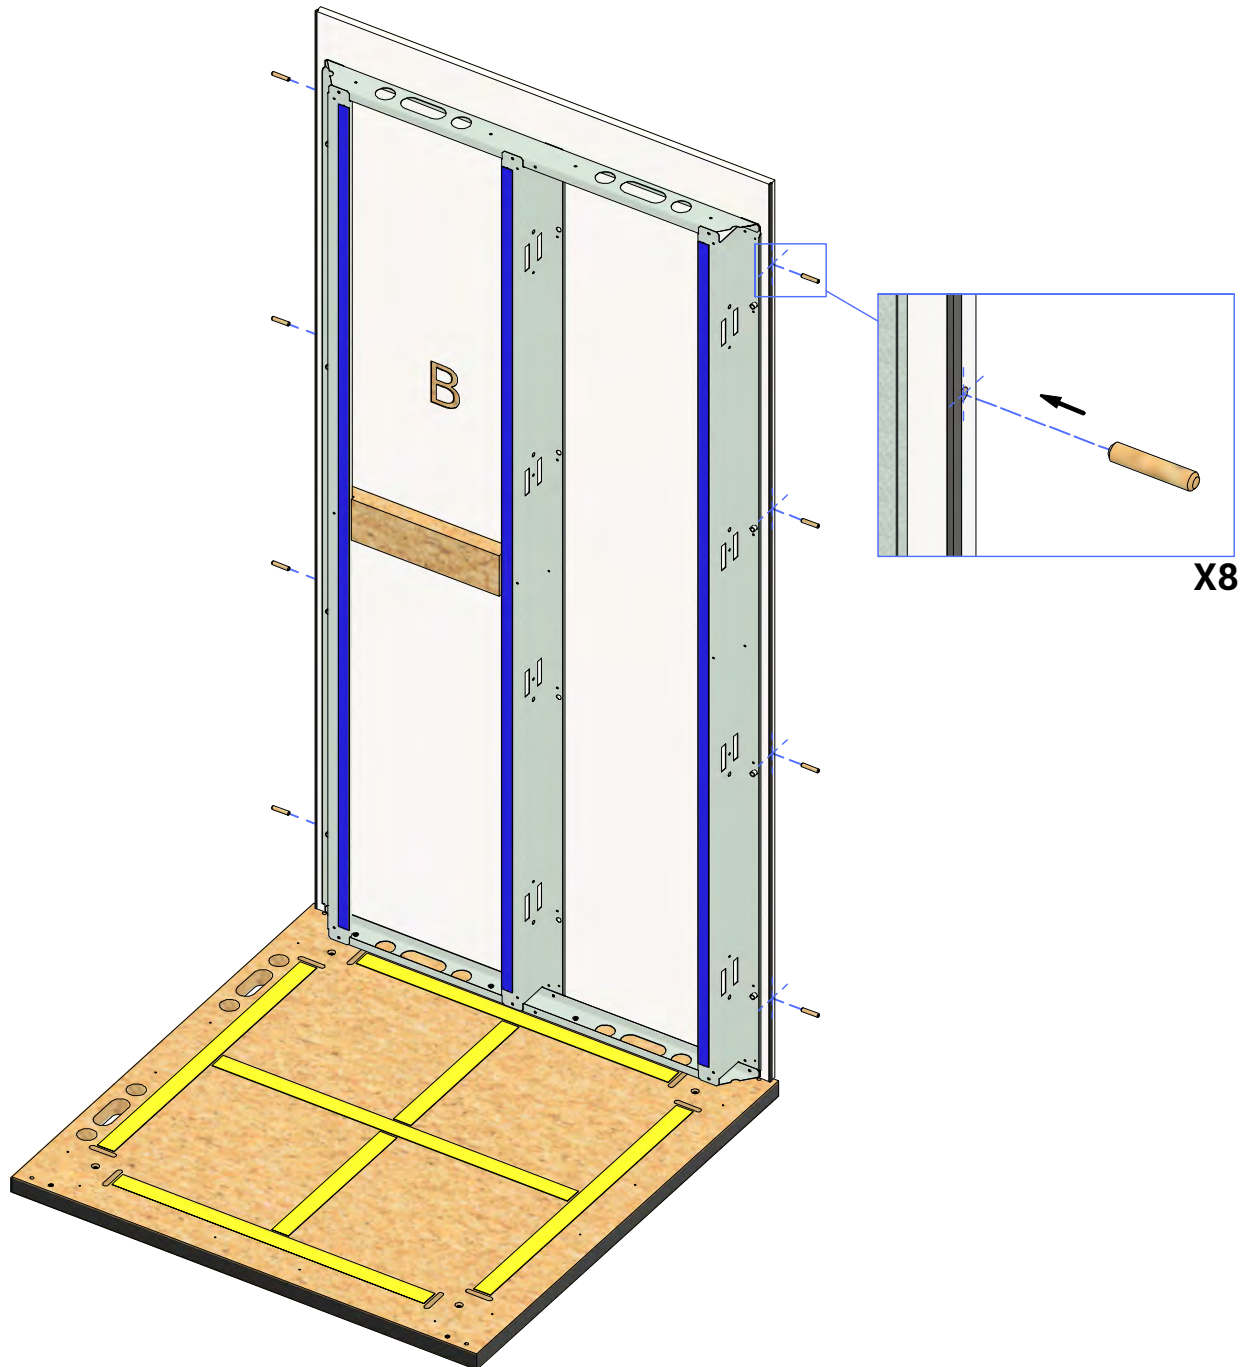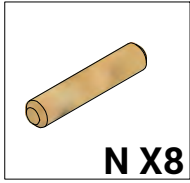


STEP 3.1

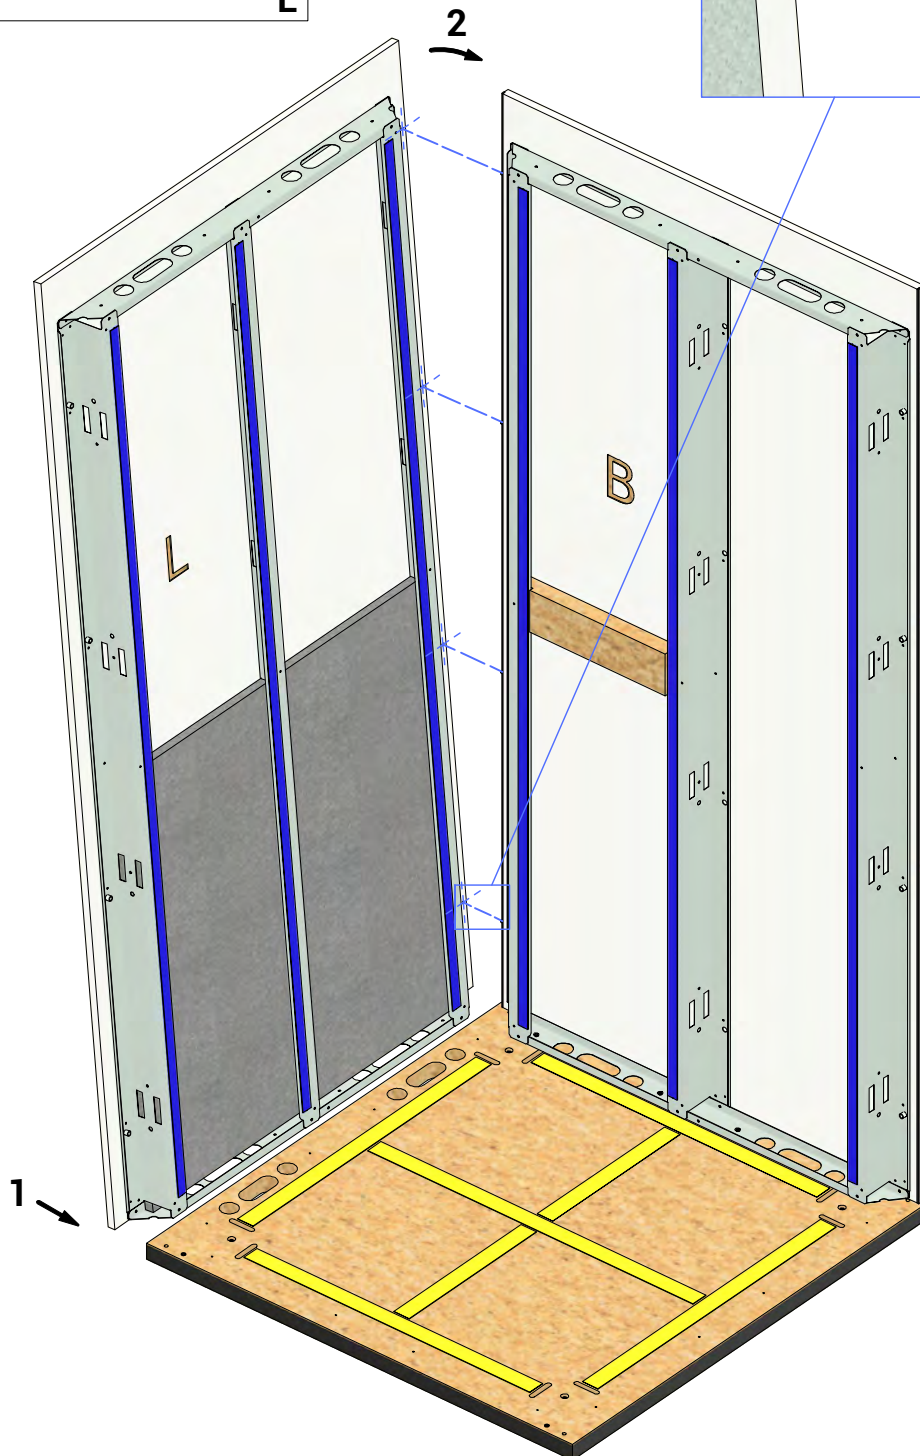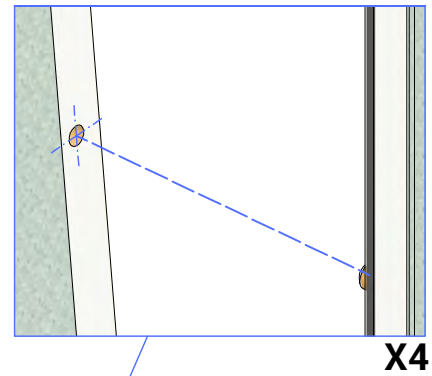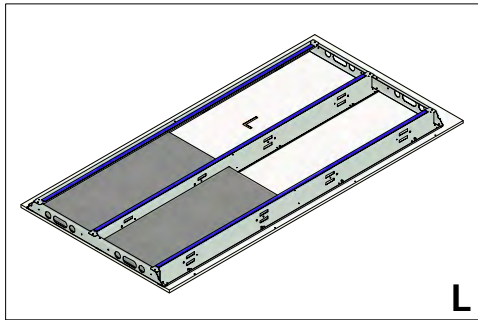


STEP 3.2

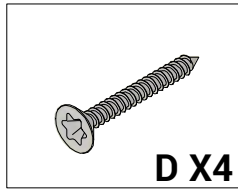


TOOLS NEEDED







TX 20

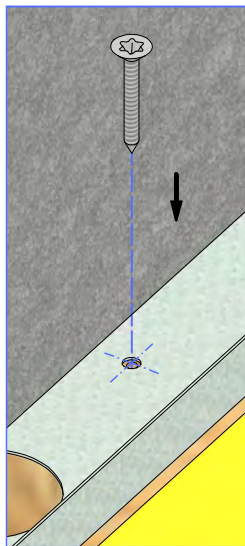

X4

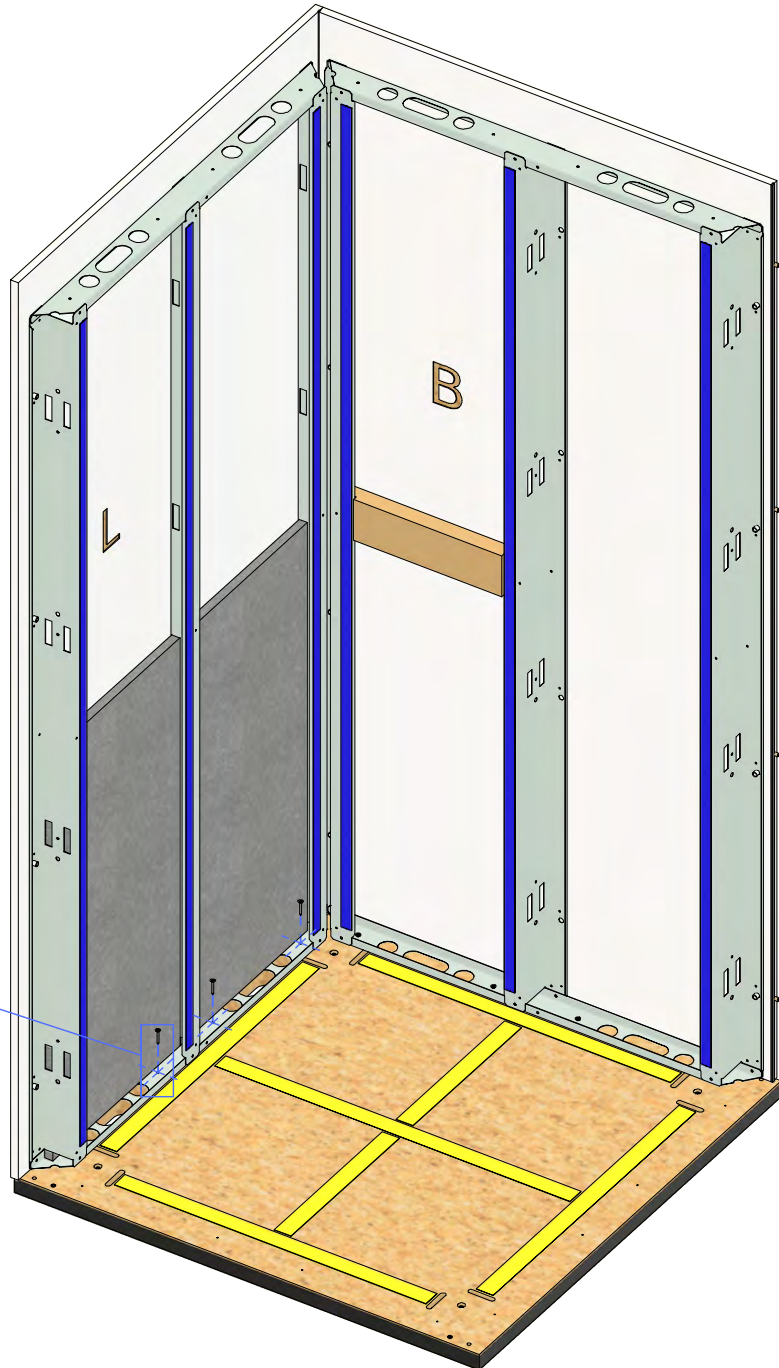


STEP 3.3

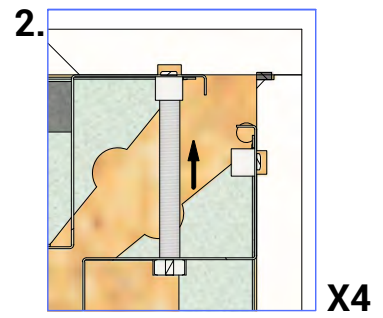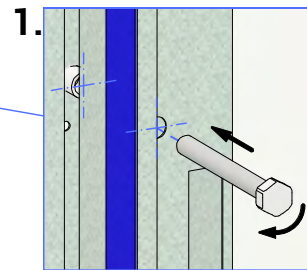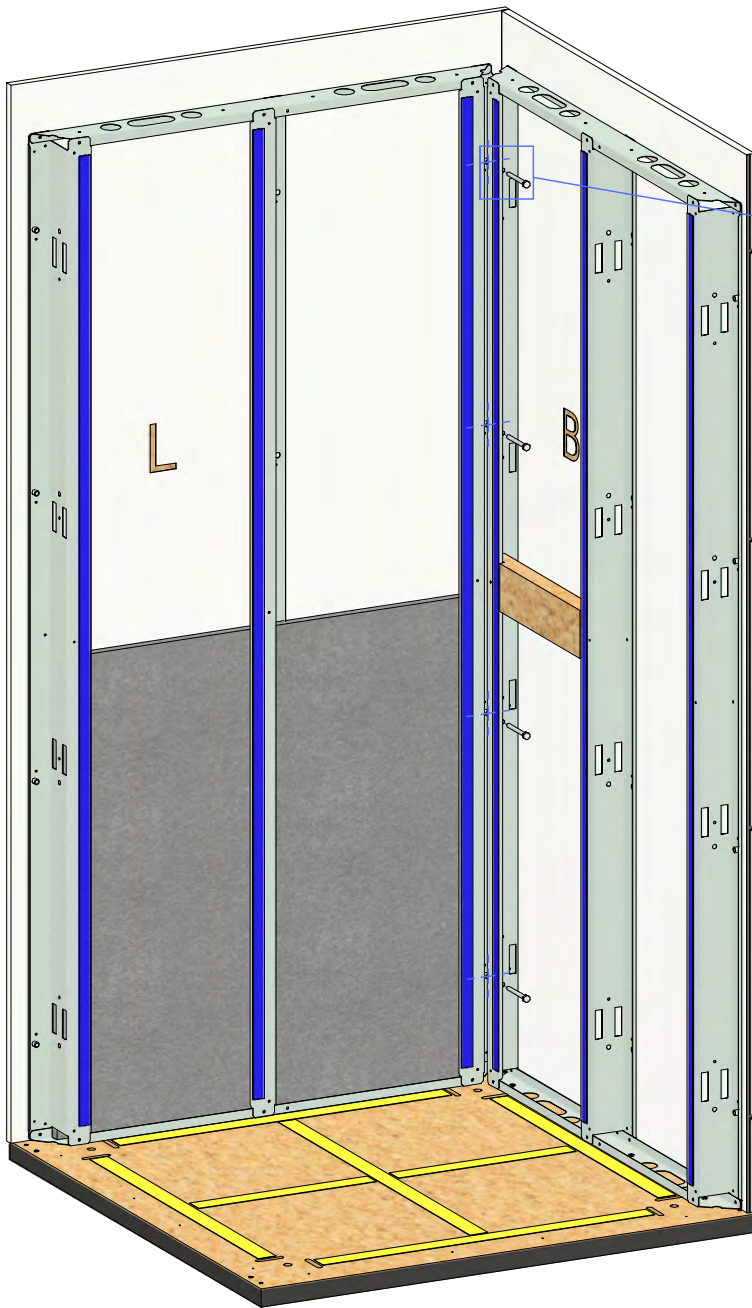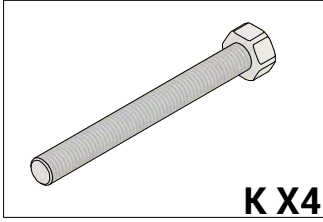


HAND-TIGHTEN BOLTS


STEP 4.1

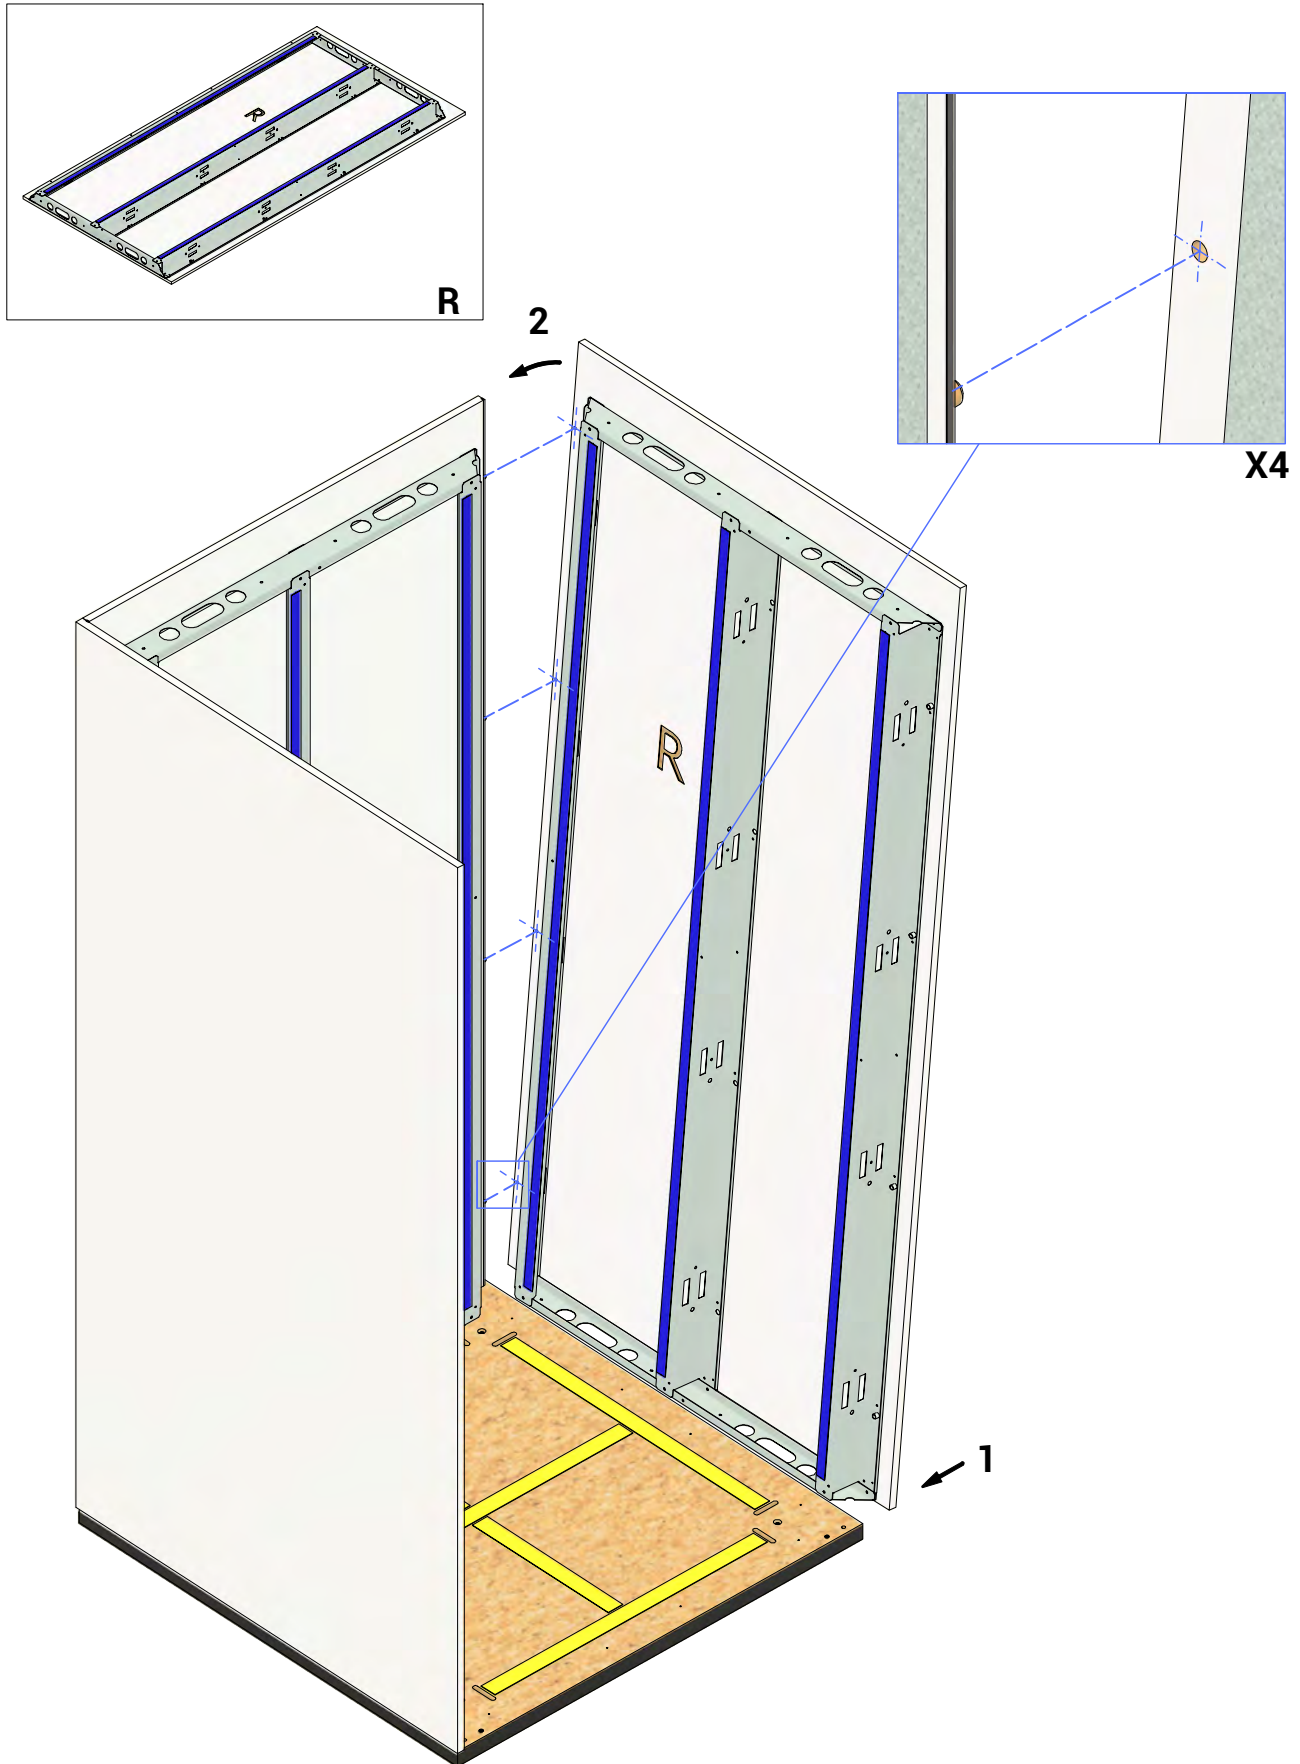



STEP 4.2

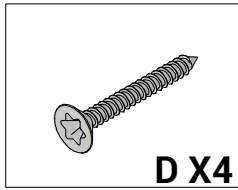

TOOLS NEEDED





TX 20

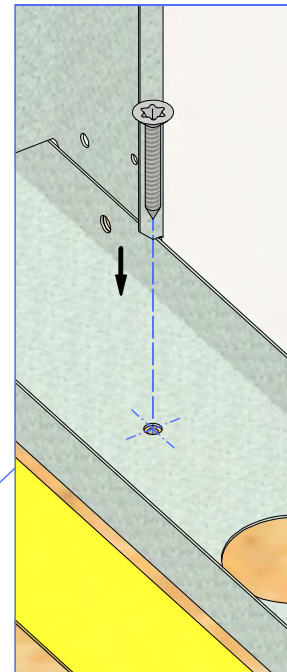
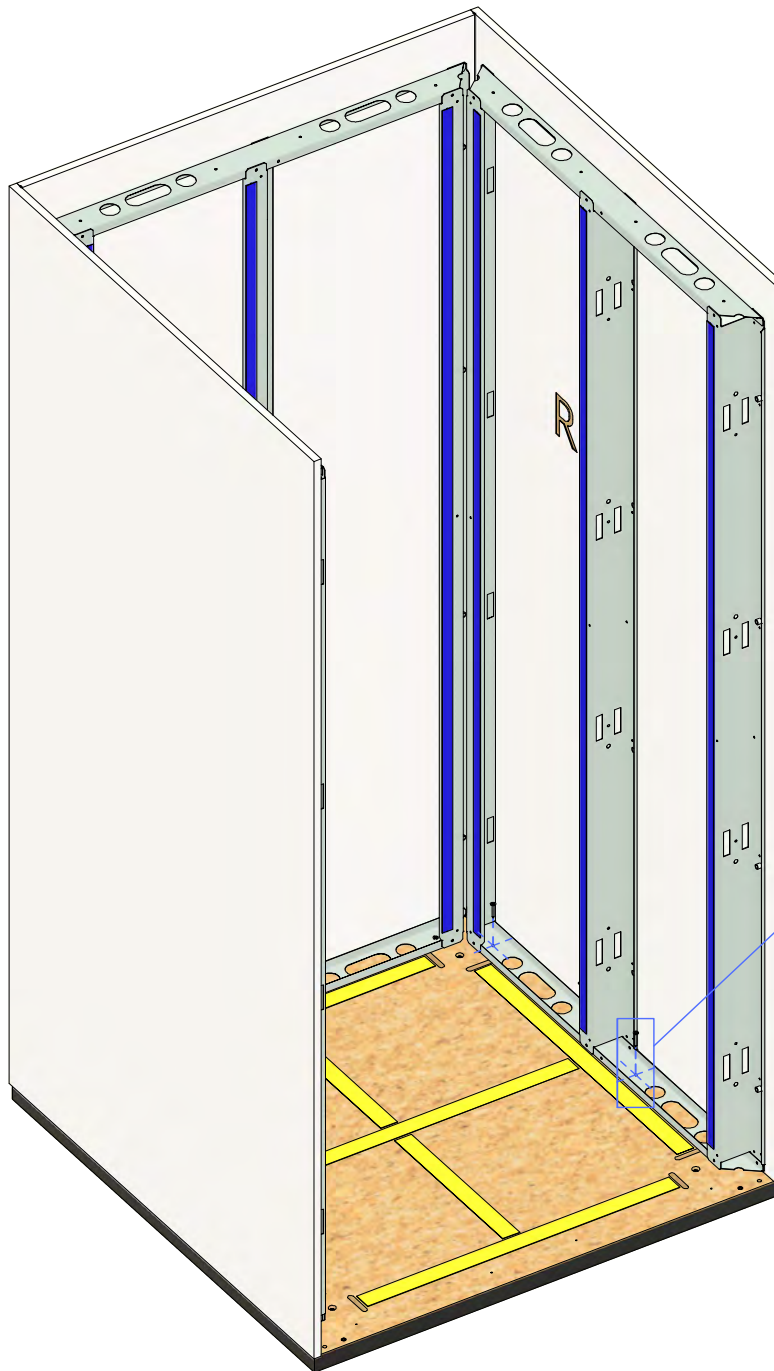


X4

STEP 4.3




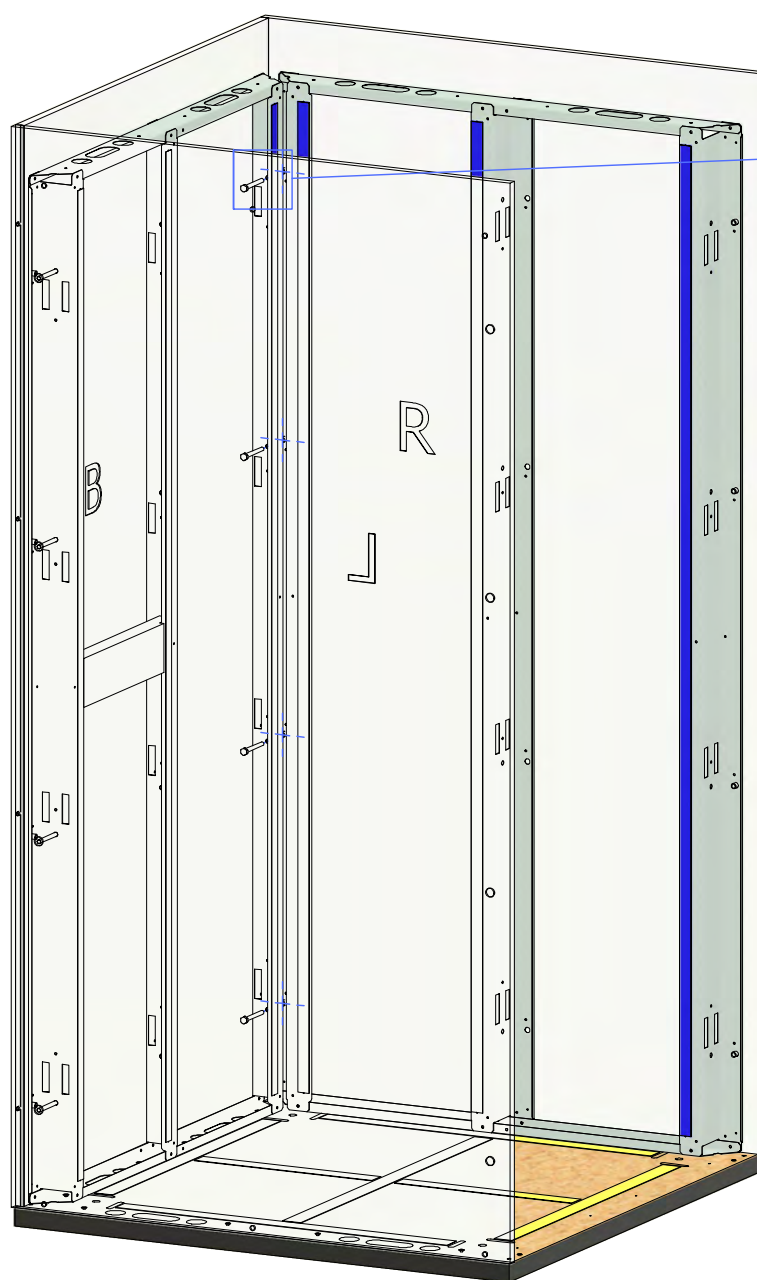
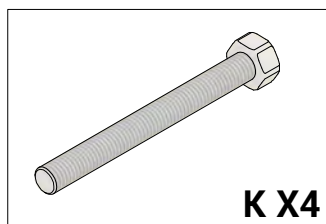


**HAND-TIGHTEN
BOLTS**

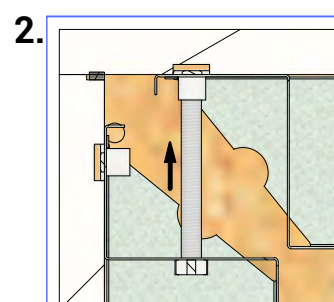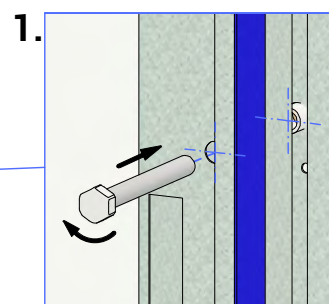



X4

STEP 5.1

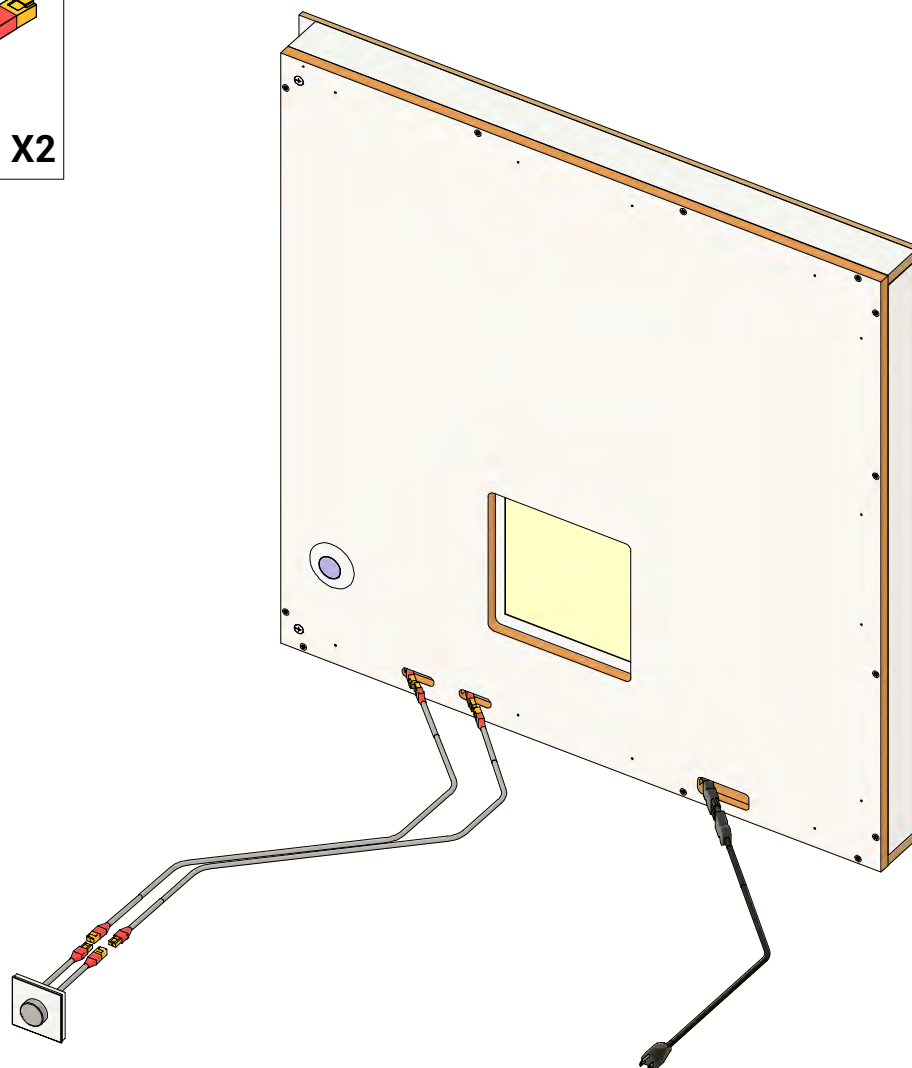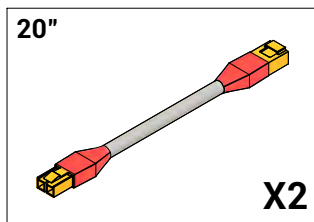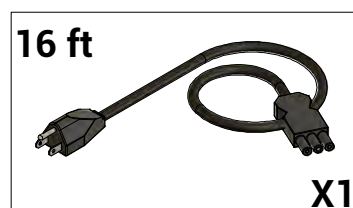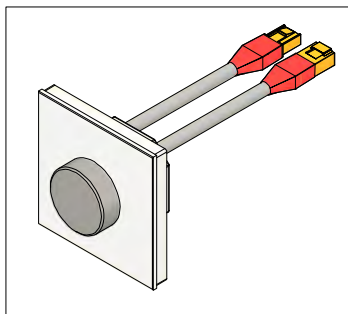
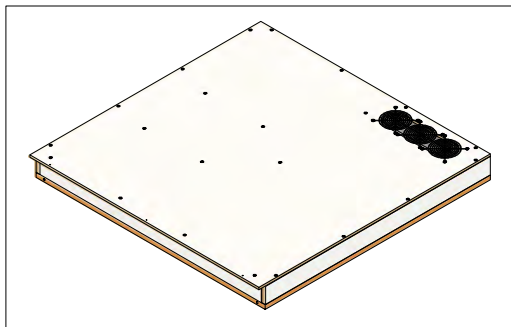


**CONNECT THE POWERCABLE AND THE DIMMER TO THE CEILING. PROVIDE
WALL POWER AND TEST THE LIGHTING AND VENTILATION.
UNPLUG AND CONTINUE.**

STEP 5.2

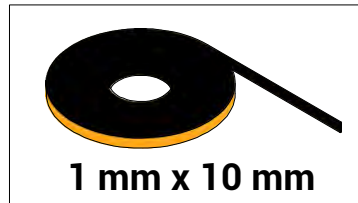
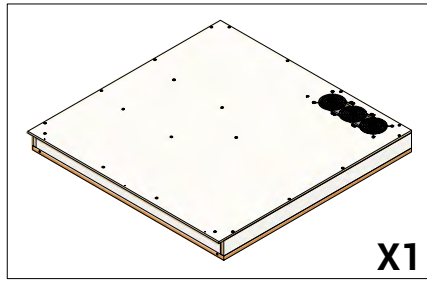


TOOLS NEEDED

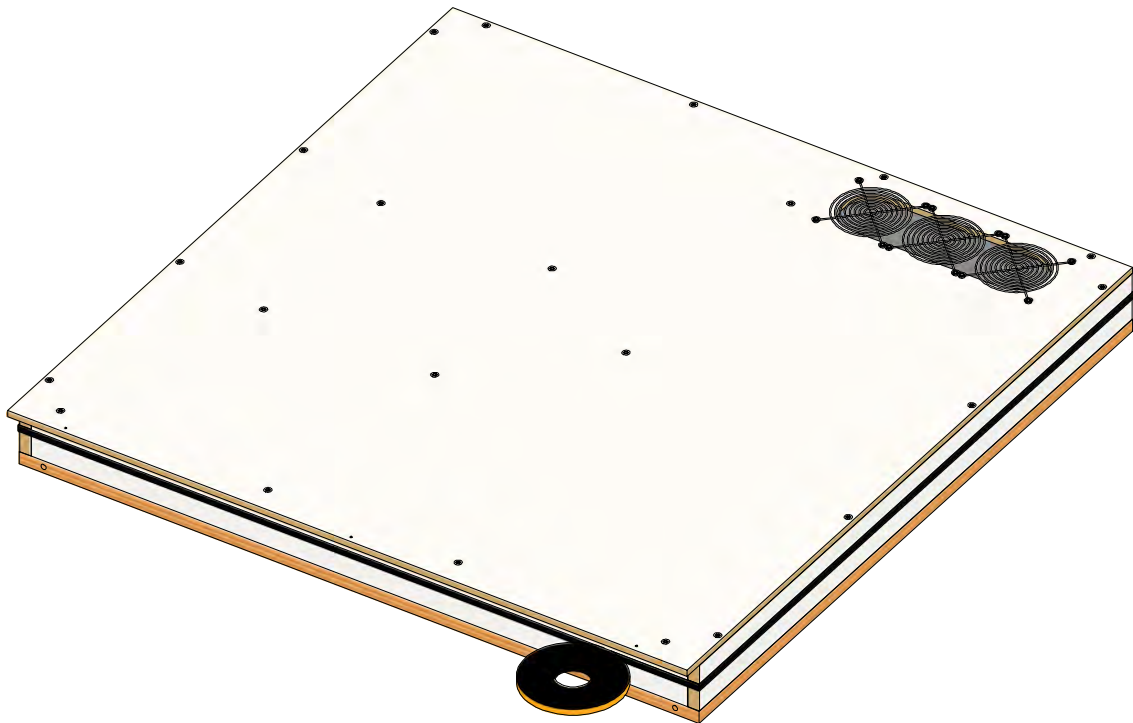


**APPLY BLACK ADHESIVE RUBBER GASKET
UNIFORMLY AROUND ALL 4 SIDES OF THE CEILING**


STEP 5.3

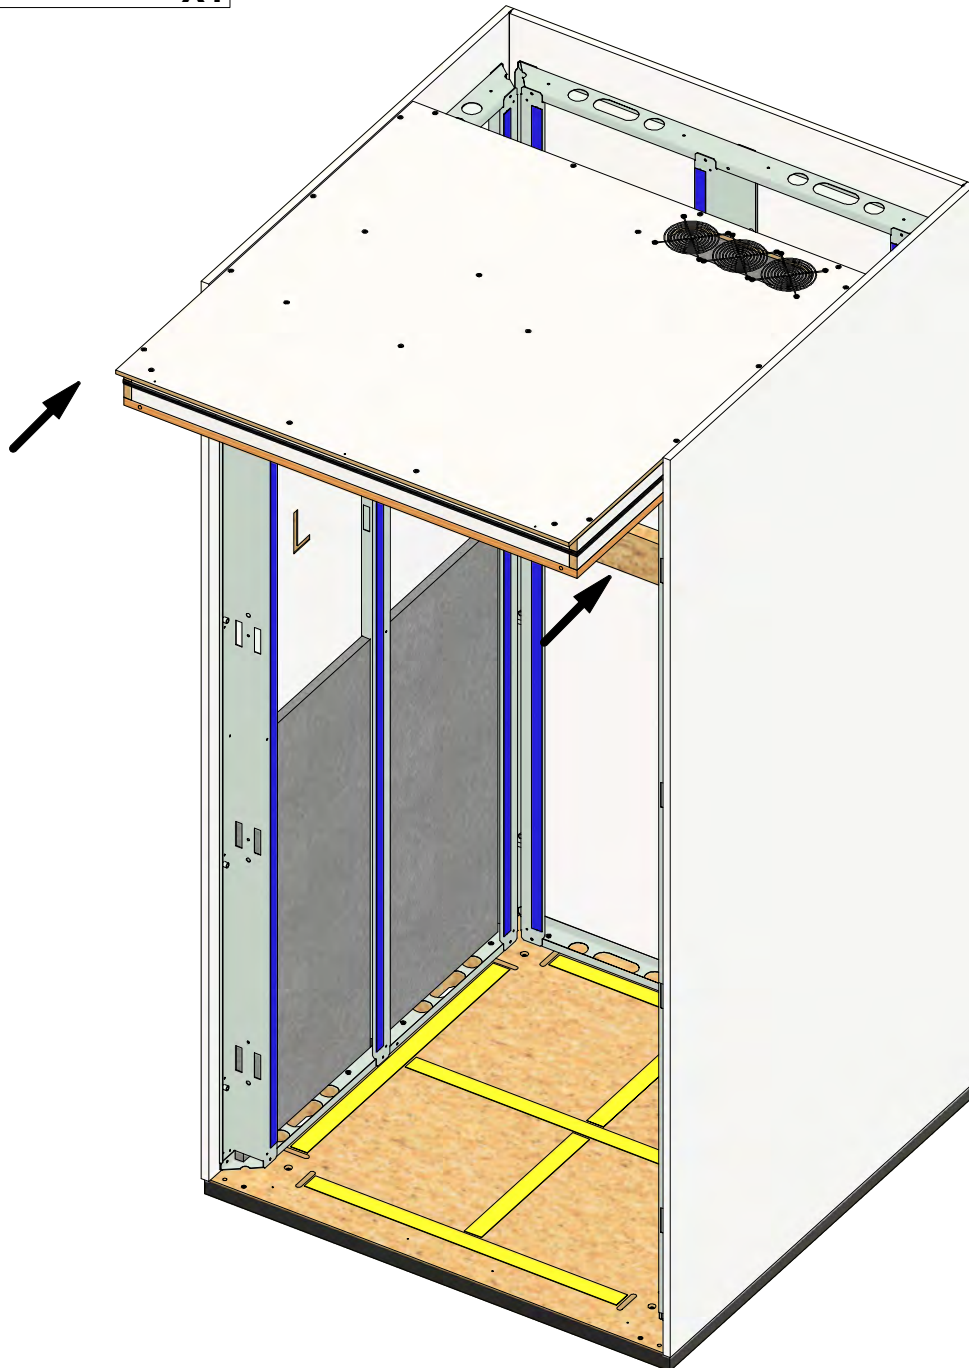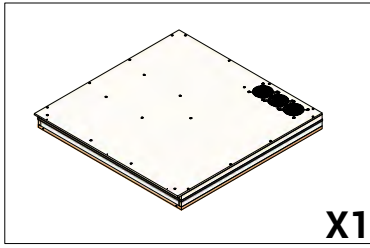


STEP 5.4

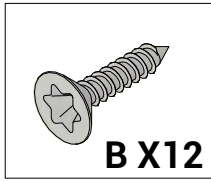


TOOLS NEEDED



TX 20

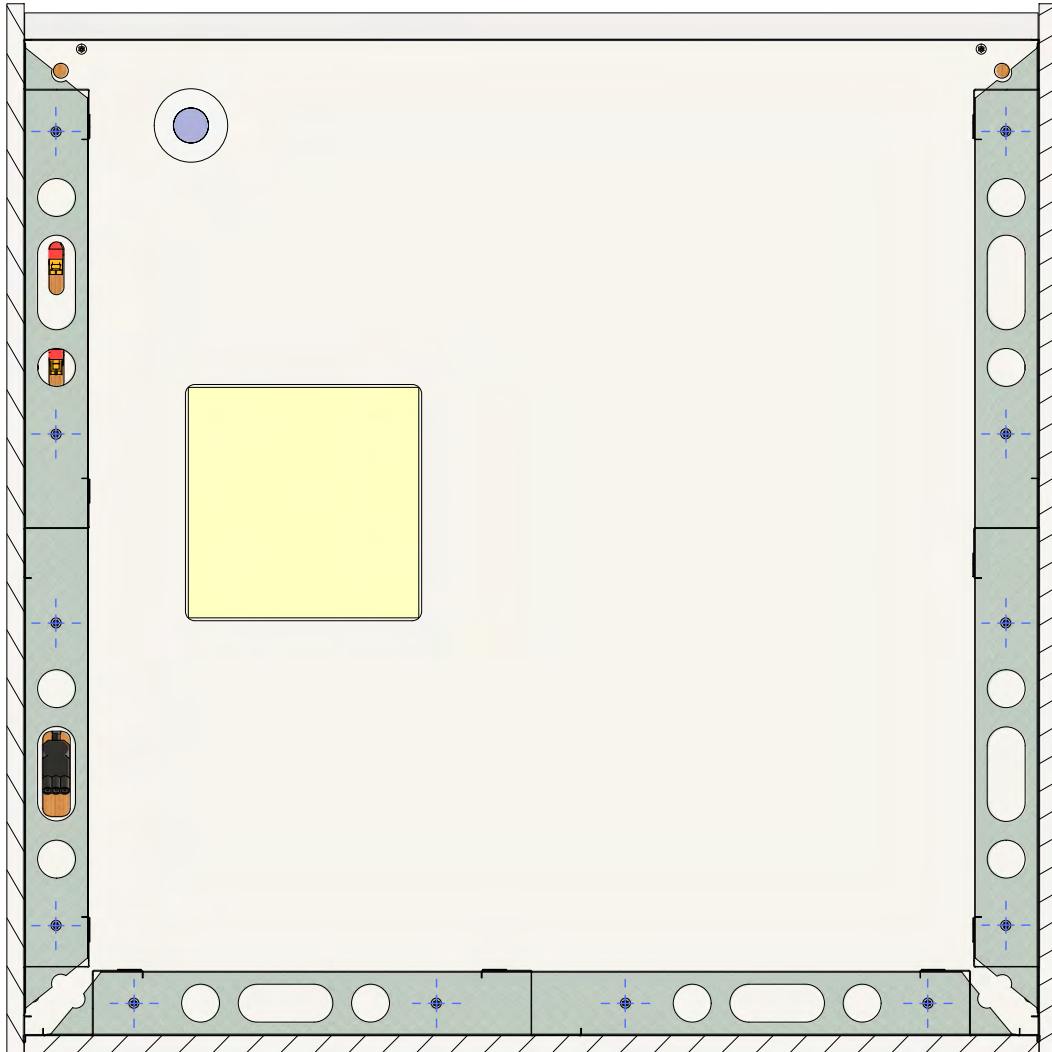


**HOLES ON THE UNDERSIDE OF THE CEILING WILL ALIGN WITH THE CORRESPONDING HOLES ON
TOP OF THE METAL FRAME**


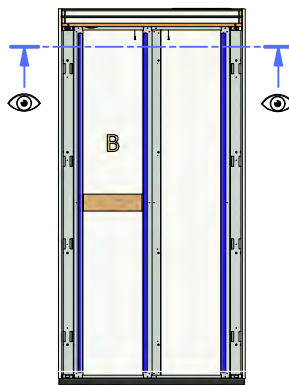


STEP 5.4

TOOLS NEEDED





Socket 13mm

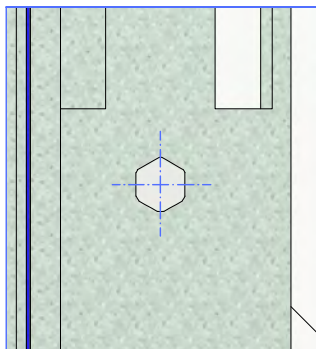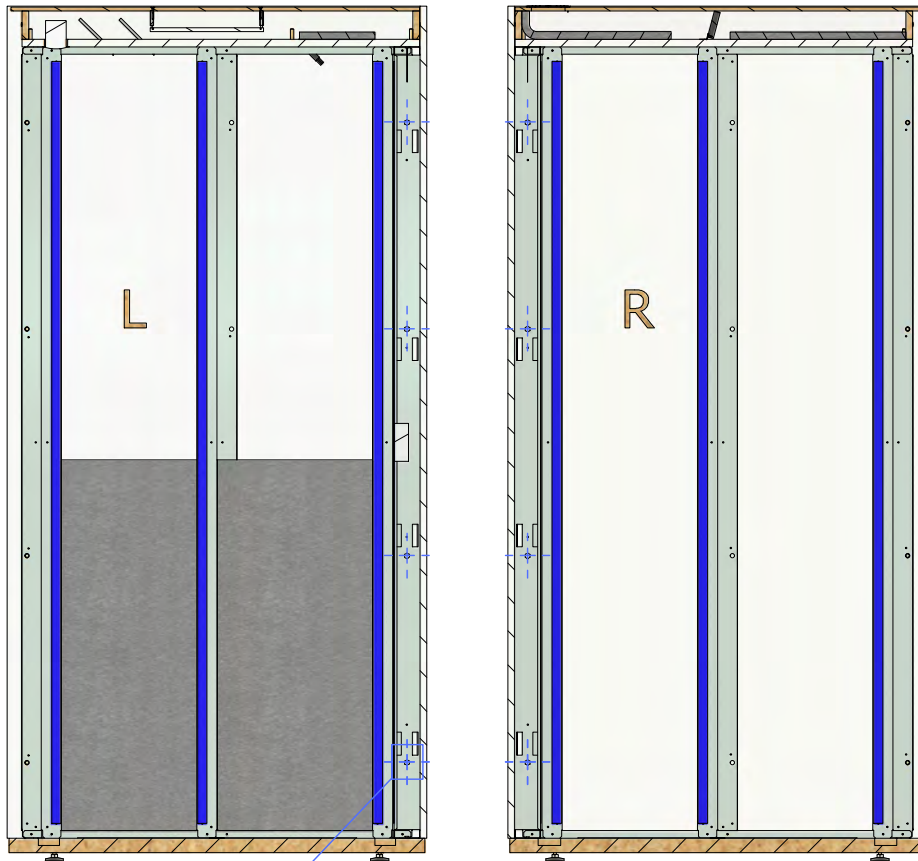




X8

TIGHTEN THE BOLTS AT THE BACK CORNERS GRADUALLY SO THAT THE SEAM ON THE BACK OF THE POD IS UNIFORM AND TIGHT. DO NOT OVERTIGHTEN AS IT CAN SEPERATE THE FRAME FROM THE WALL.



STEP 6.1

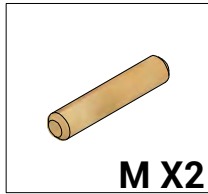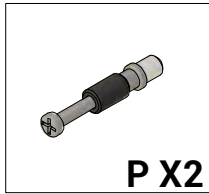



TOOLS NEEDED

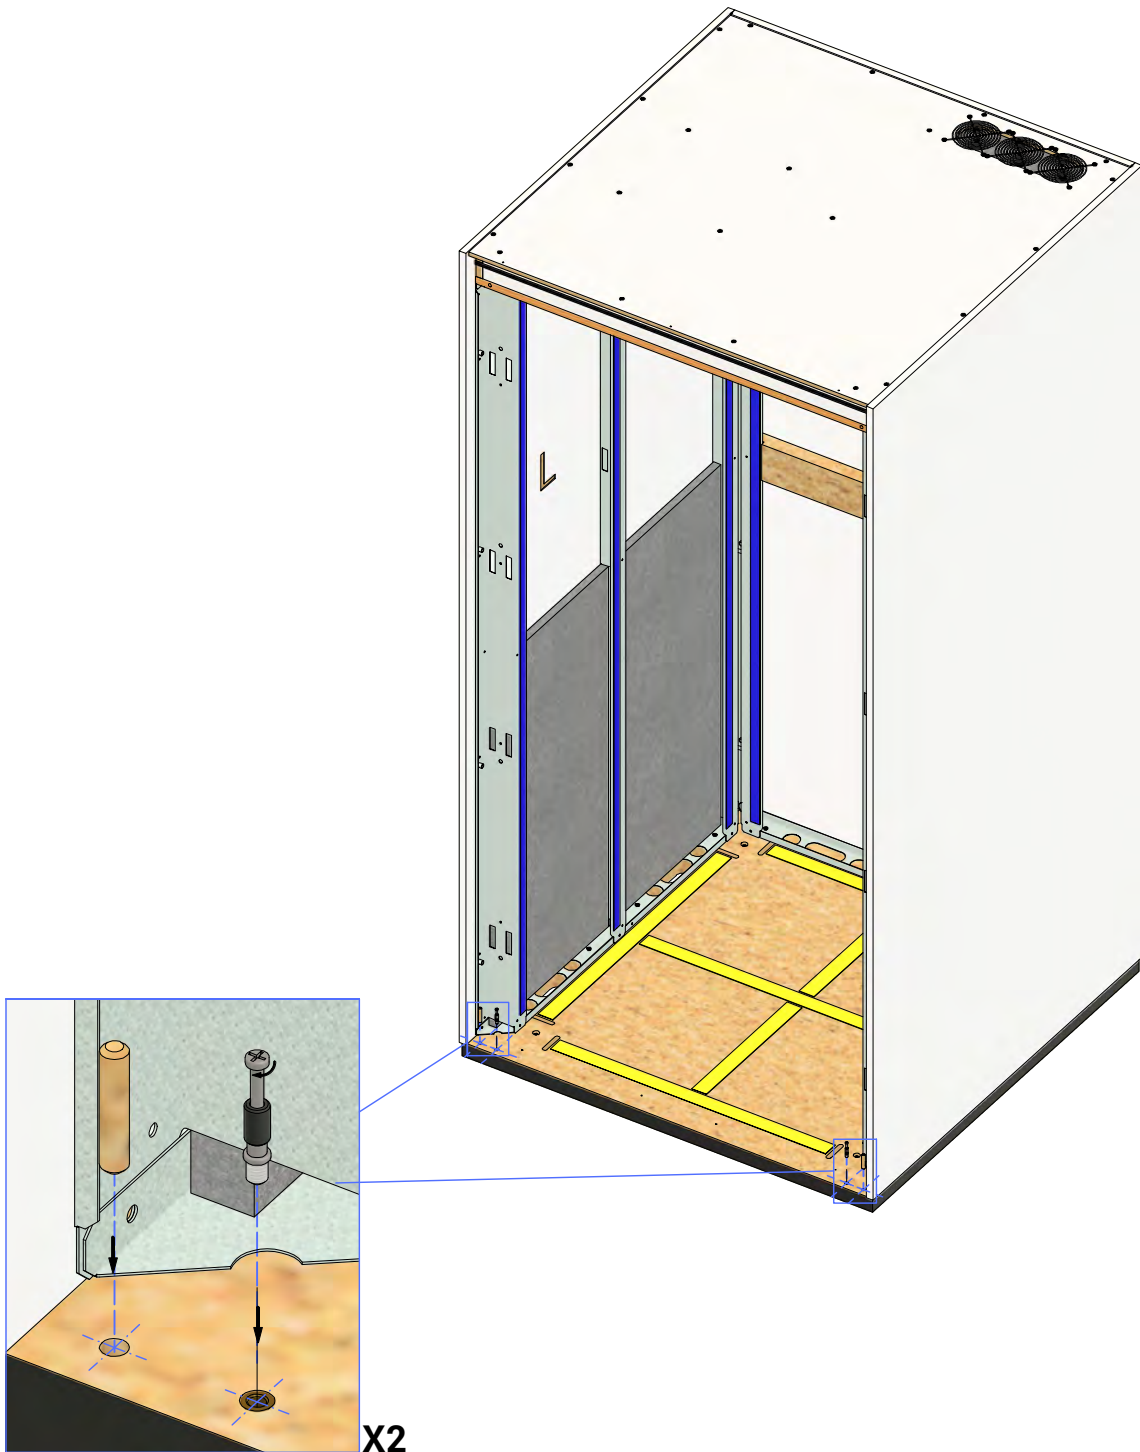

STEP 6.2

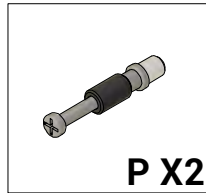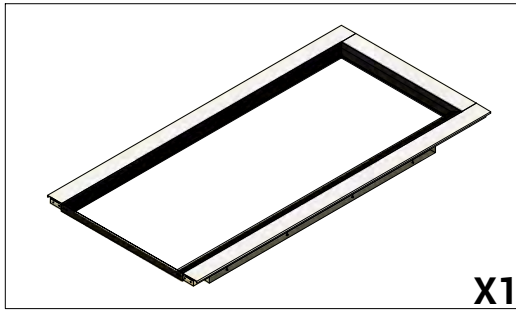


TOOLS NEEDED

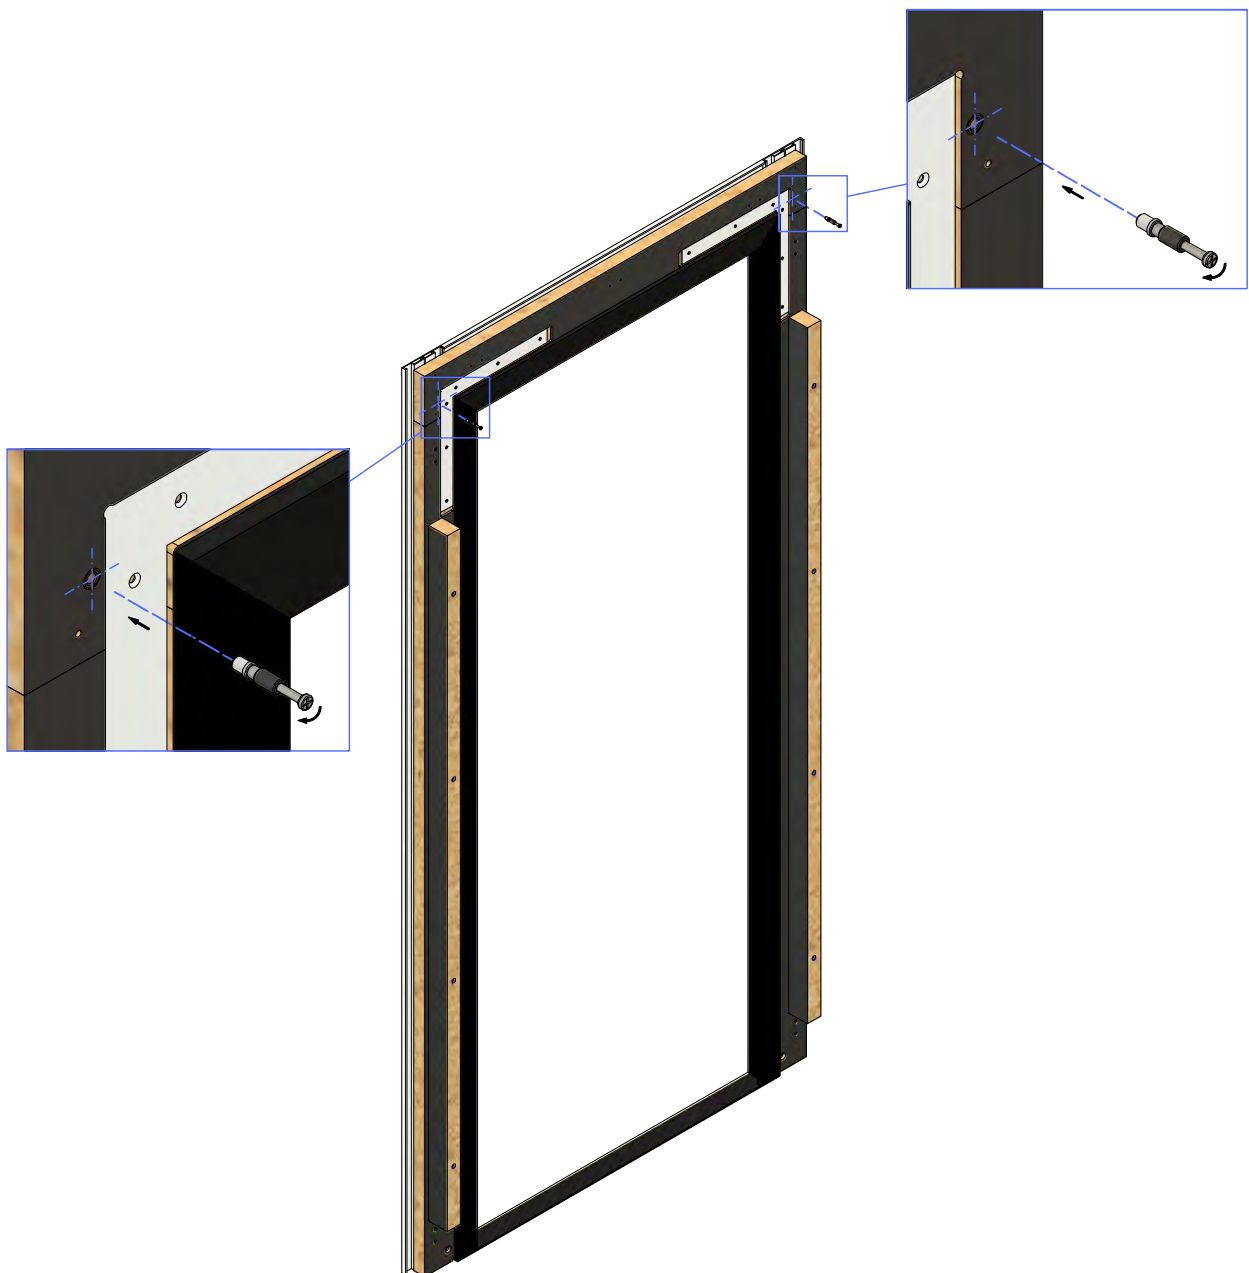


STEP 6.3


1.

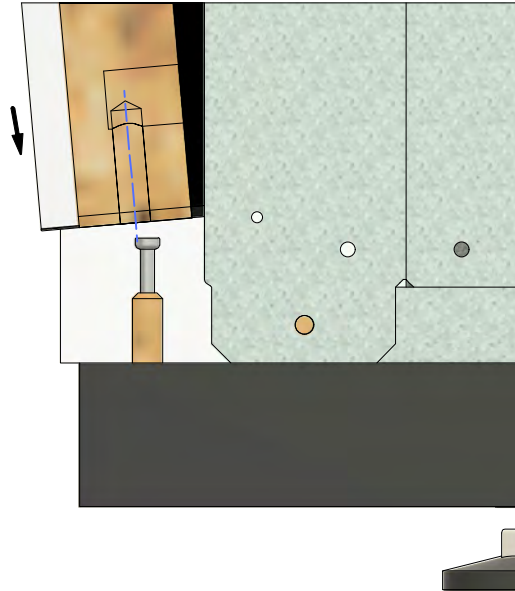


2.

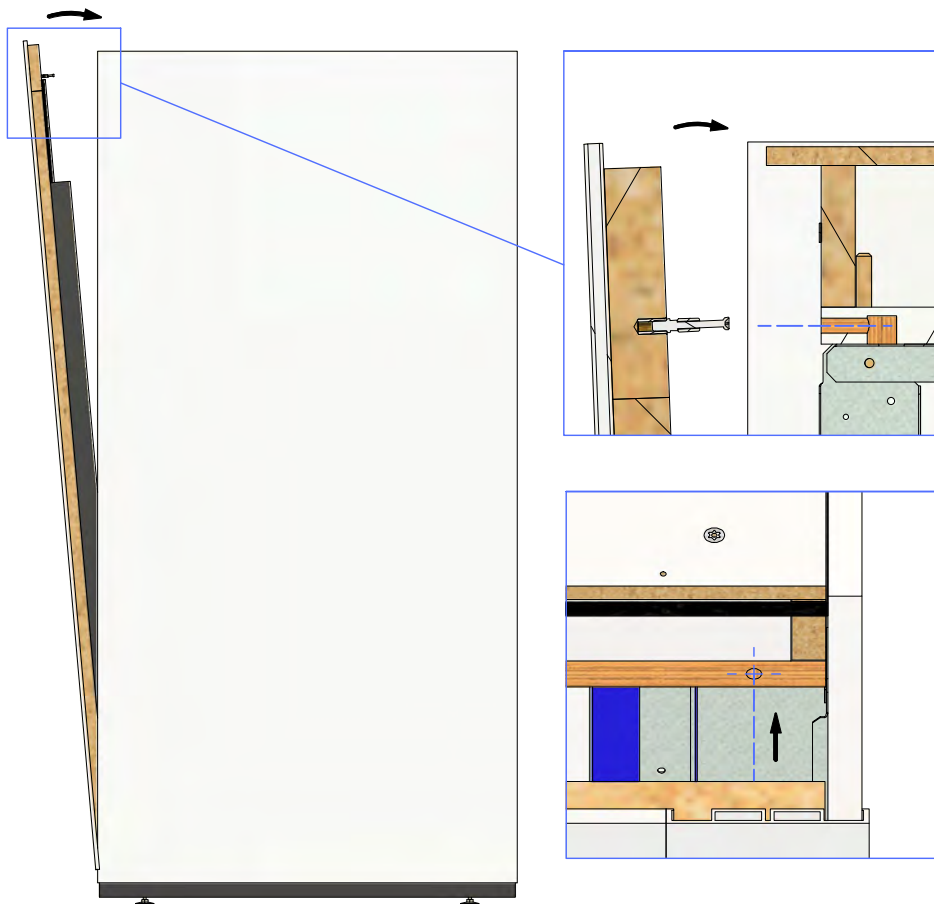


STEP 6.4

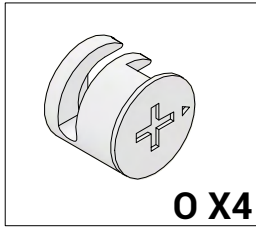






TOOLS NEEDED




PH 2

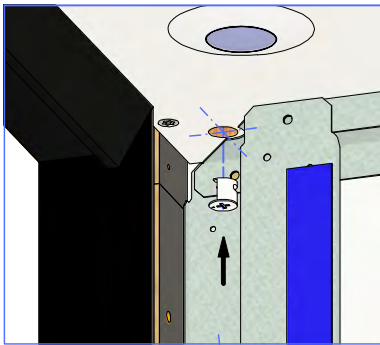


INSERT & TURN x4

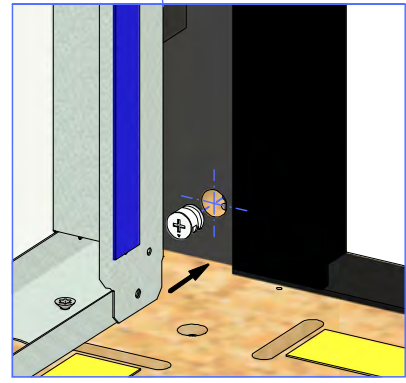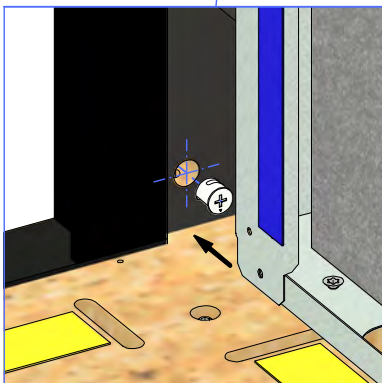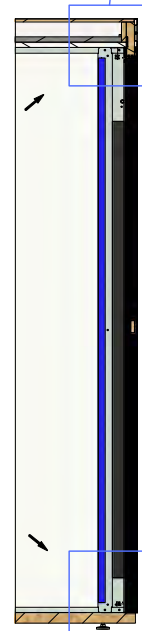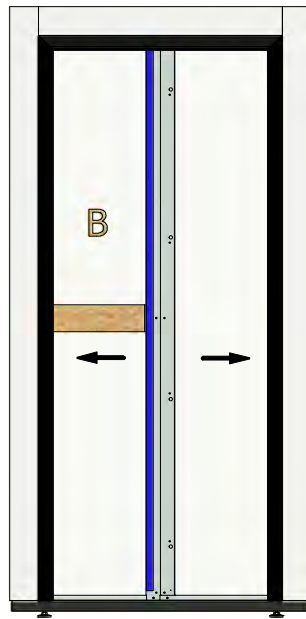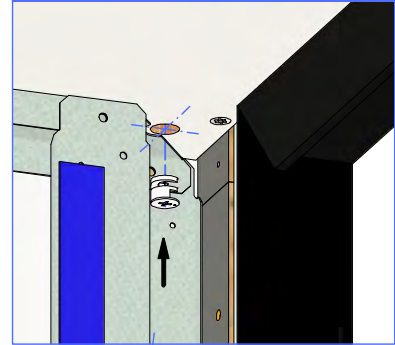



STEP 6.5

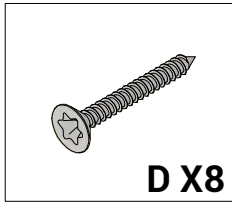

TOOLS NEEDED




TX 20

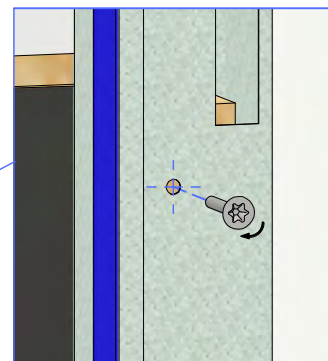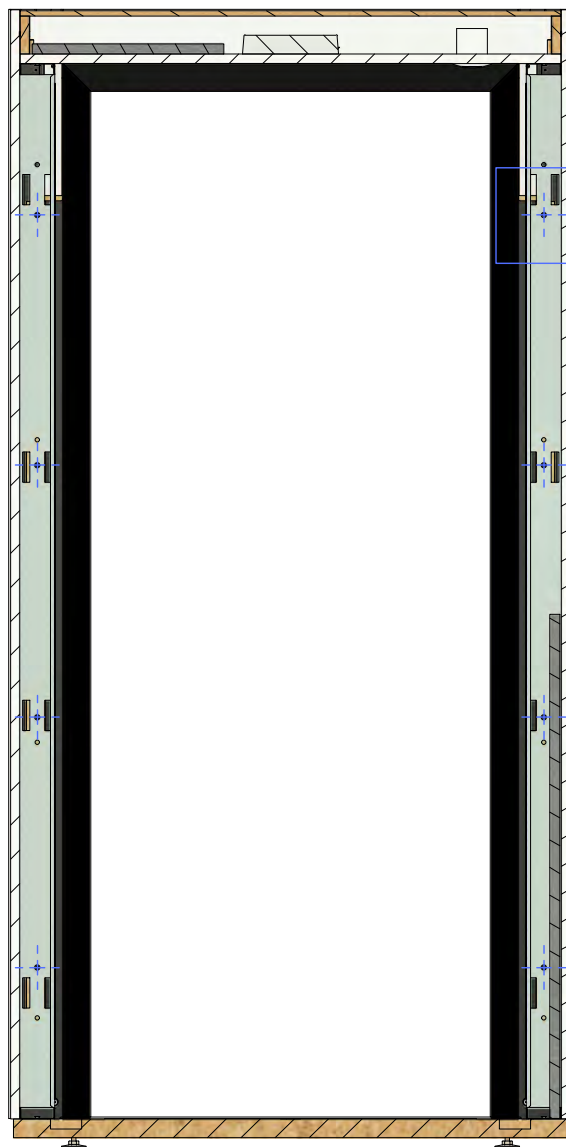


X8

SCREW TO WOOD




STEP 6.6

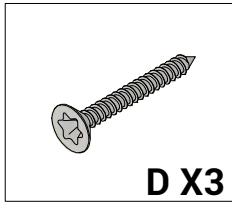





TOOLS NEEDED







TX 20

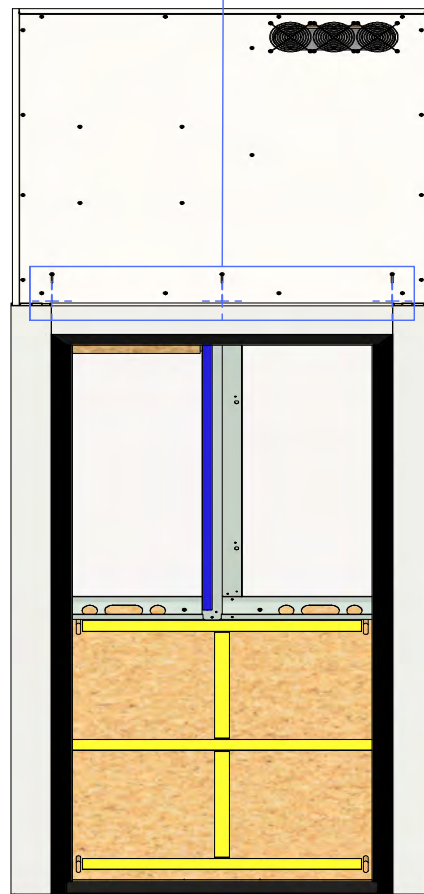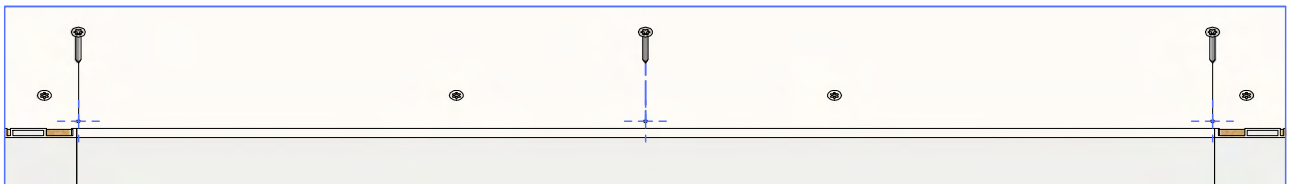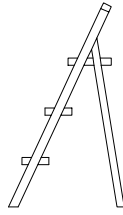




STEP 7.1

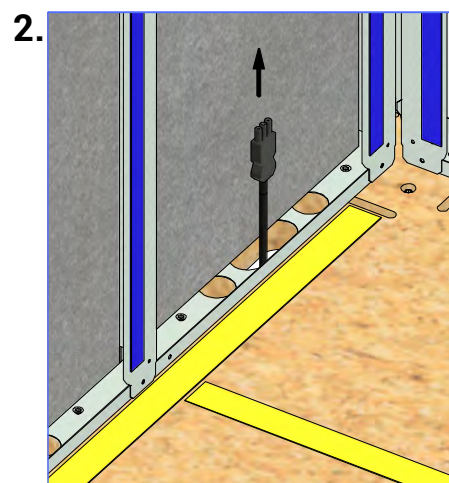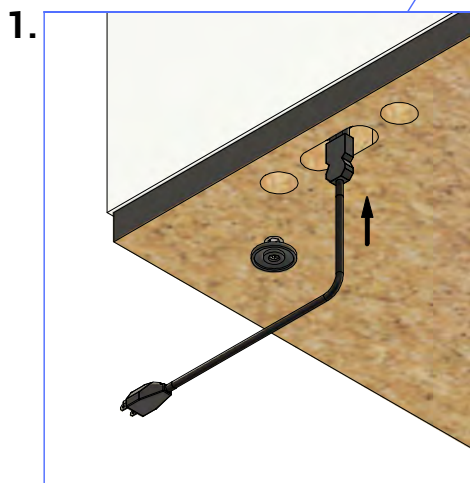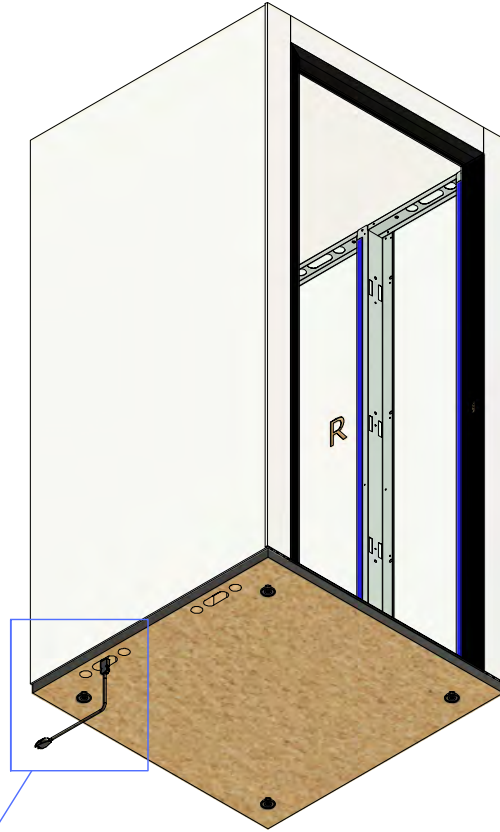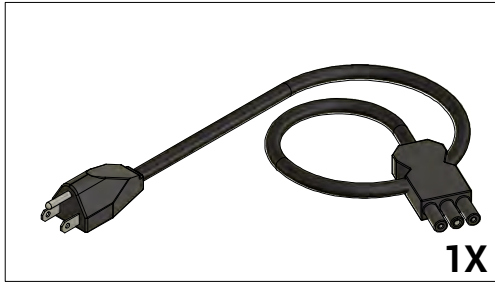


STEP 7.2

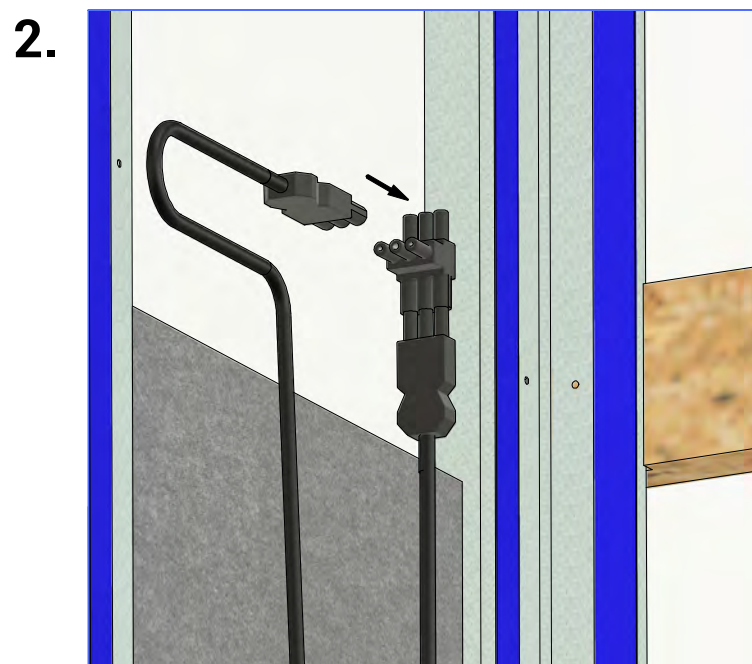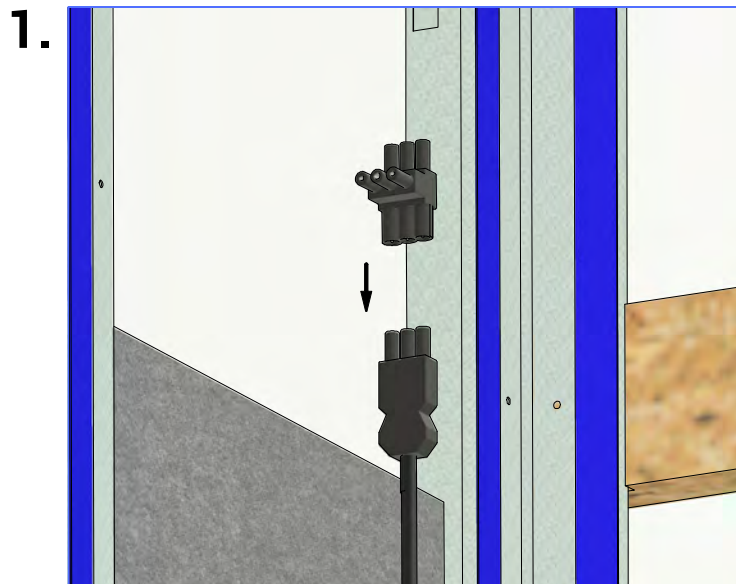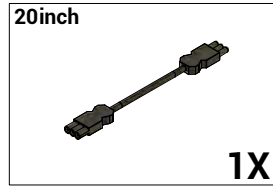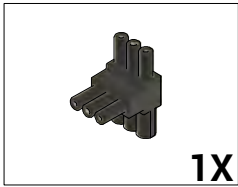




STEP 7.3

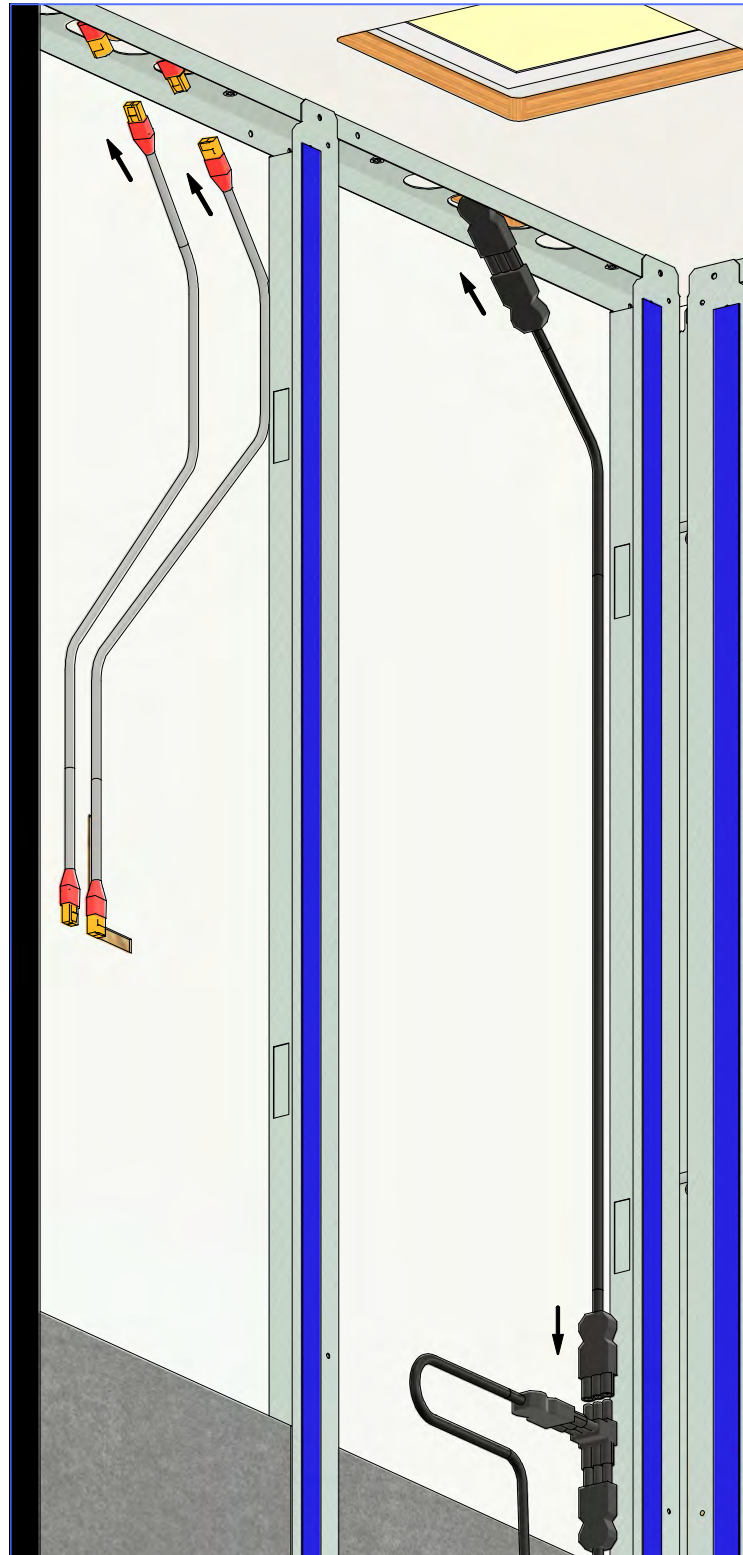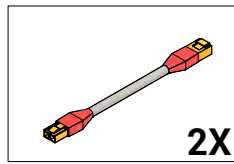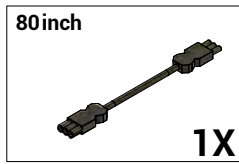


STEP 8.1

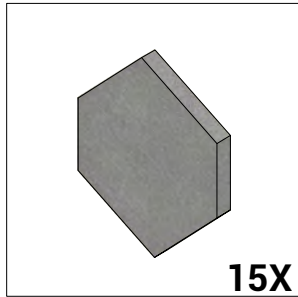


TOOLS NEEDED

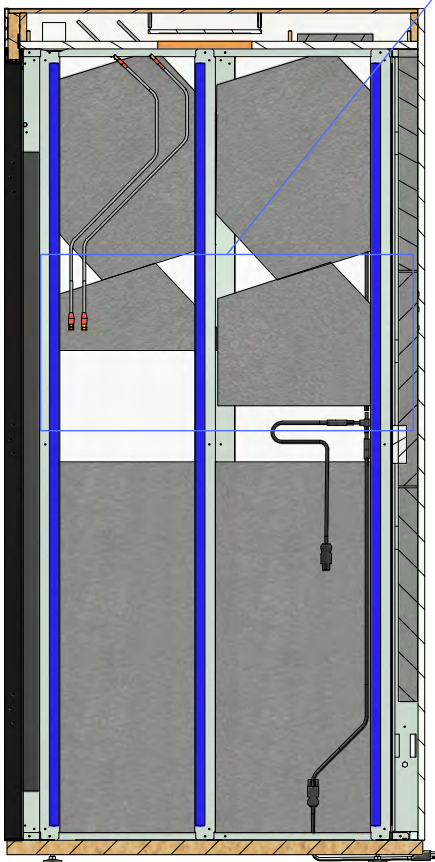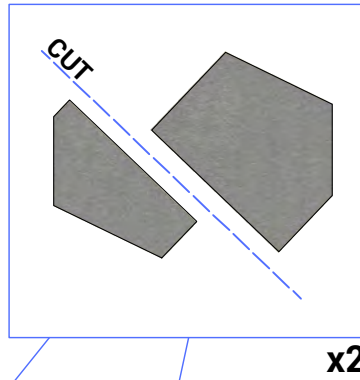

LEFT

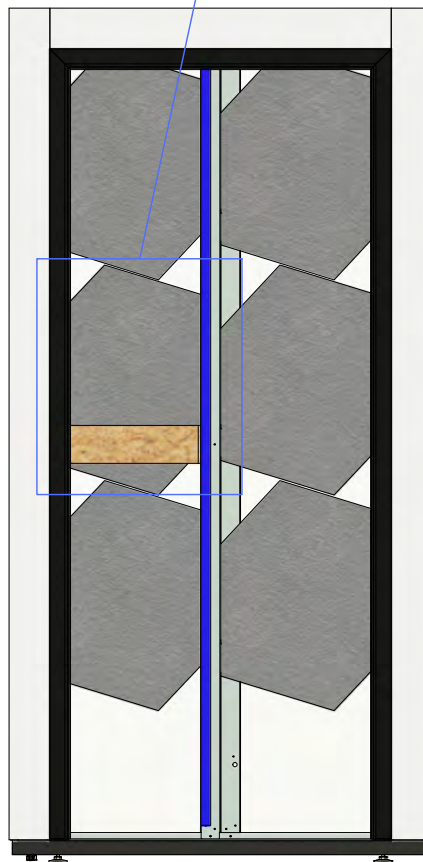


BACK

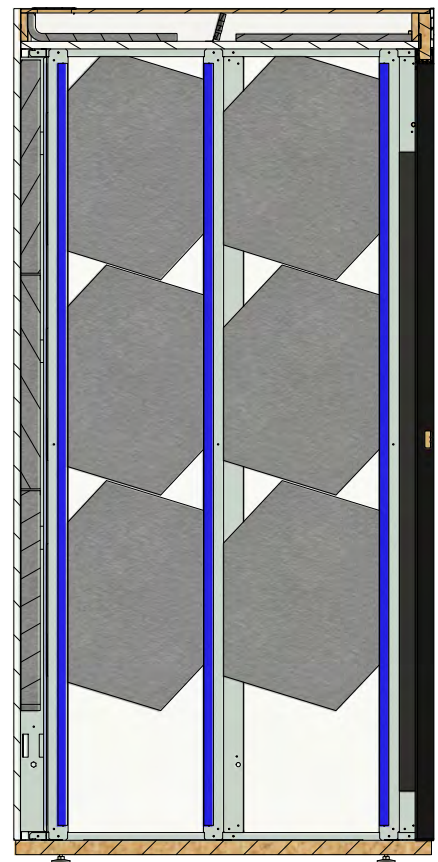


RIGHT

STEP 9.1

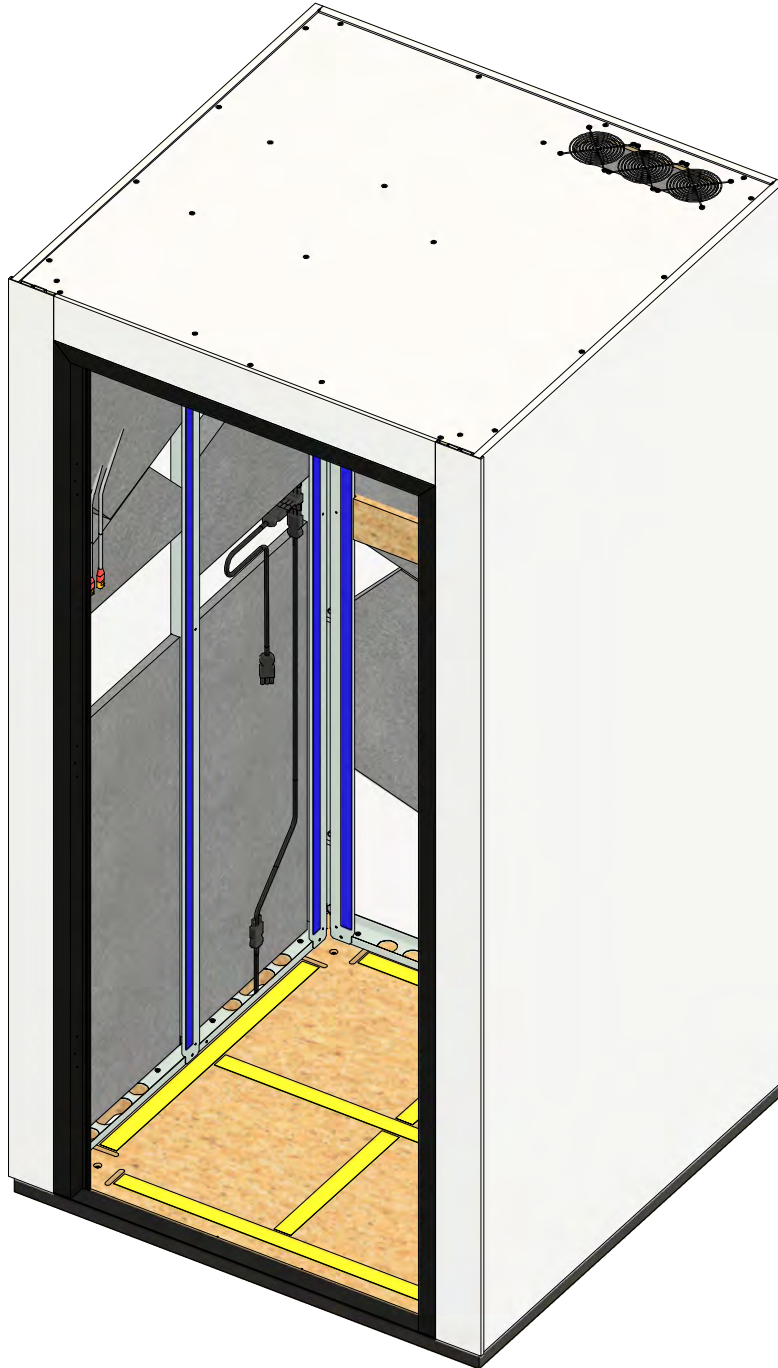


**MOVE TO LOCATION
RE-LEVEL (STEP 1.2)**

STEP 10.1

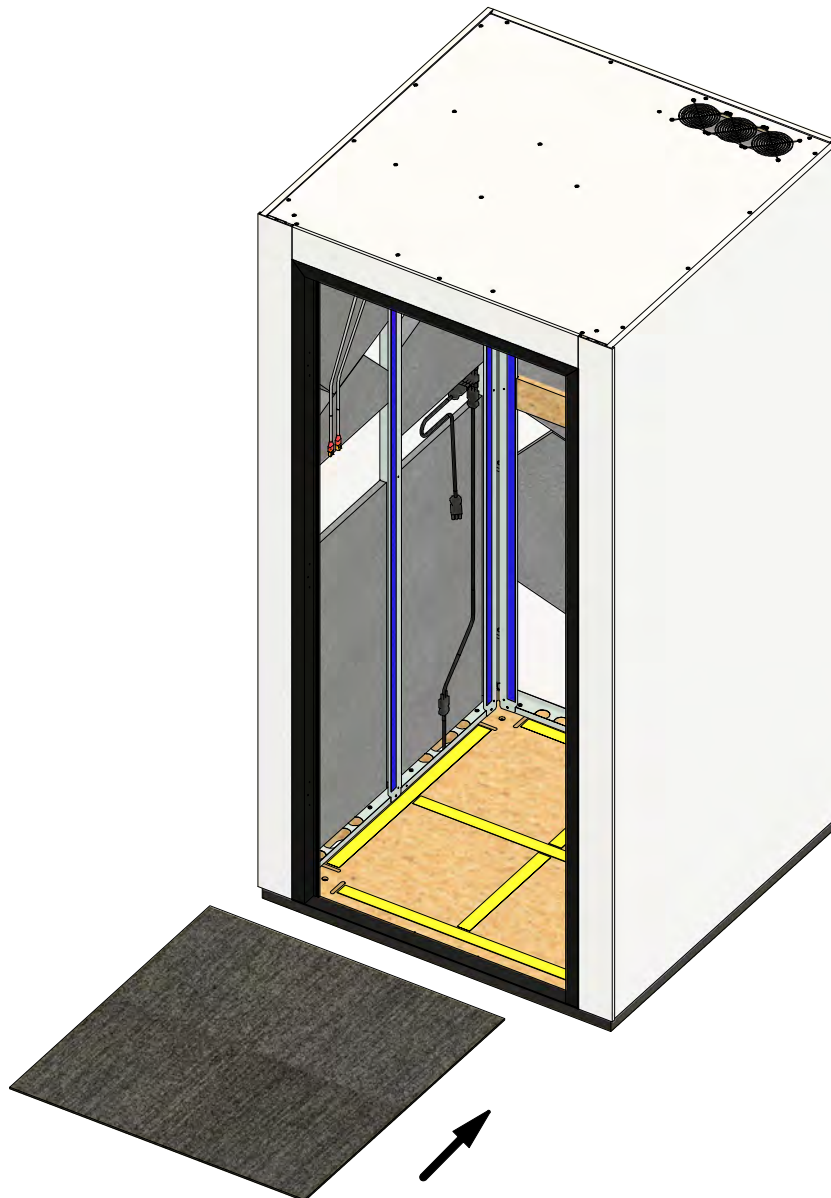


**TEST FIT THE CARPET. ARROWS POINT TO THE REAR.
ONCE FIT IS CONFIRMED, REMOVE ADHESIVE BACKING FROM FLOOR TAPE AND INSTALL.**



STEP 11.1

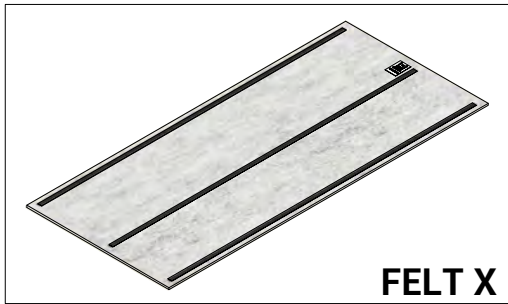

↑ TOP ↑
722 X 00 T
PETAC X -
CALL 1 BACK
932 x 2088mm

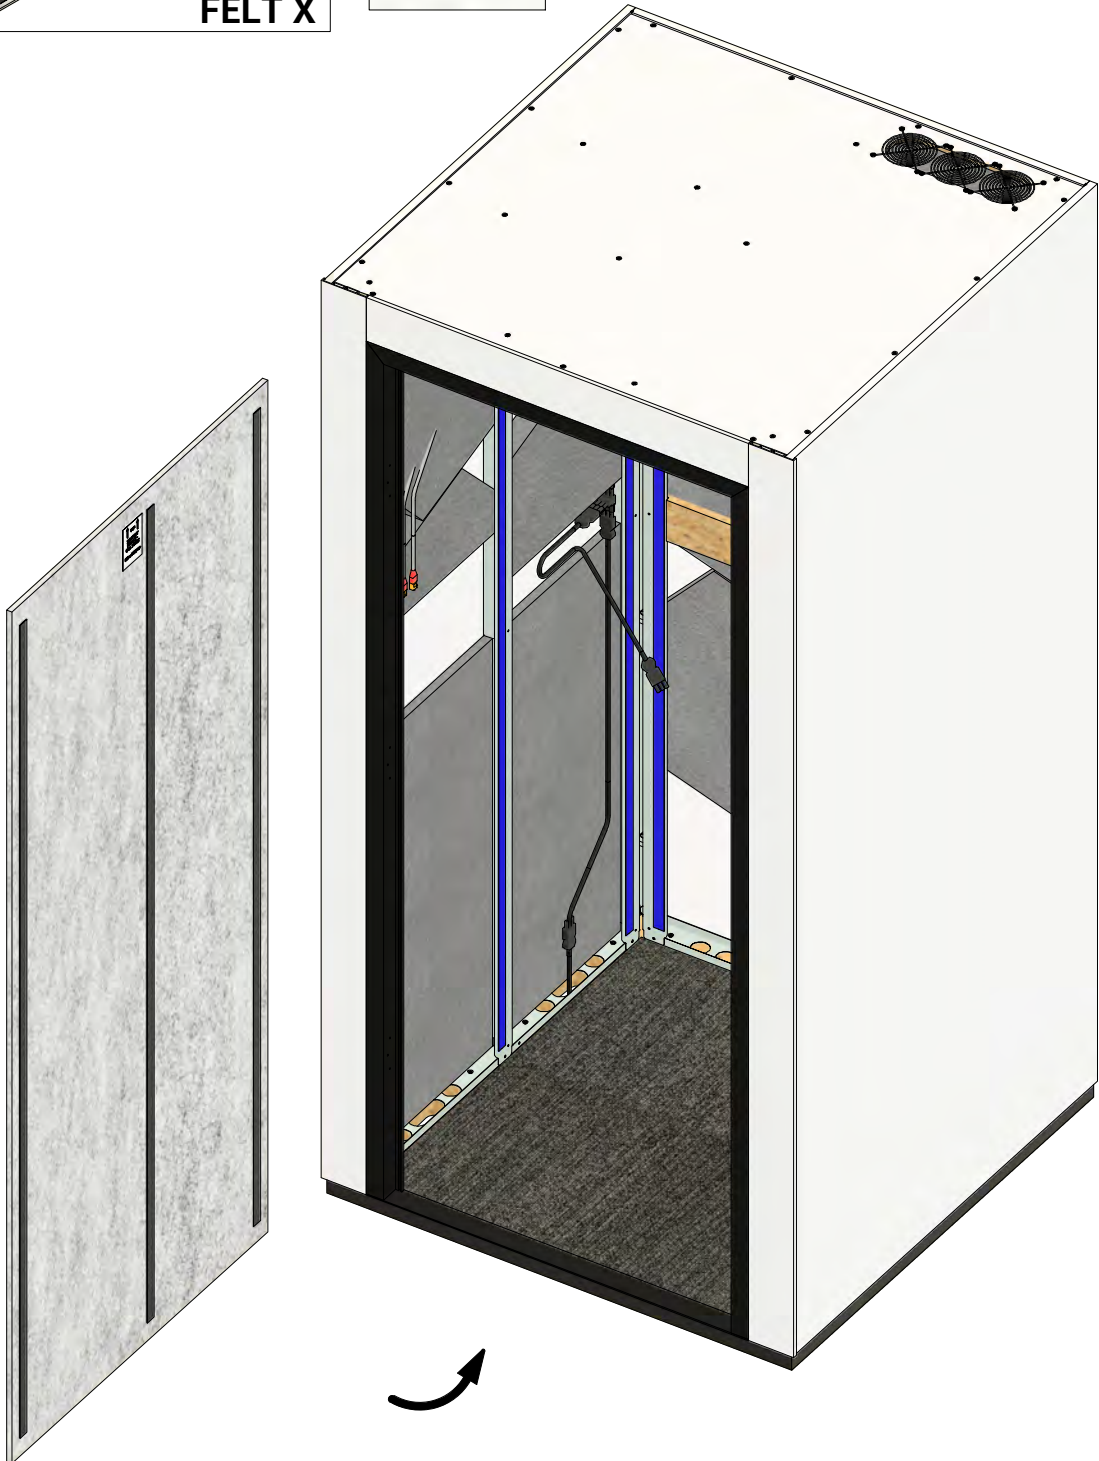


STEP 11.2

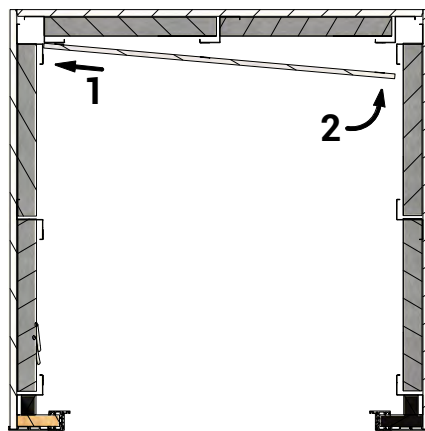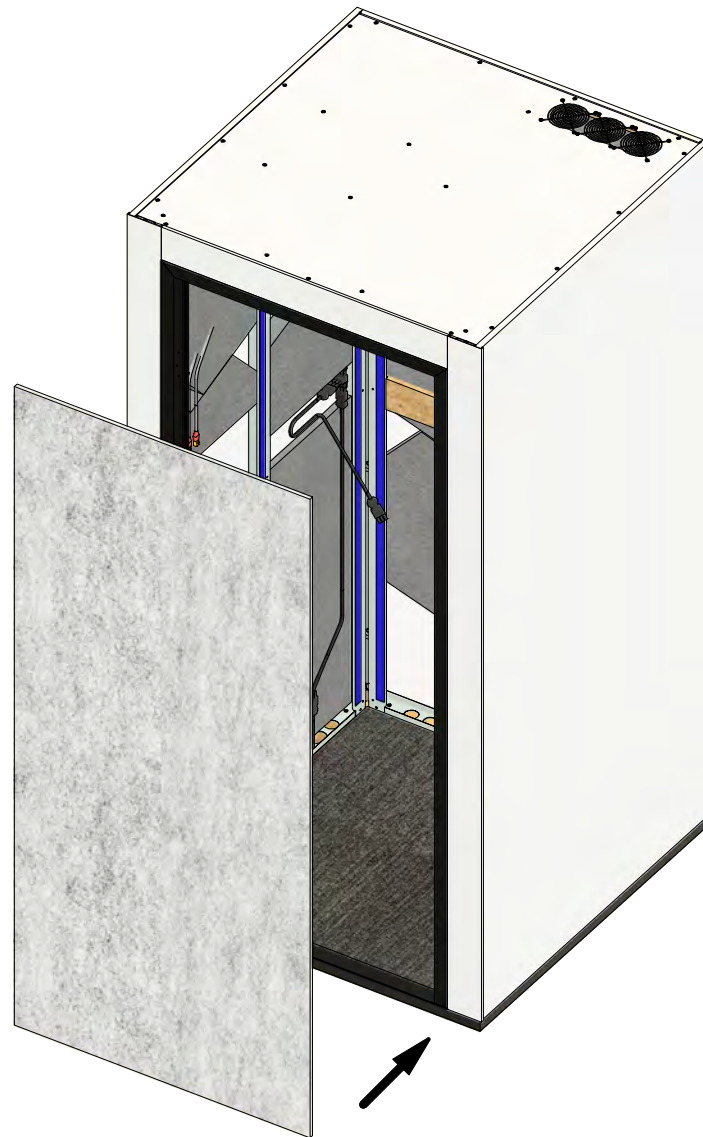


**INSTALL THE PETAC SO THE SEAM IS
TIGHT AND EVEN AT THE TOP**

STEP 11.3

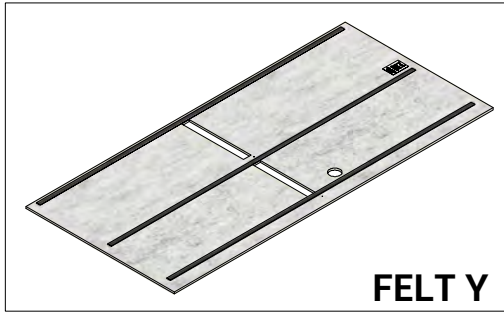


↑ TOP ↑
722 Y 00 T
PETAC Y -
CALL 1 LEFT



971 x 2088mm
3 cut-outs

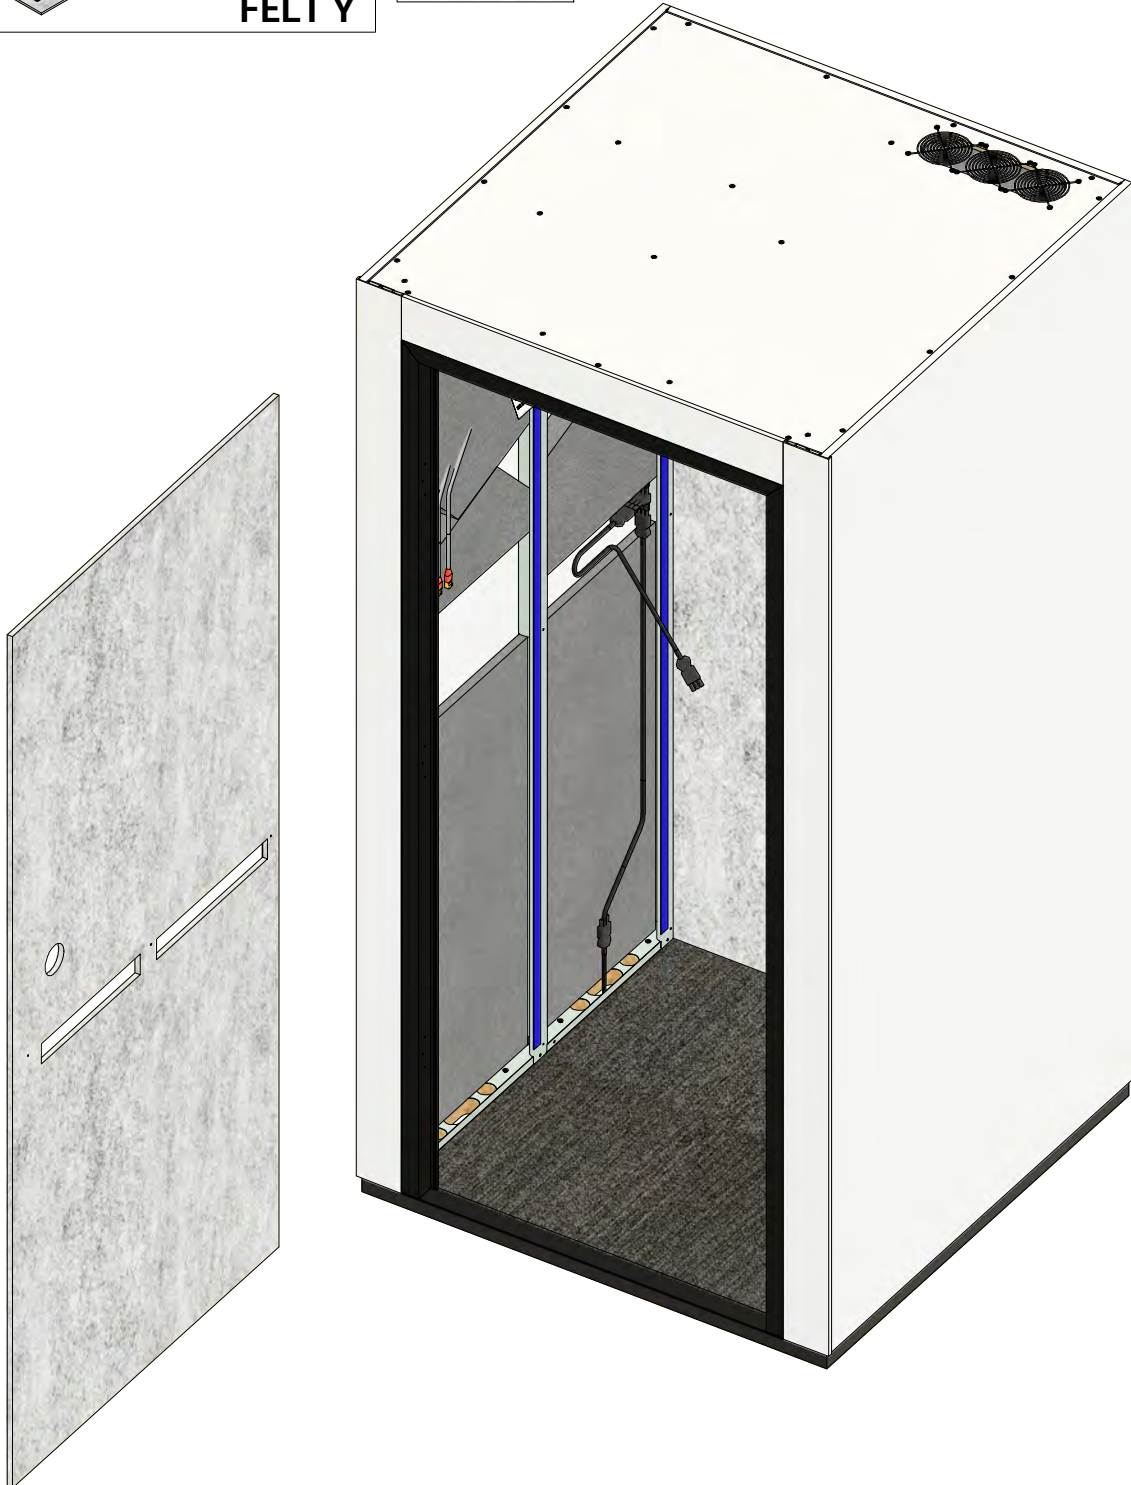

STEP 11.4

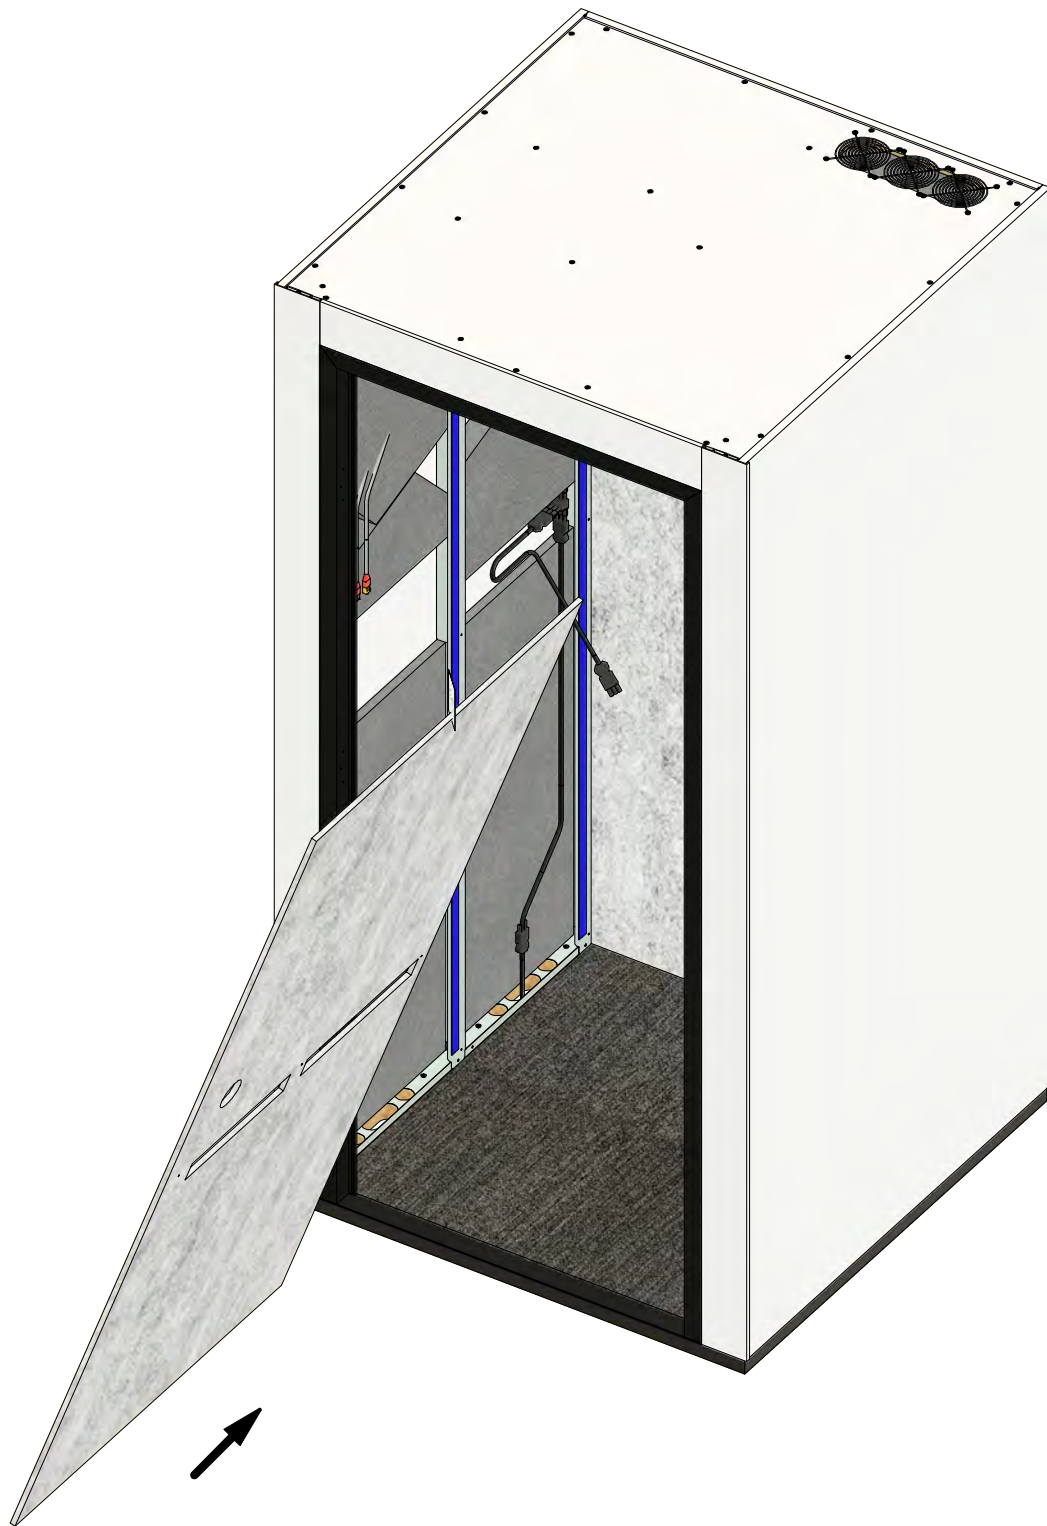


STEP 11.5

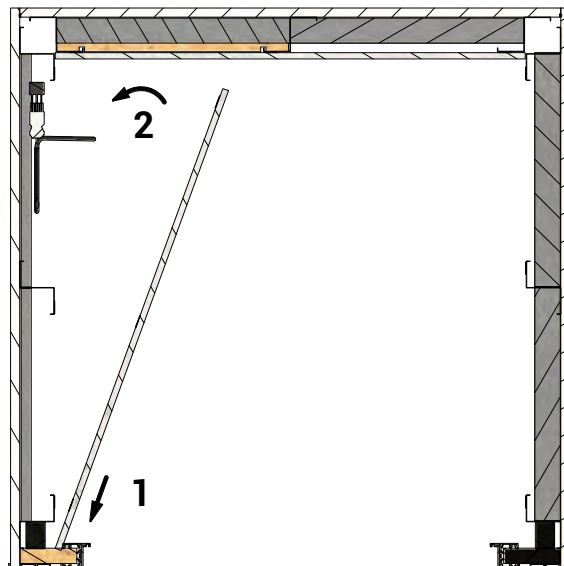
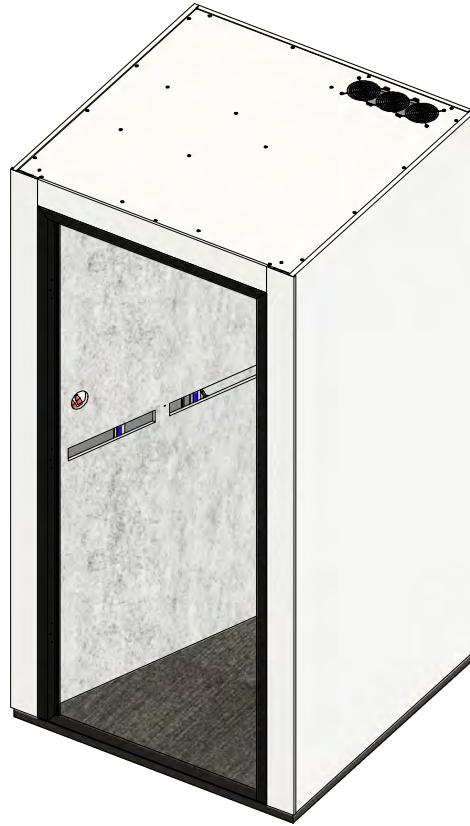


**INSTALL THE PETAC SO THE SEAM IS
TIGHT AND EVEN AT THE TOP**



STEP 11.6

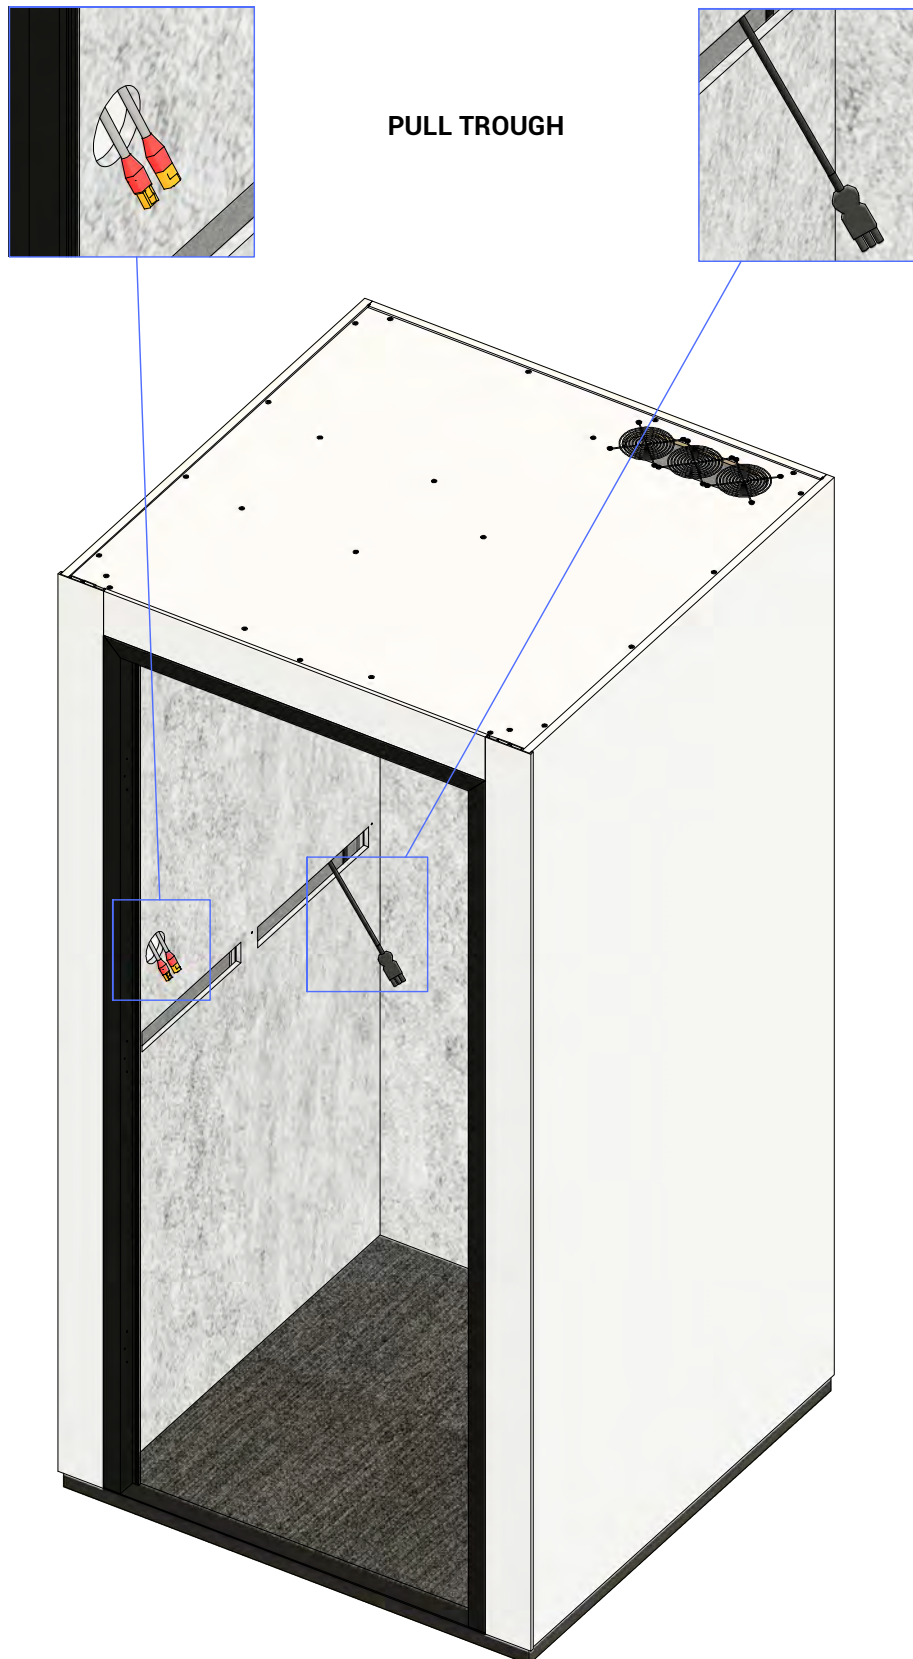

STEP 11.7

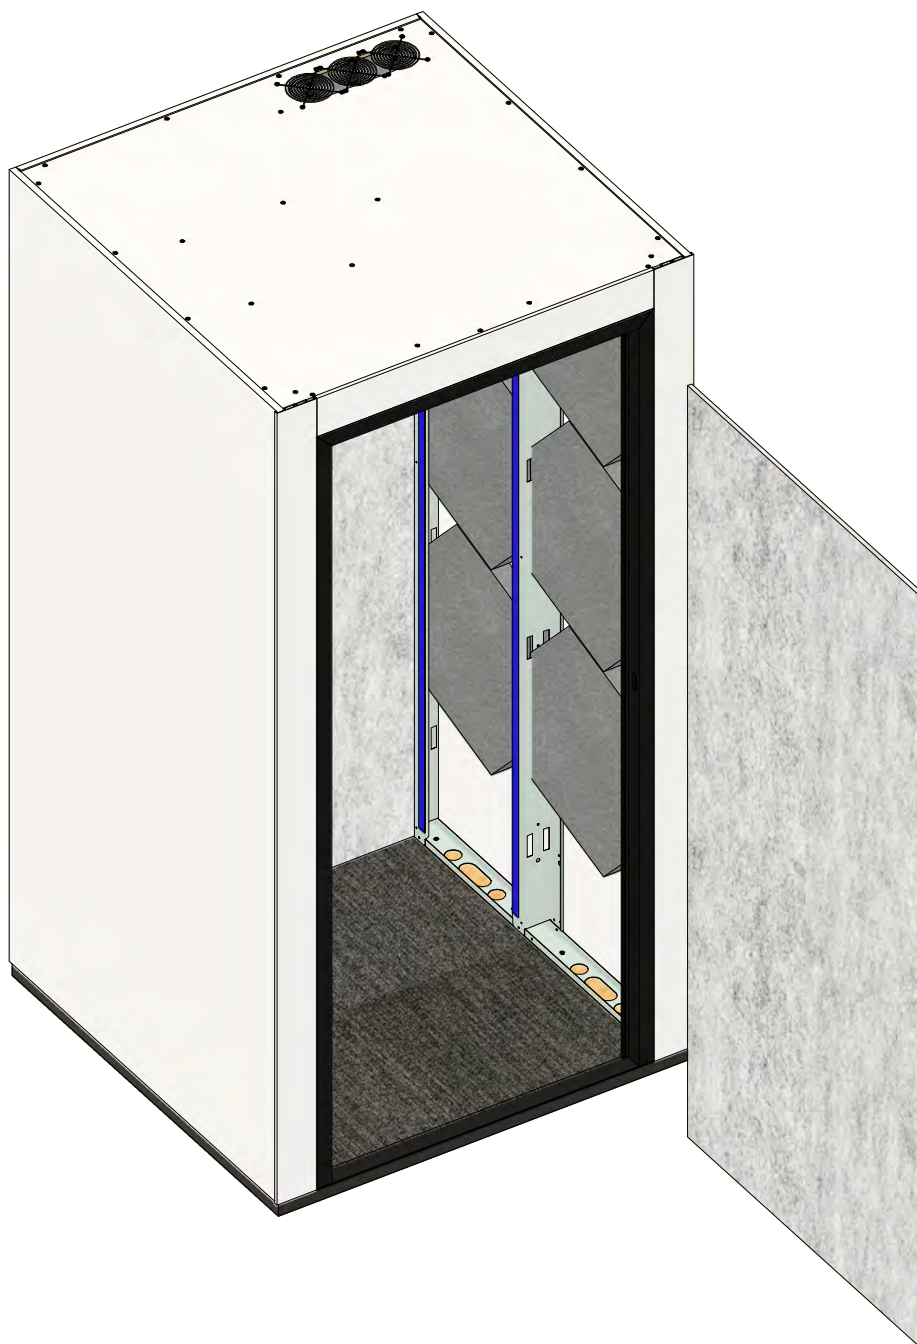
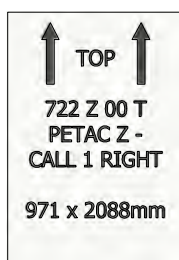


STEP 11.8

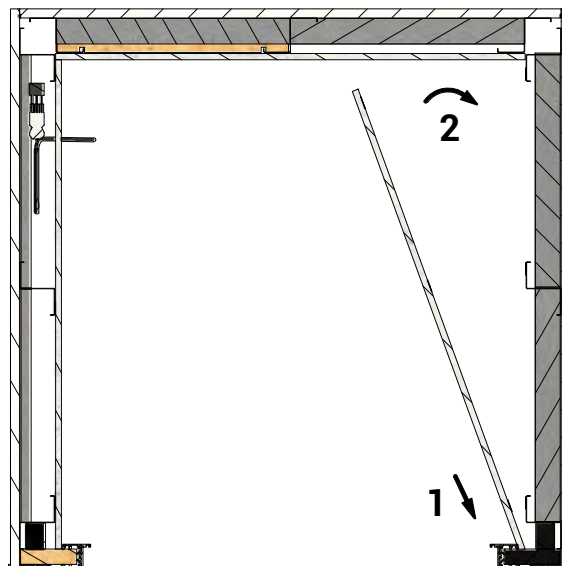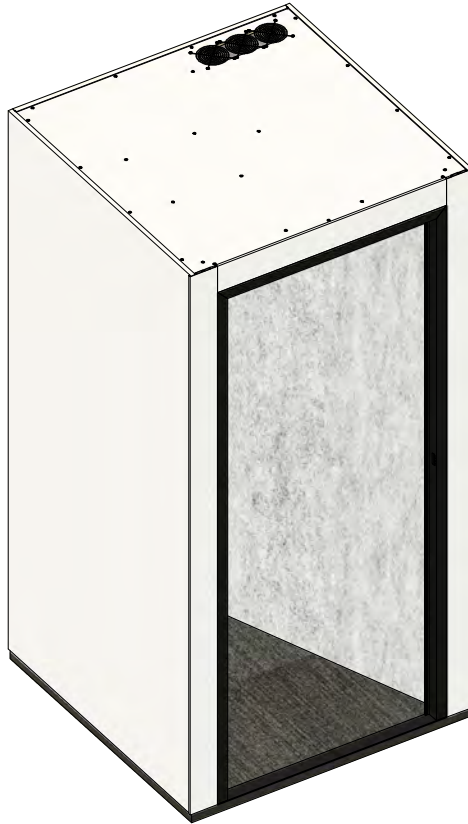



**INSTALL THE PETAC SO THE SEAM IS
TIGHT AND EVEN AT THE TOP**

STEP 12.1

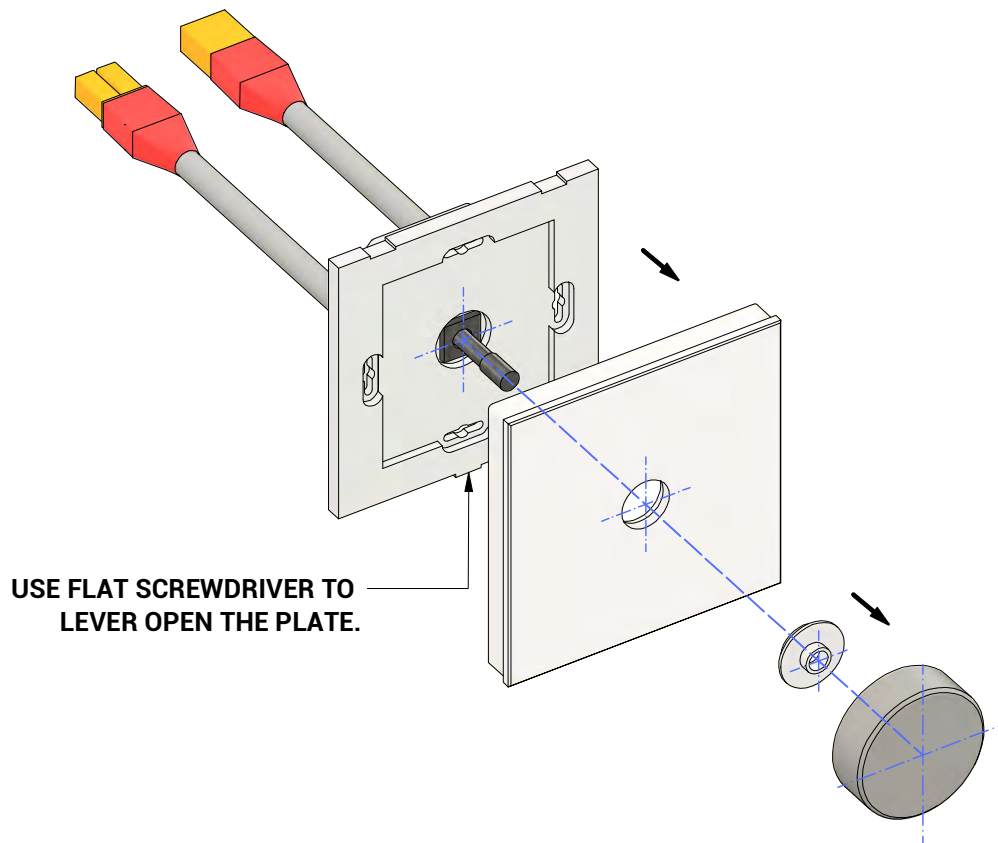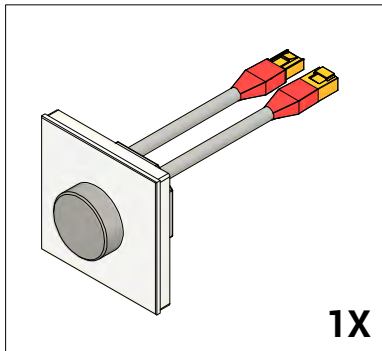


DISASSEMBLE

STEP 12.2

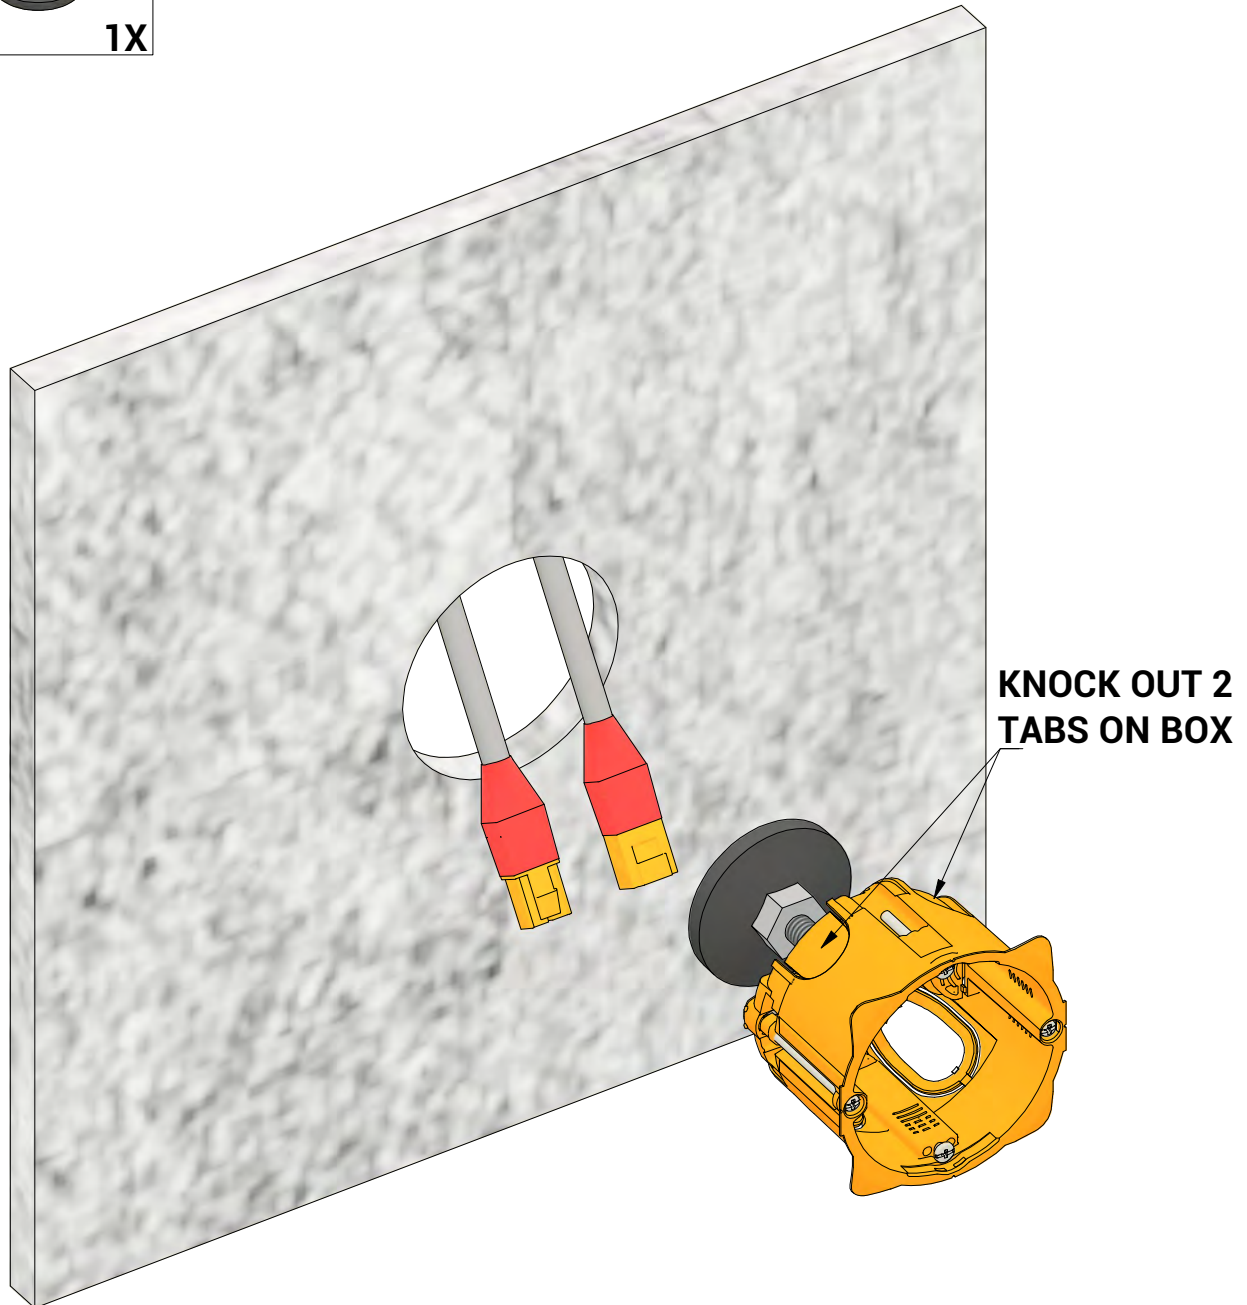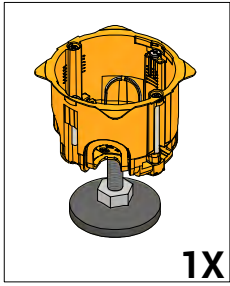

STEP 12.3


TOOLS NEEDED




PH 1



H 5

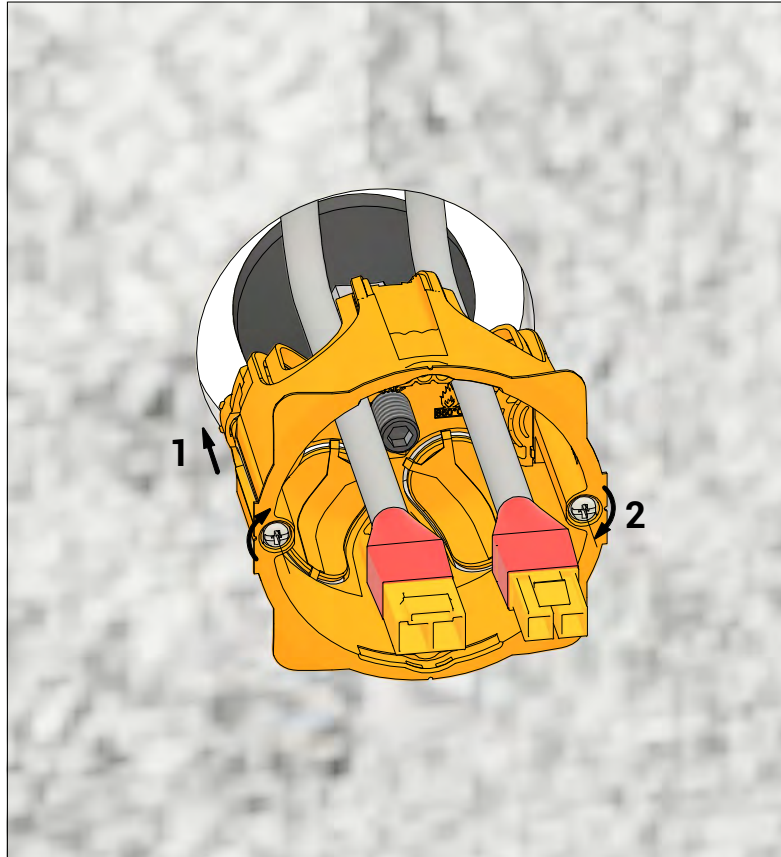


1. PUSH BOX INTO HOLE
2. TIGHTEN THE SCREWS UNTIL THE HALF MOON SHAPED CLIPS CLAMP BEHIND THE PANEL.
3. ADJUST LEVEL FOOT TO TOUCH EXTERIOR PANEL TO SUPPORT THE DIMMER BUTTON (H5).

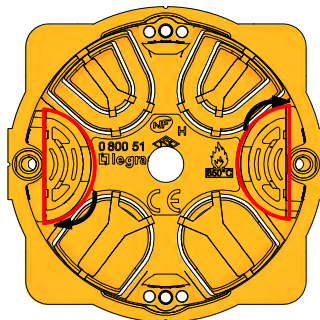


STEP 12.4

TOOLS NEEDED



PH 1

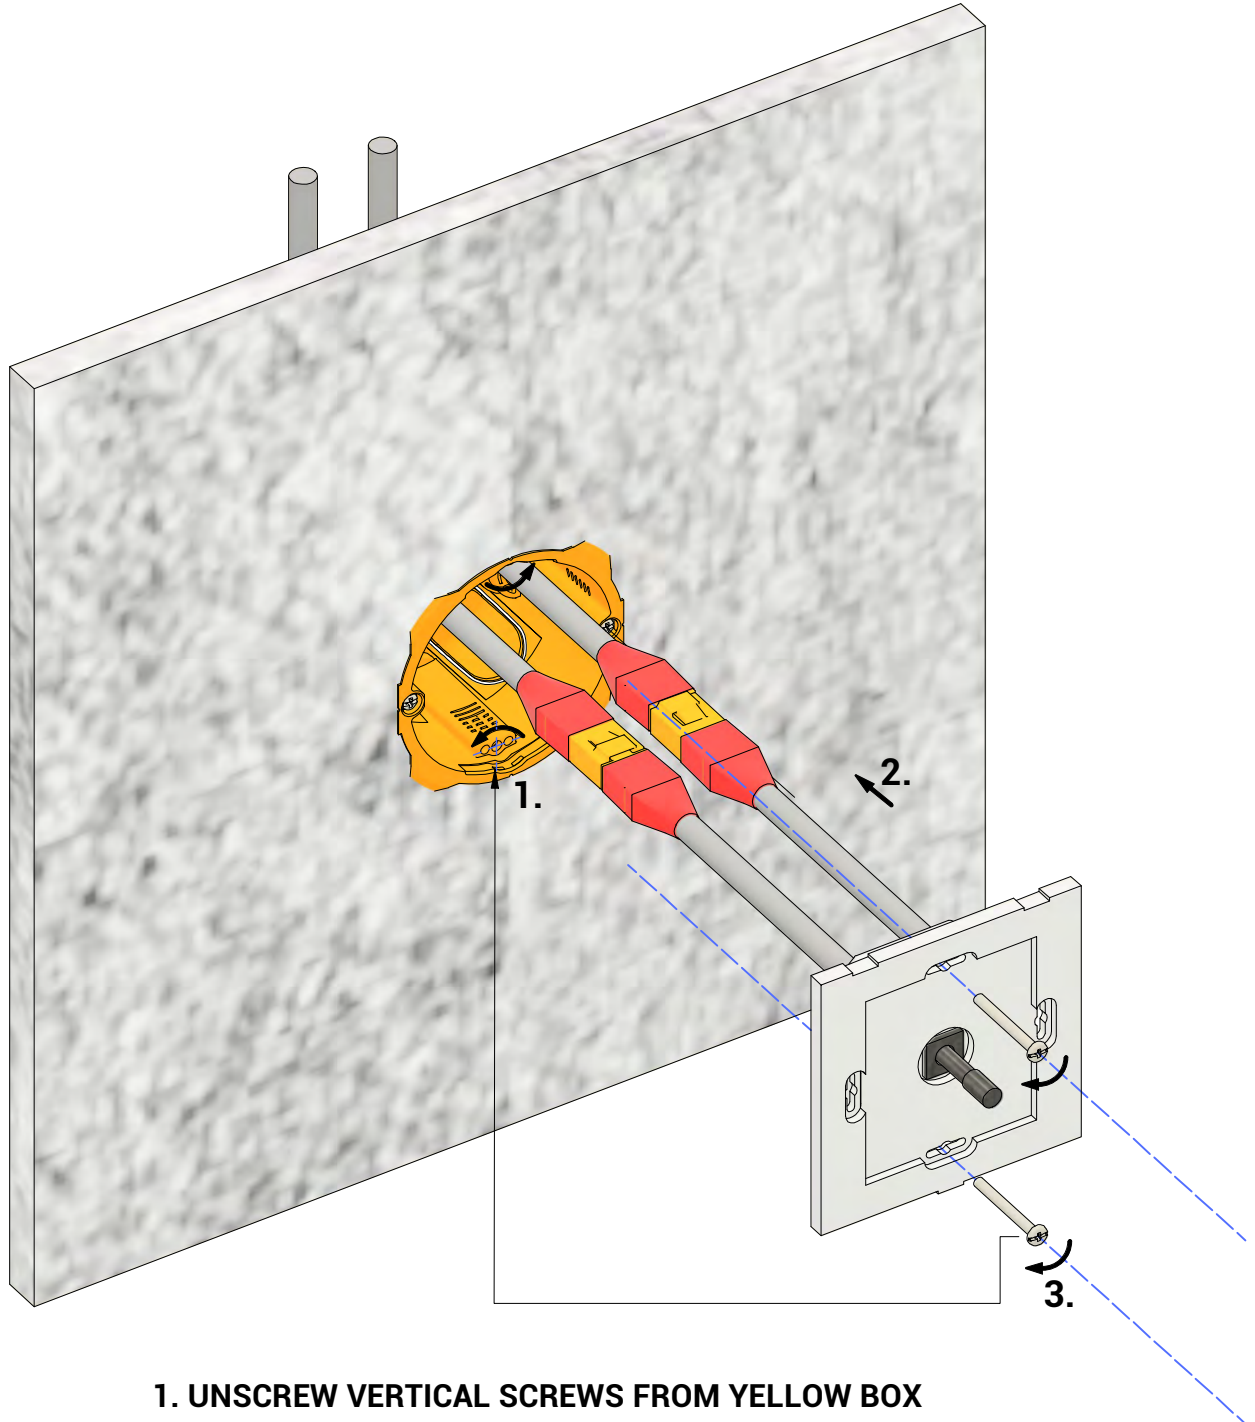

1. UNSCREW VERTICAL SCREWS FROM YELLOW BOX
2. CONNECT CABLES AND PUSH PLATE ONTO YELLOW BOX
3. FIX PLATE INSIDE YELLOW BOX WITH THE VERTICAL SCREWS

STEP 12.5




CLICK-ON COVER PLATE

**STEP
12.6**



PUSH ON

STEP 13.1

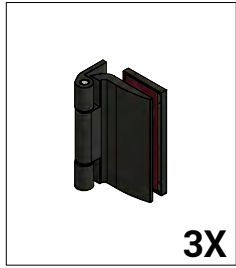

TOOLS NEEDED



**METRIC
H 1.5**




**METRIC
H 4**

REMOVE
STOCK BUSHINGS





INSERT
PROVIDED BUSHINGS



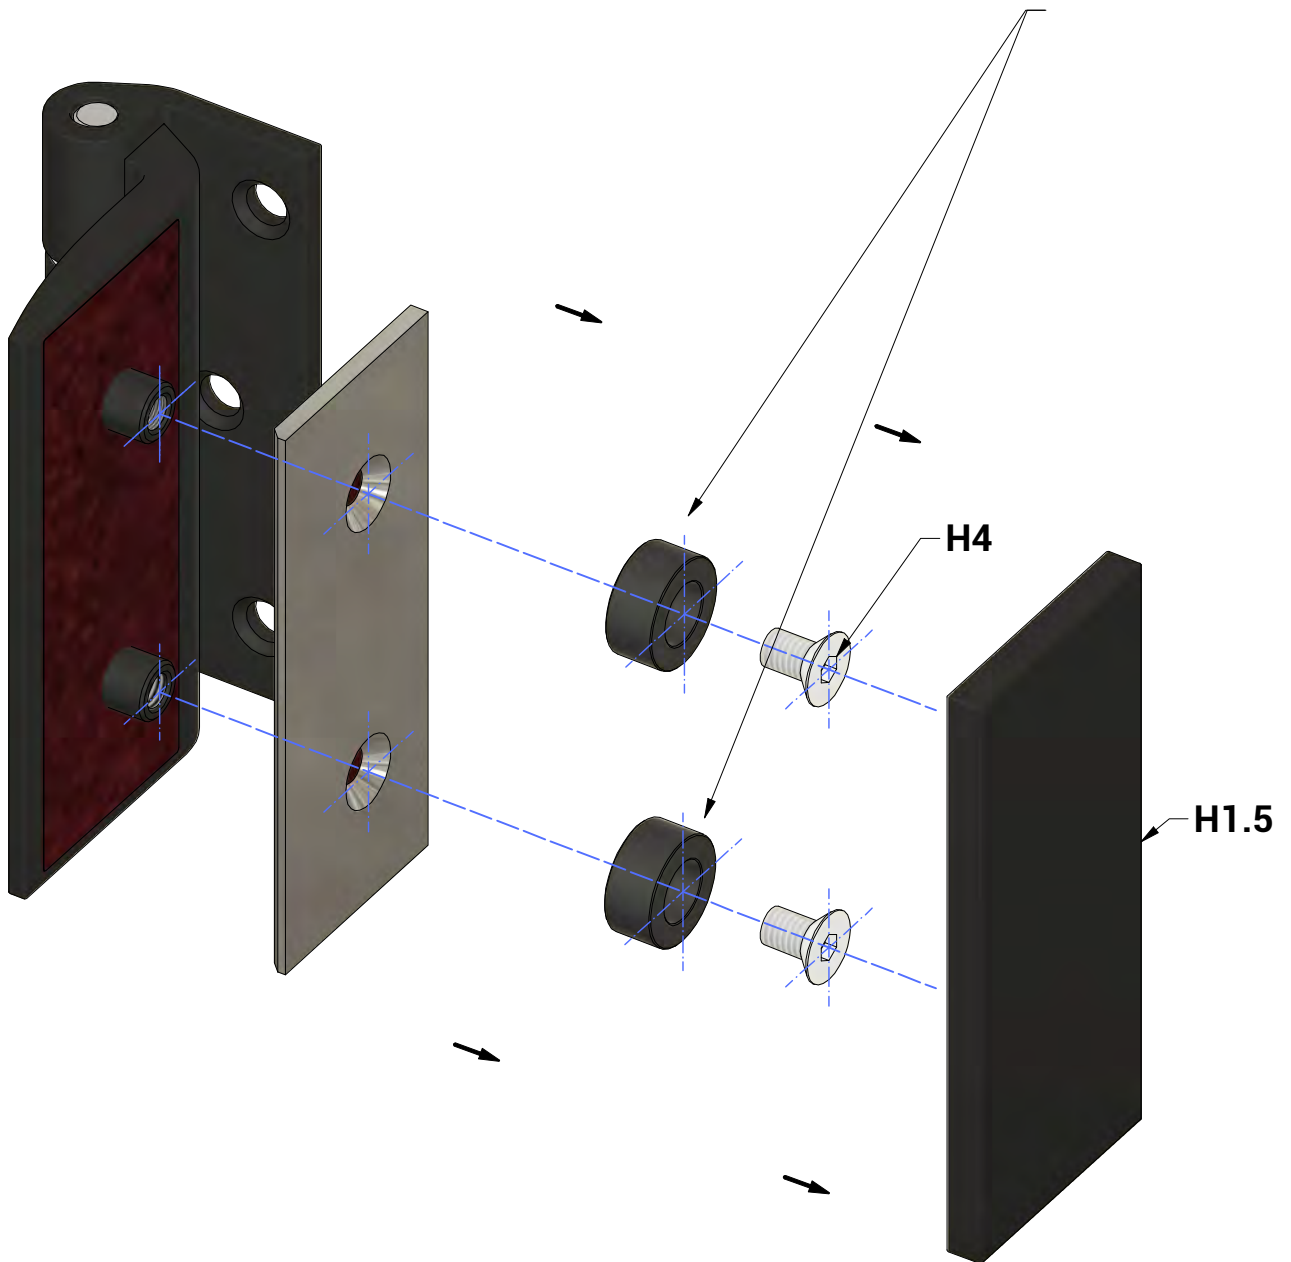


DISASSEMBLE X3

STEP 13.2

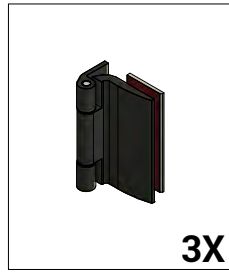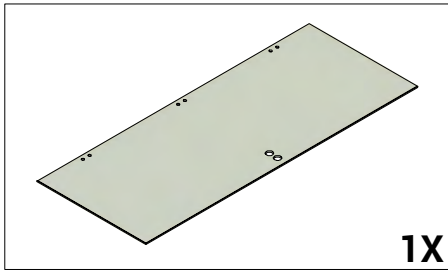


TOOLS NEEDED

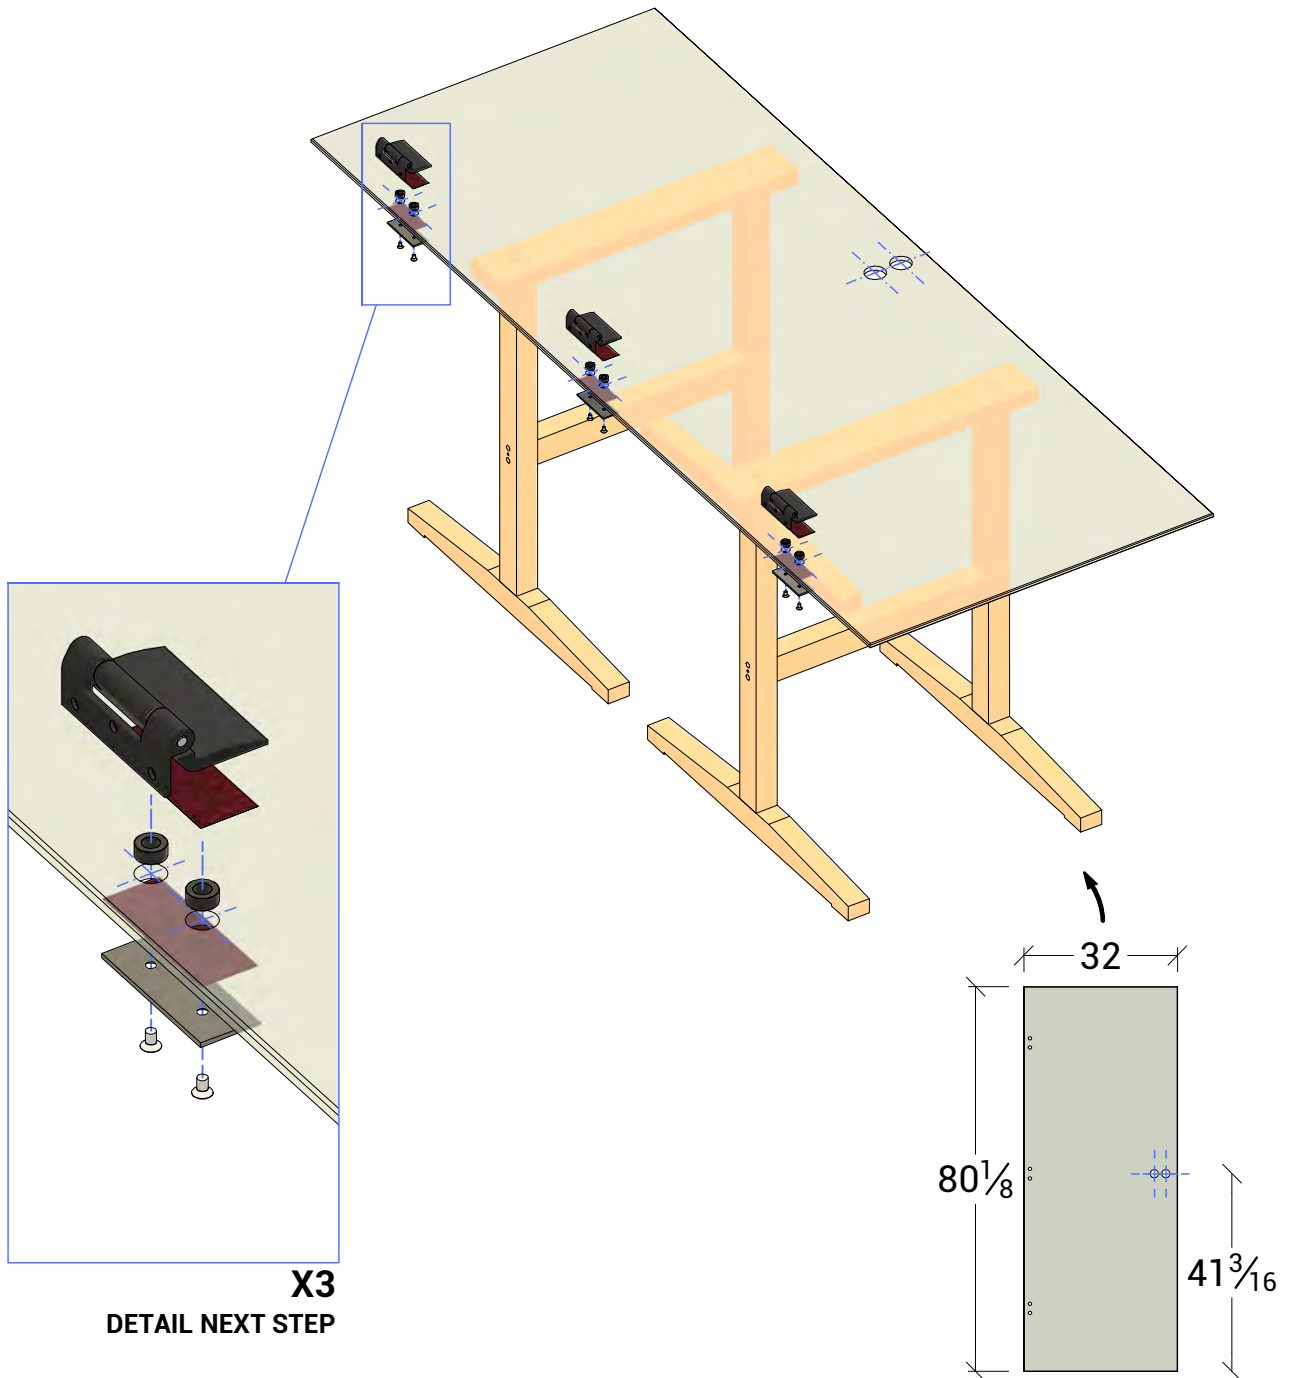
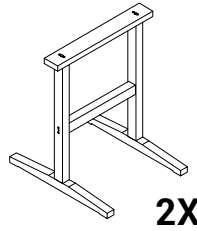


STEP 13.3


TOOLS NEEDED

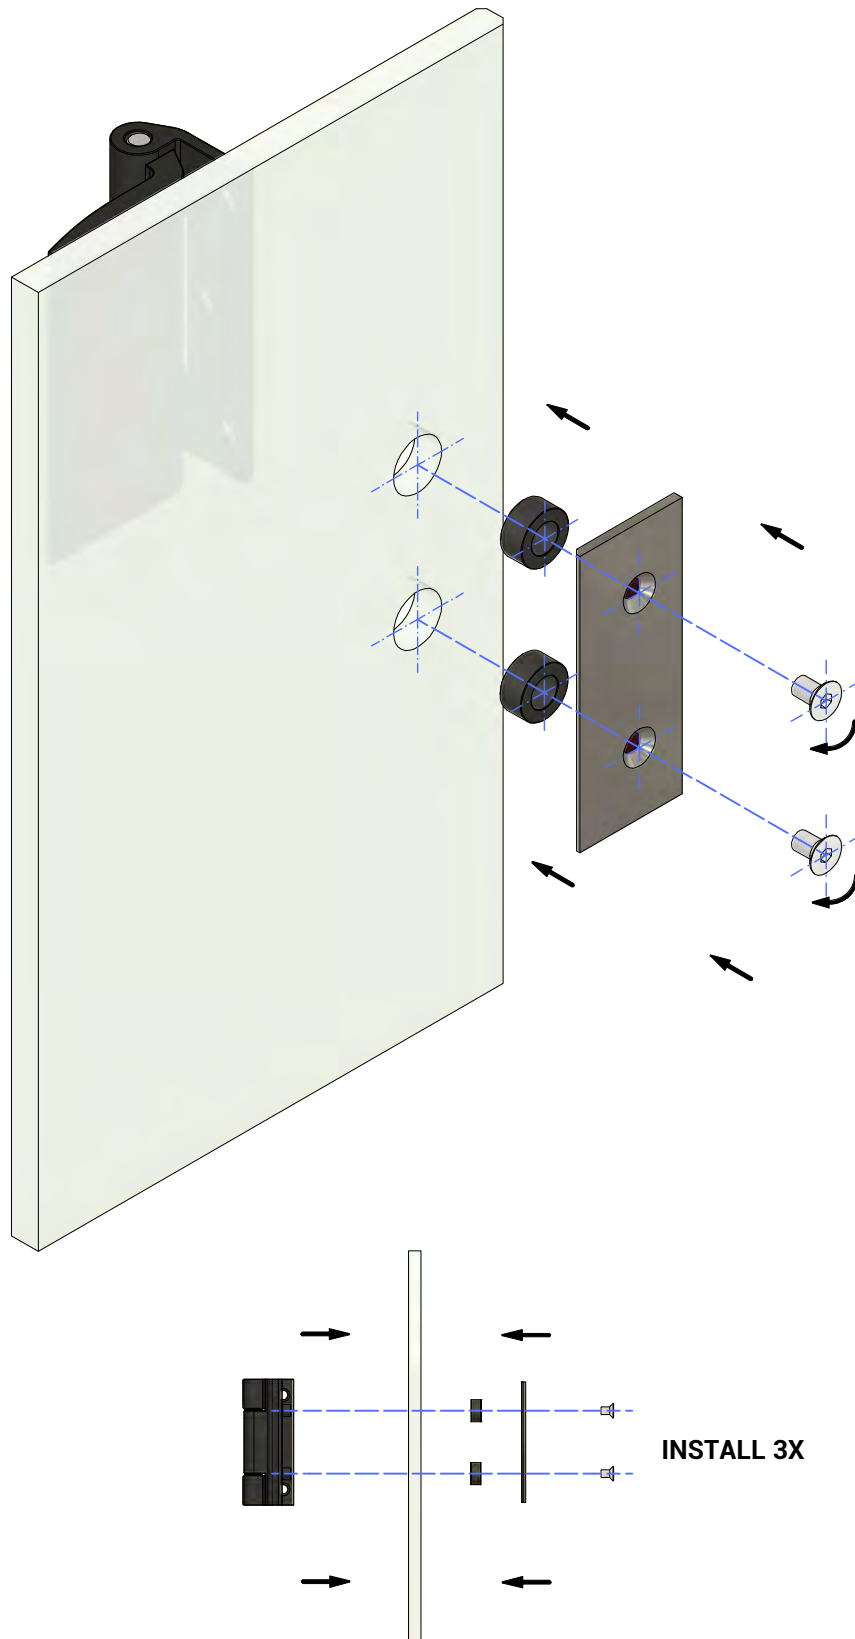

STEP 14.1

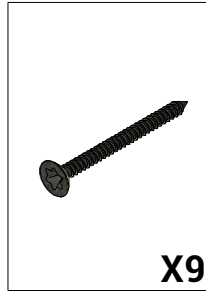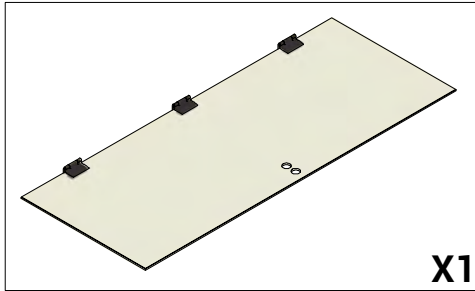


TOOLS NEEDED






TX 20



+
PACKING FELT

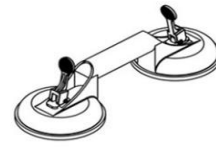


OPEN HINGE

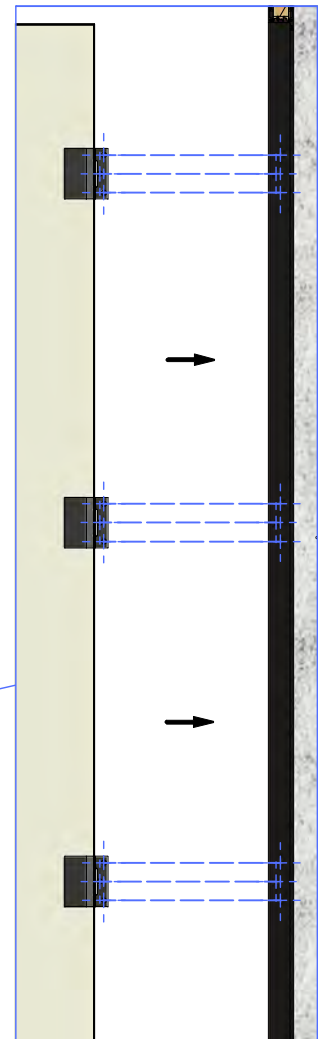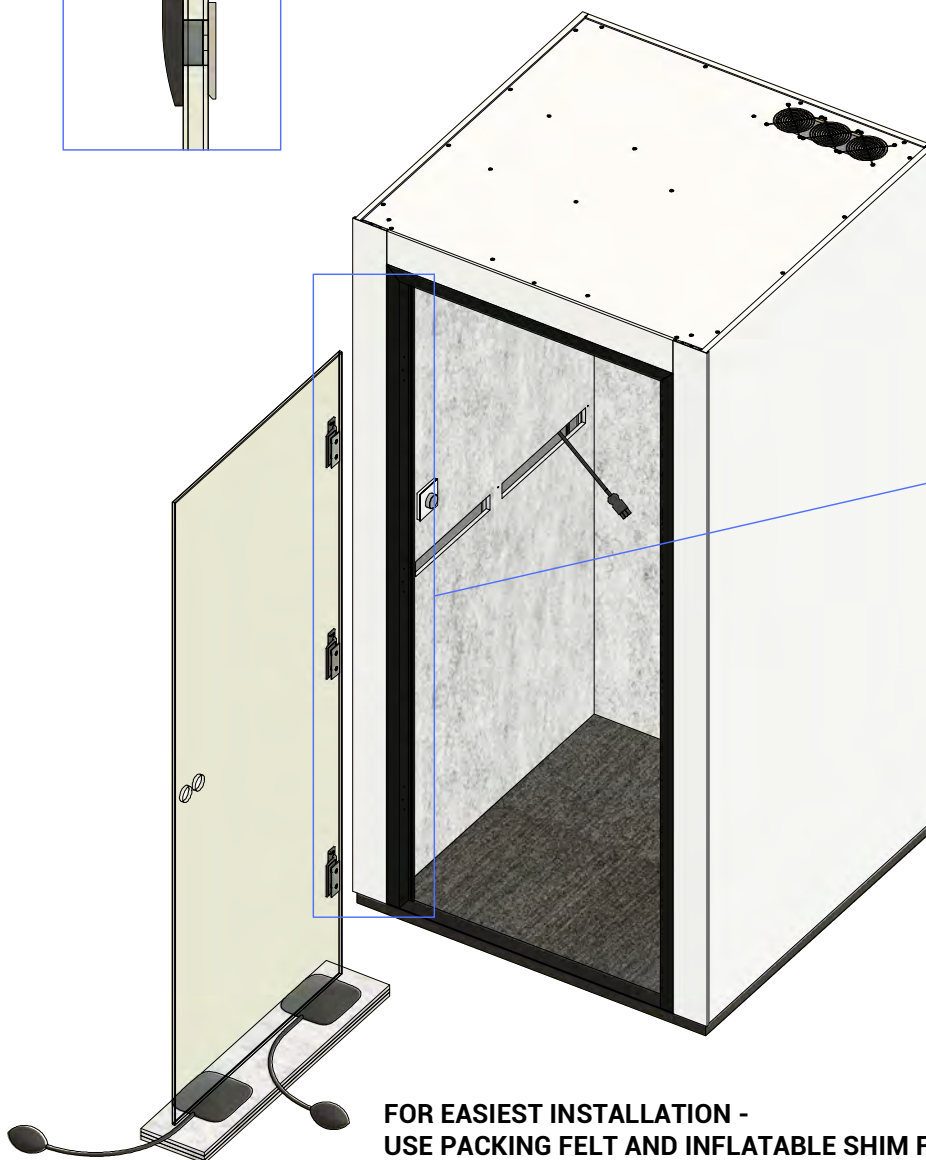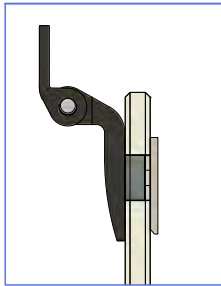



POSITION & SCREW

**FOR EASIEST INSTALLATION -
USE PACKING FELT AND INFLATABLE SHIM FOR SUPPORT**

STEP 14.2

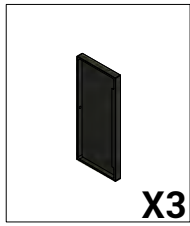


TOOLS NEEDED

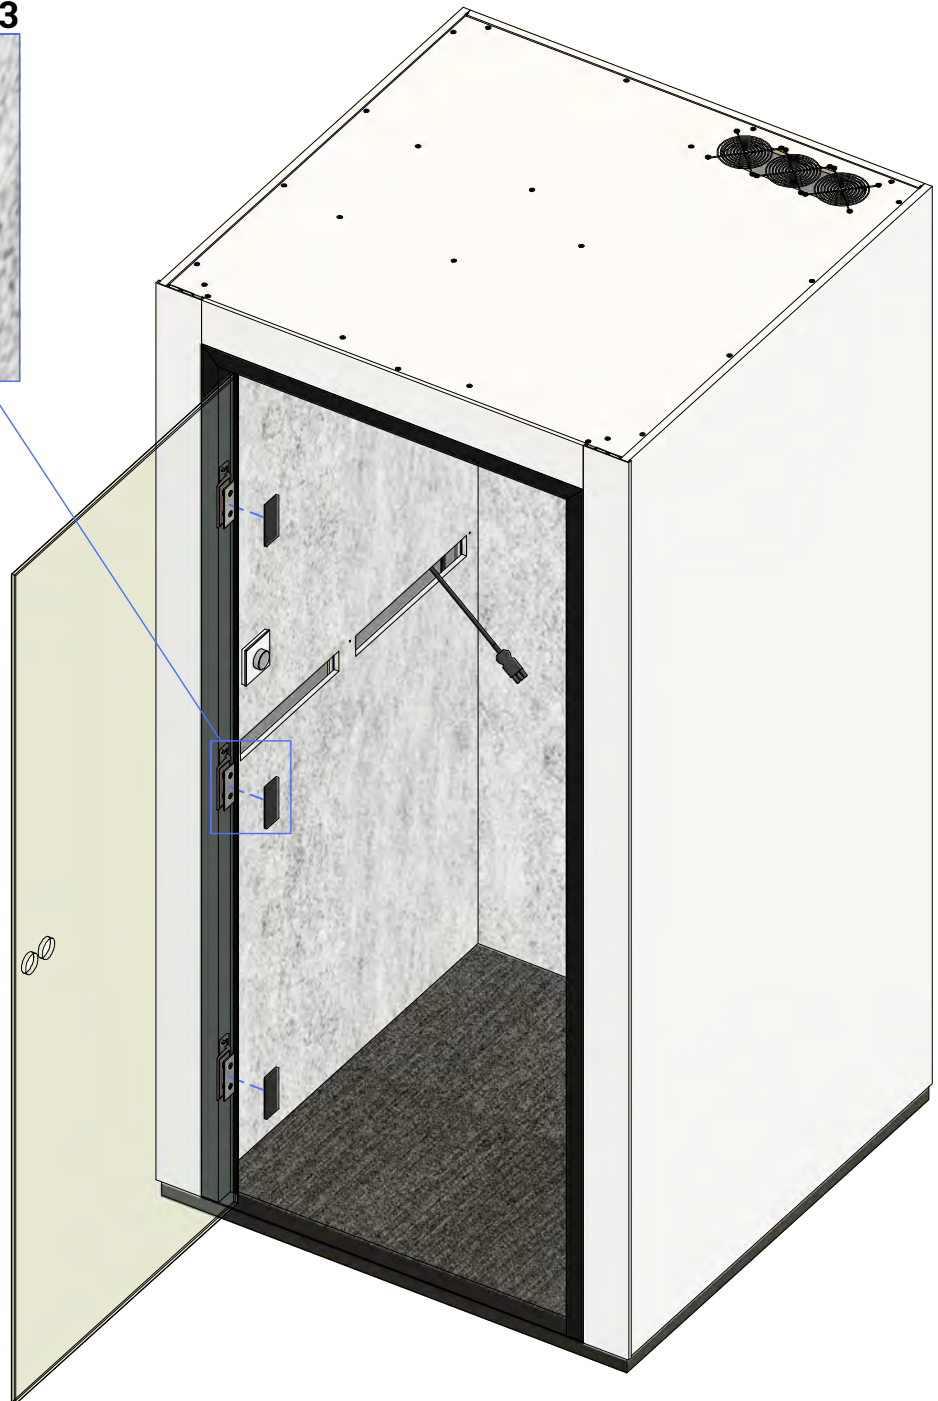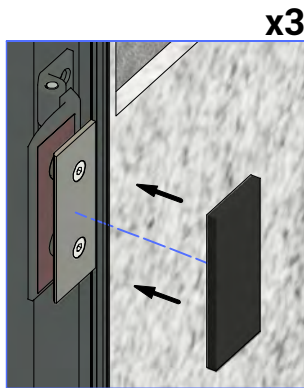


STEP 15.1



TOOLS NEEDED

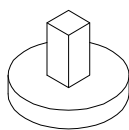


IN THE BOX

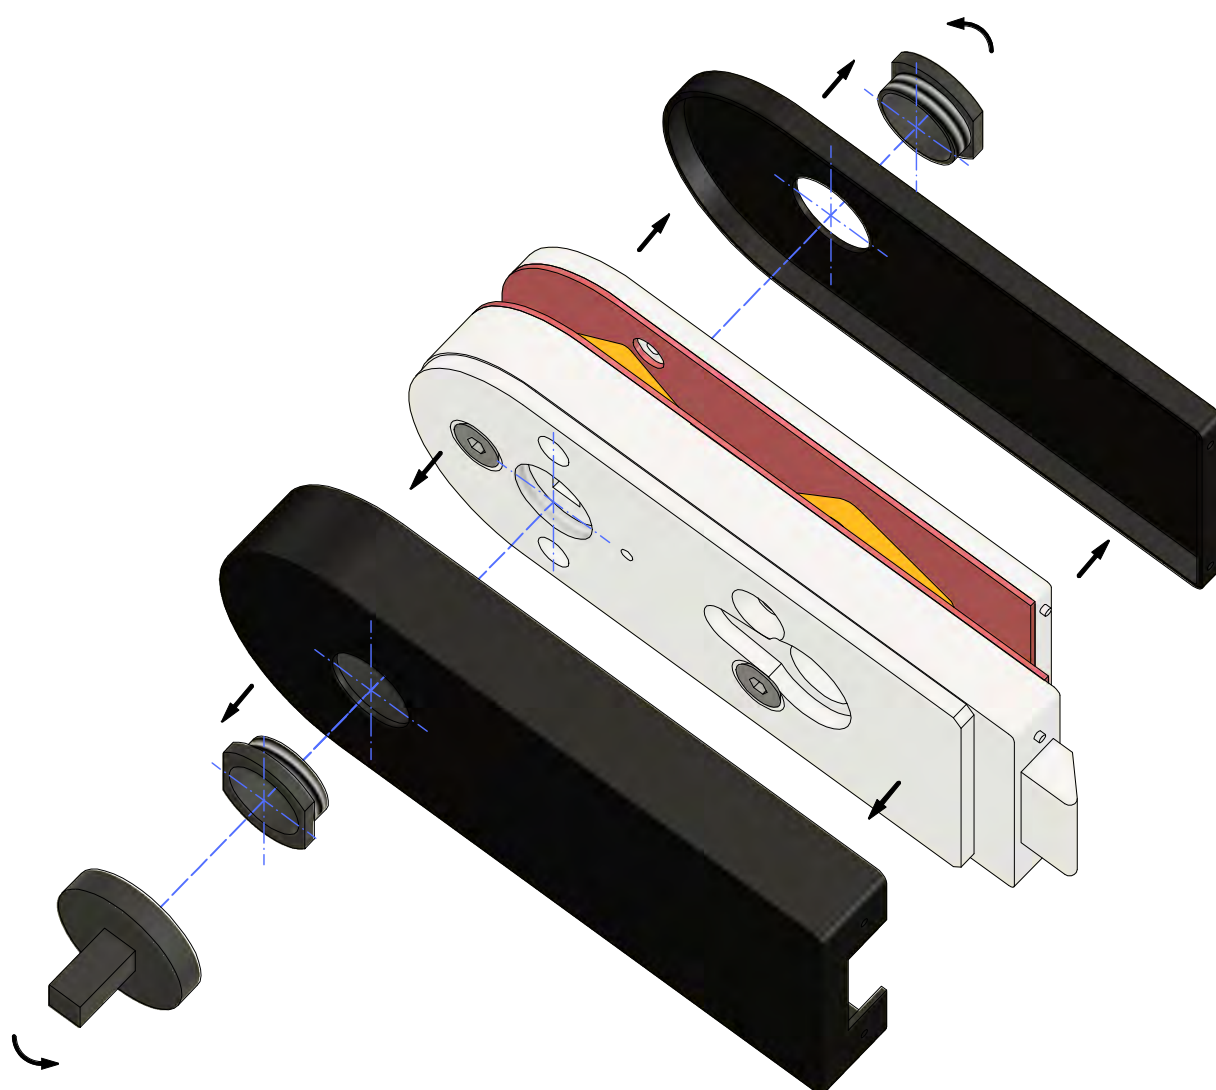

DISASSEMBLE


STEP 15.2

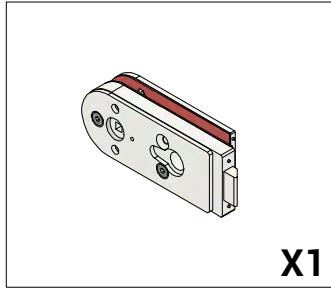

TOOLS NEEDED





PEEL OFF THE ADHESIVE BACKING AND STICK
TO INSIDE OF FACE OF MORTICE ASSEMBLY

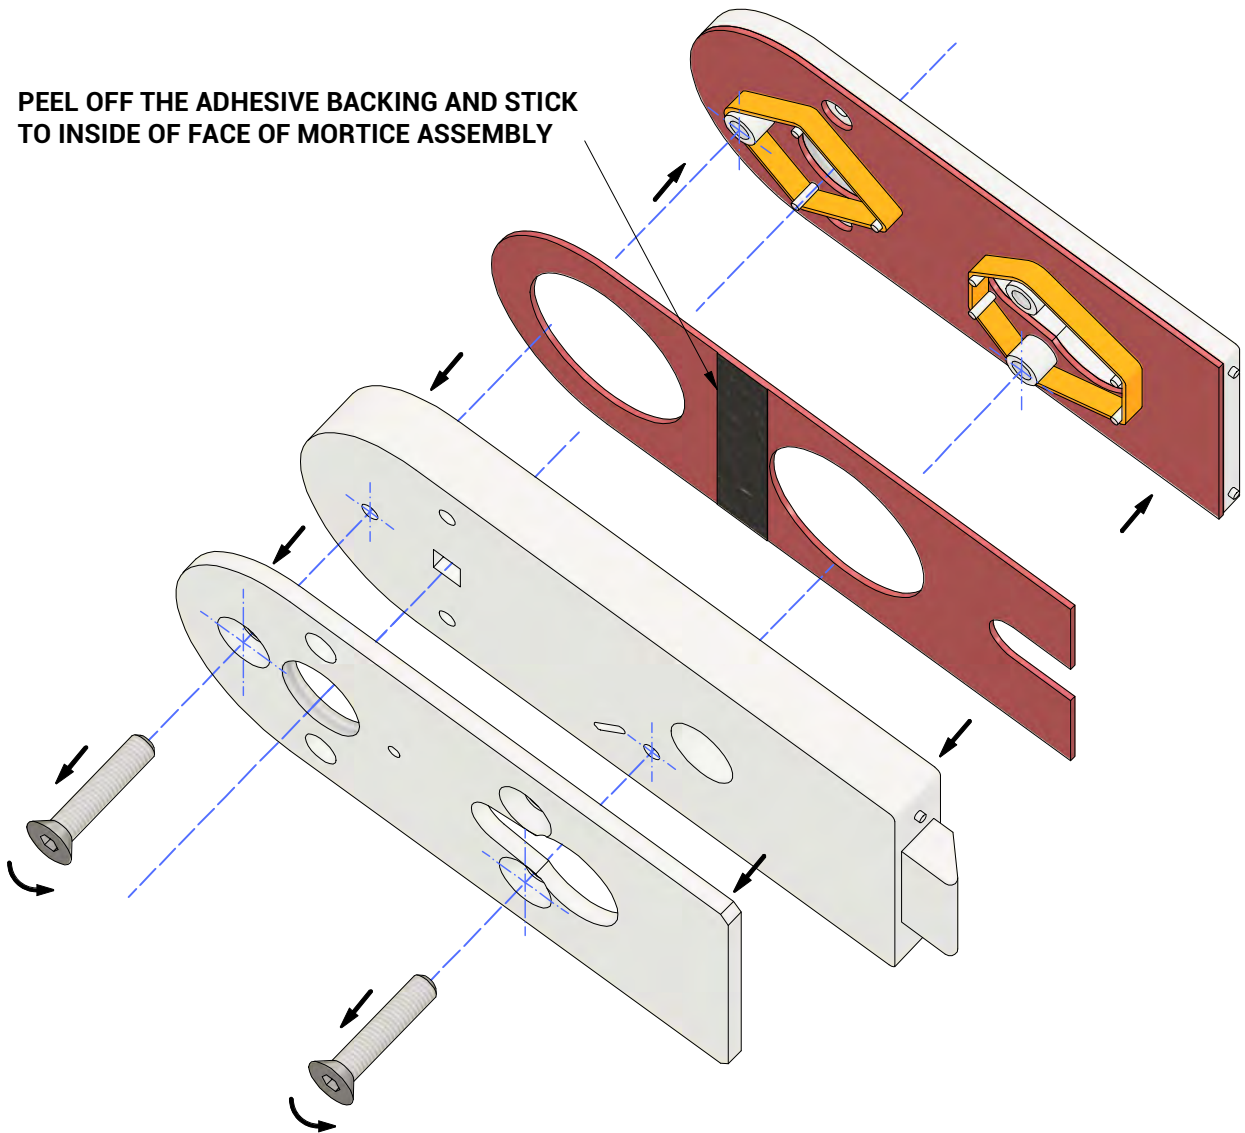


DISASSEMBLE

STEP 15.3

TOOLS NEEDED

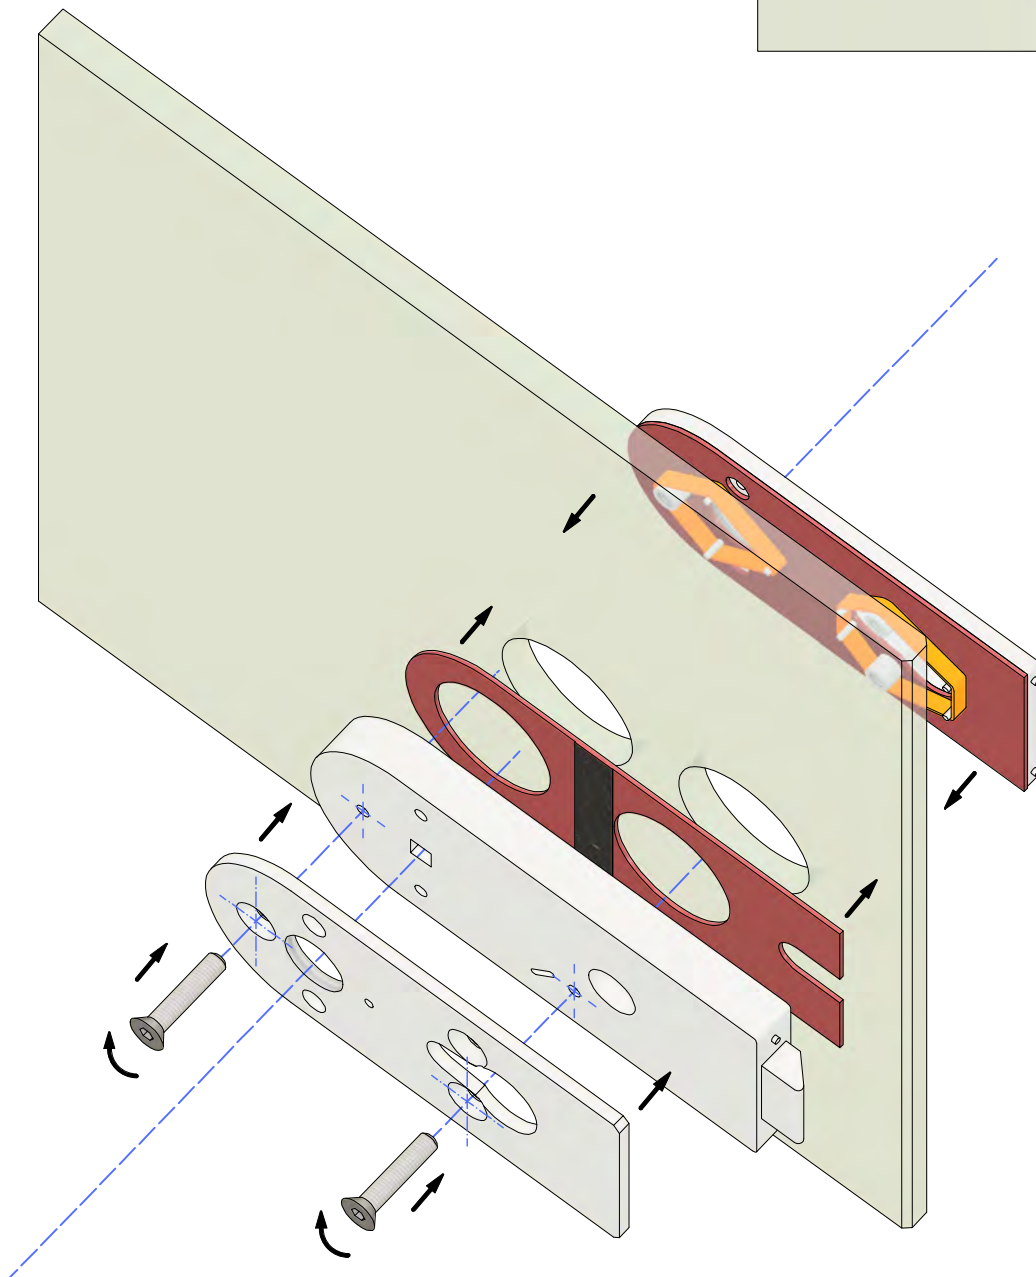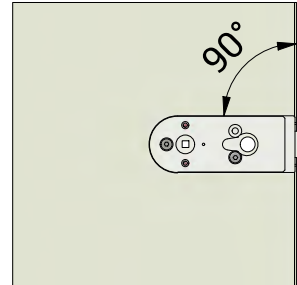


STEP 15.4

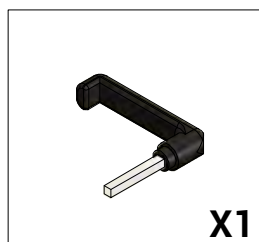

TOOLS NEEDED




**METRIC
H 3**
IN THE BOX

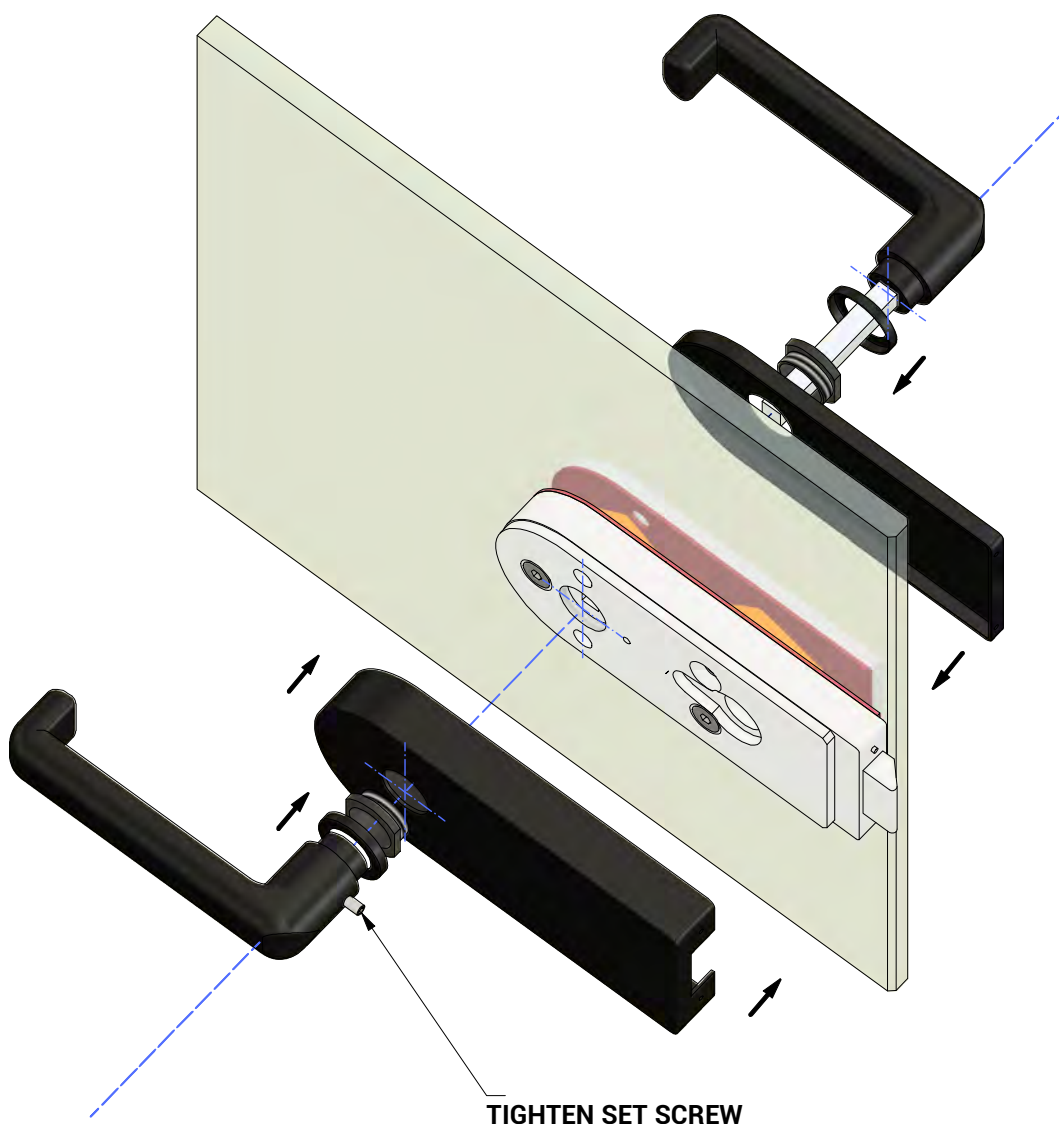

STEP 16.1



1

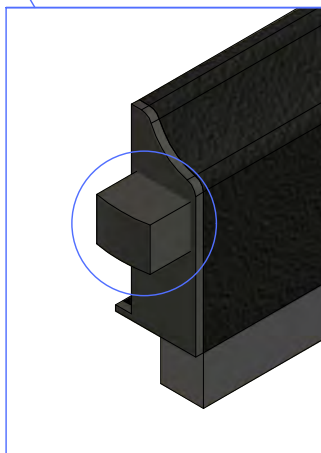


2




TURN THE SEAL BUTTON UNTIL FLUSH

STEP 16.2

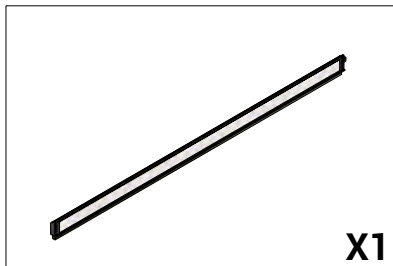


**BEFORE REMOVING THE ADHESIVE BACKING ON THE SEAL,
CHECK THAT YOU ARE ALIGNED AT THE ENDS
AND THE BOTTOM OF THE DOOR LEAF.**


**THE ADHESIVE IS EXTREMELY STRONG AND
A MISALIGNED SEAL WILL REQUIRE A RETURN TO SITE**

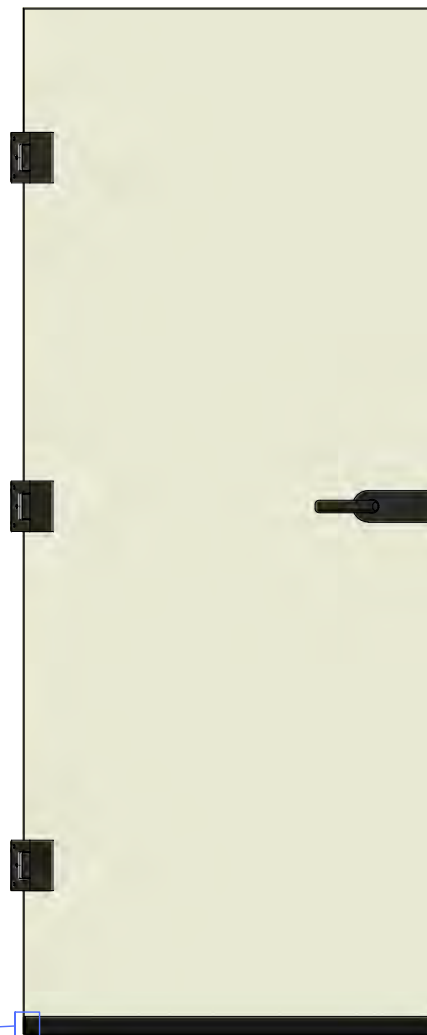


1

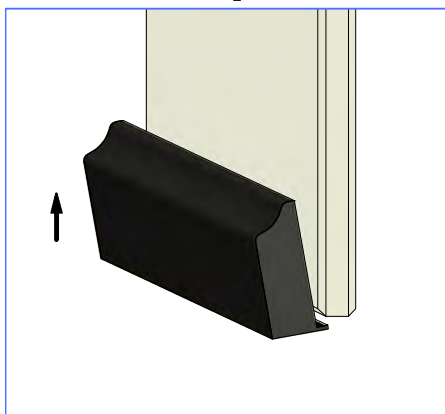

2

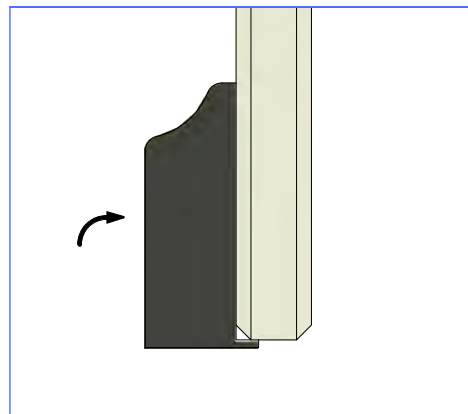

STEP 16.3

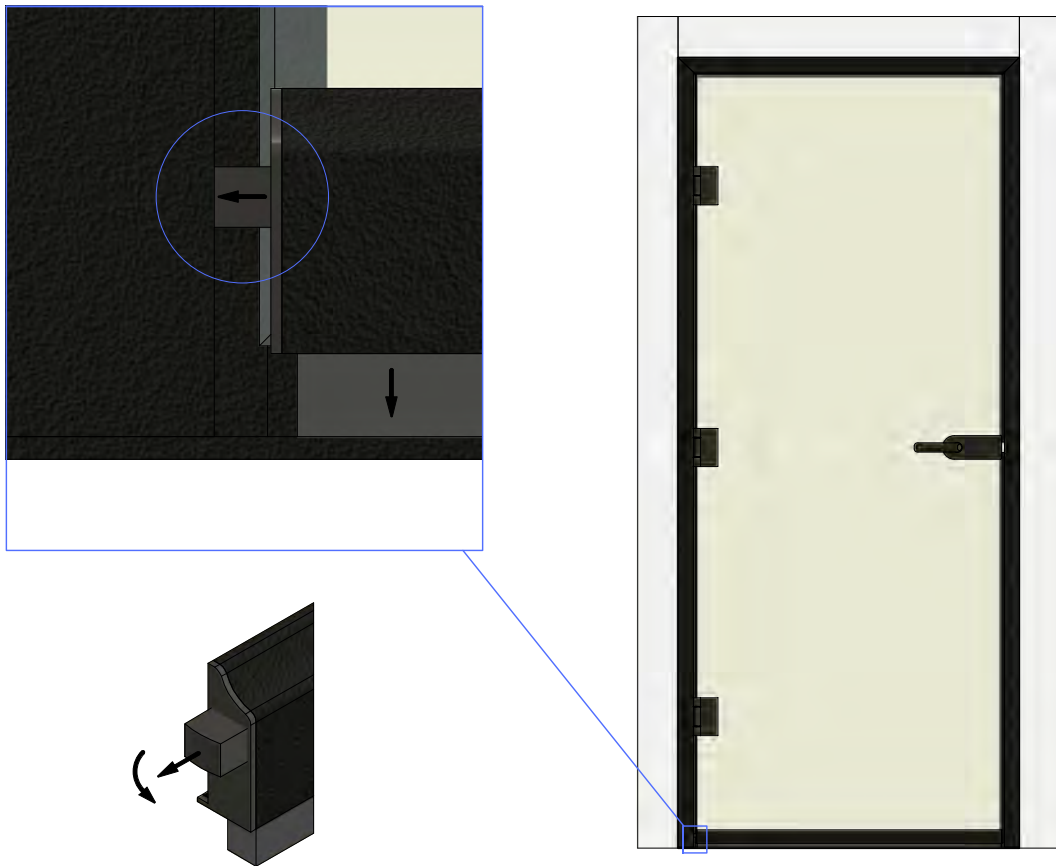

OPEN THE DOOR AND PULL CAREFULLY ON THE SEAL BUTTON - ROTATE TO ADJUST POSITION.



CLOSE THE DOOR TO CHECK IF THE SEAL IS ENGAGING SUFFICIENTLY. CONTINUE TO BACK IT OUT UNTIL THE DOOR SEAL FULLY CLOSES THE GAP AT THE BOTTOM OF THE DOOR.

THE THRESHOLD WILL PROVIDE UPWARD FORCE ON THE HINGE SIDE OF THE SEAL.

IF THE GAP IS STILL SKEWED IT MEANS THAT THE LEVEL NEEDS MORE ADJUSTING.


CONTINUE TO BACK OUT THE BUTTON 1/4 TURN AT A TIME UNTIL THE SEAL IS FULLY ENGAGED.

STEP 16.4

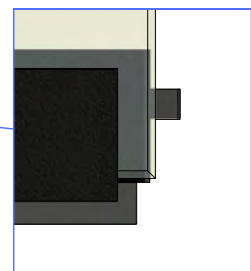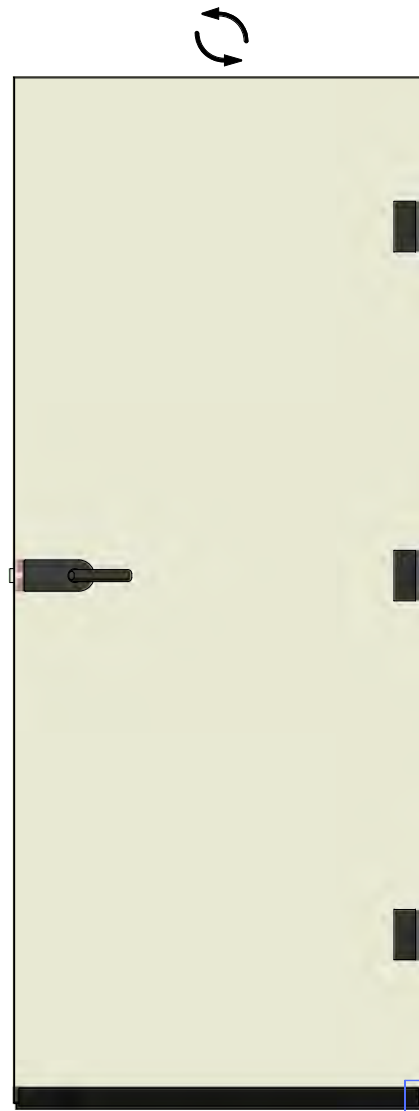


**REMOVE ADHESIVE BACKING &
ALIGN AT CENTER USING
GUIDELINES IN PREVIOUS STEP**

1


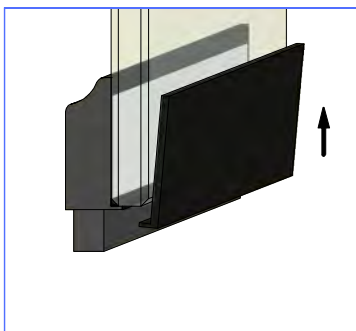


2

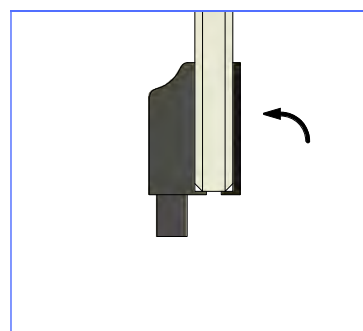



STEP 17.1

TOOLS NEEDED

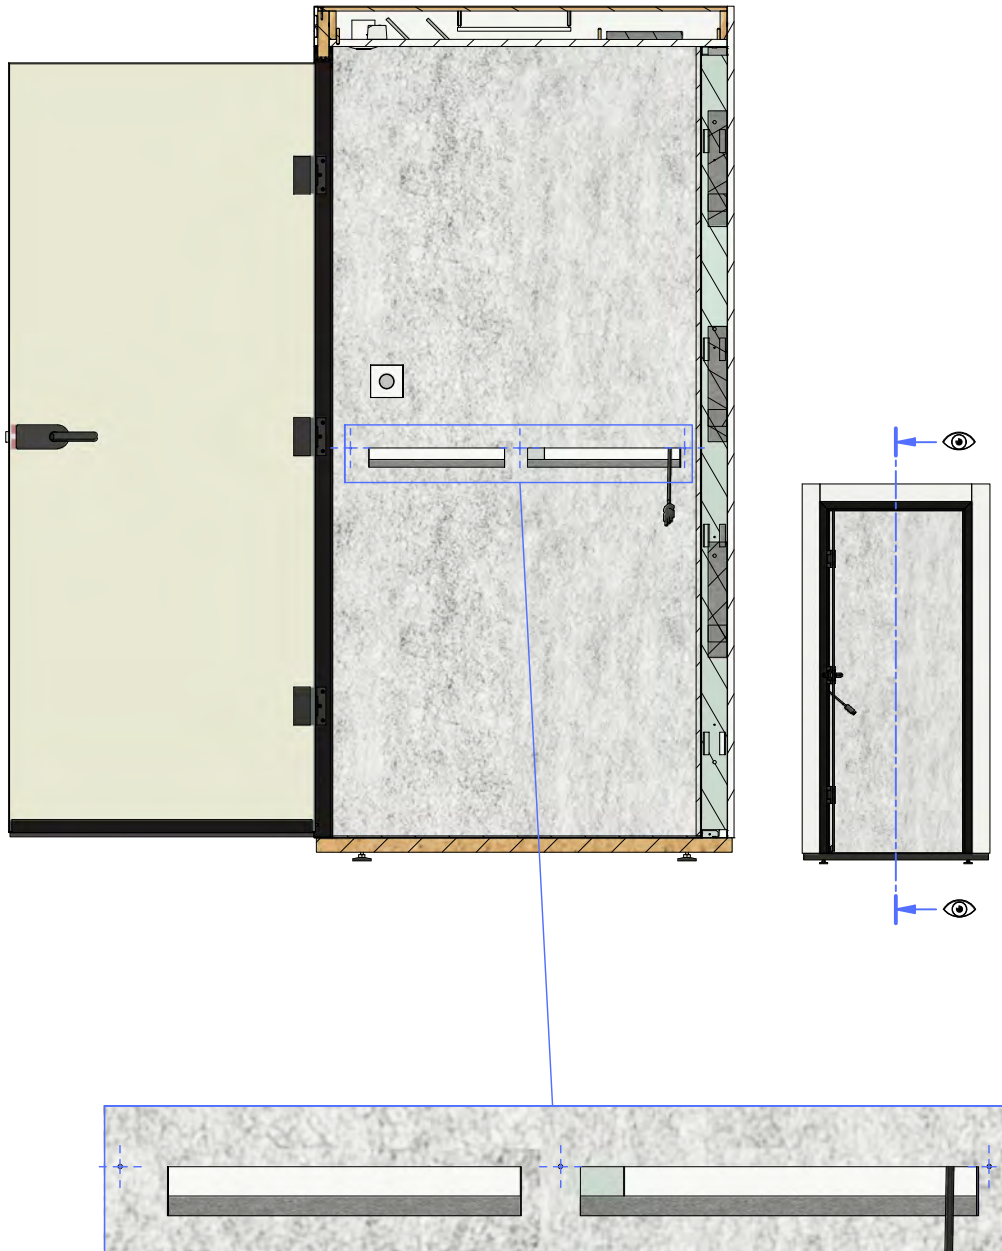
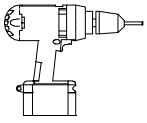


**USING REFERENCE HOLES IN FELT PANEL,
PRE-DRILL THE METAL STUDS TO PREP FOR DESK MOUNTING**



STEP 17.2

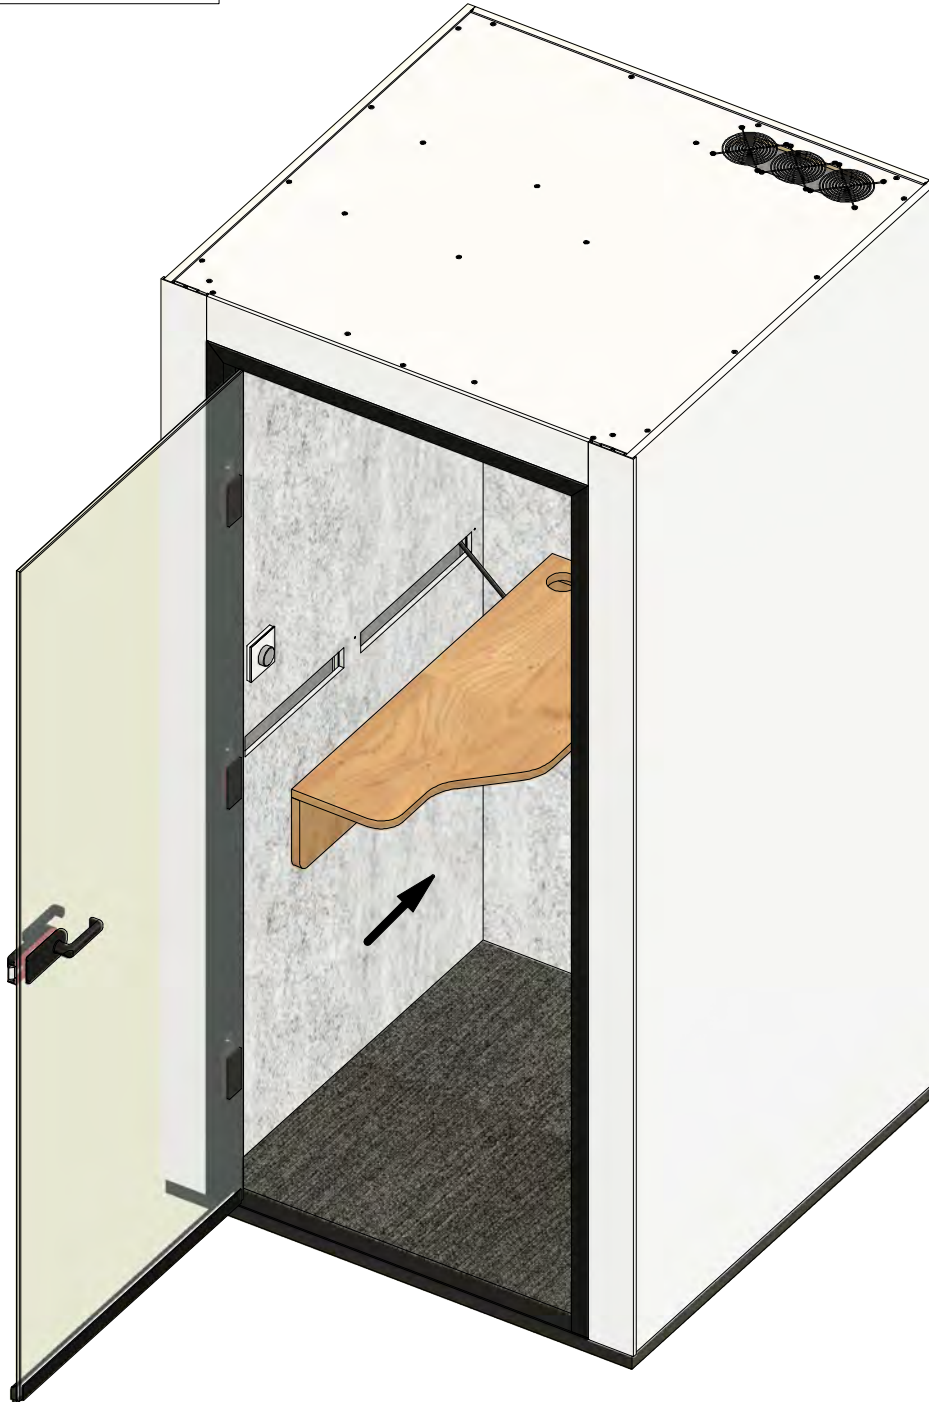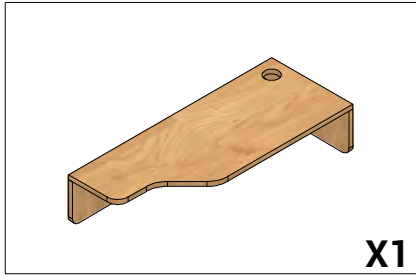

STEP 17.3

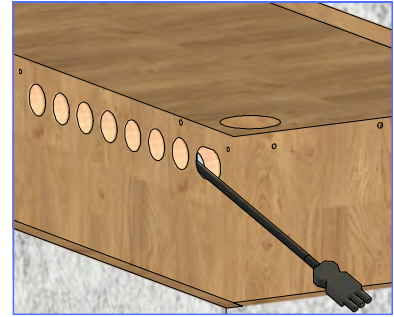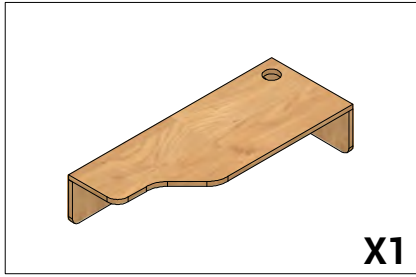


**ROUTE CABLE THROUGH
OVAL HOLE**

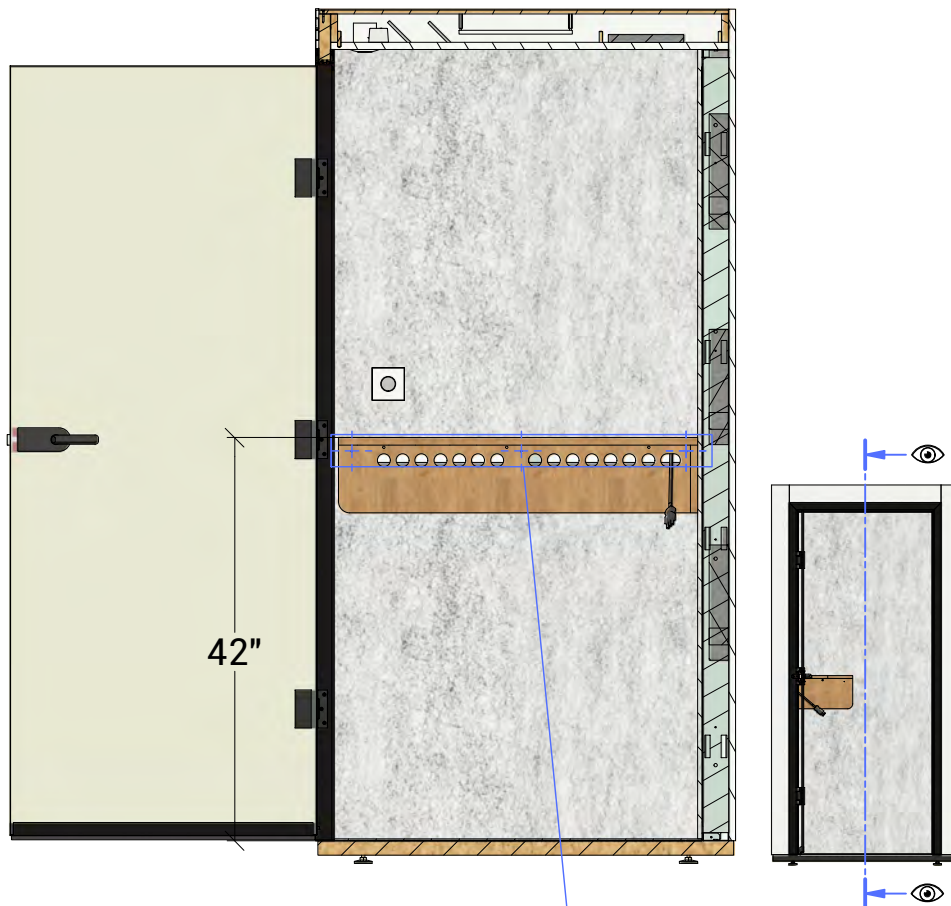


ALIGN THE 3 MARKED HOLES WITH DRILLED HOLES IN PREVIOUS STEP


STEP 17.4

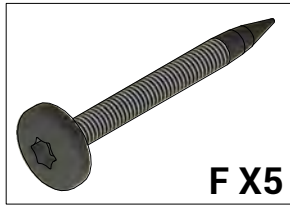


TOOLS NEEDED





TX 20

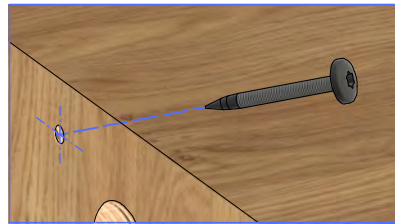

x5

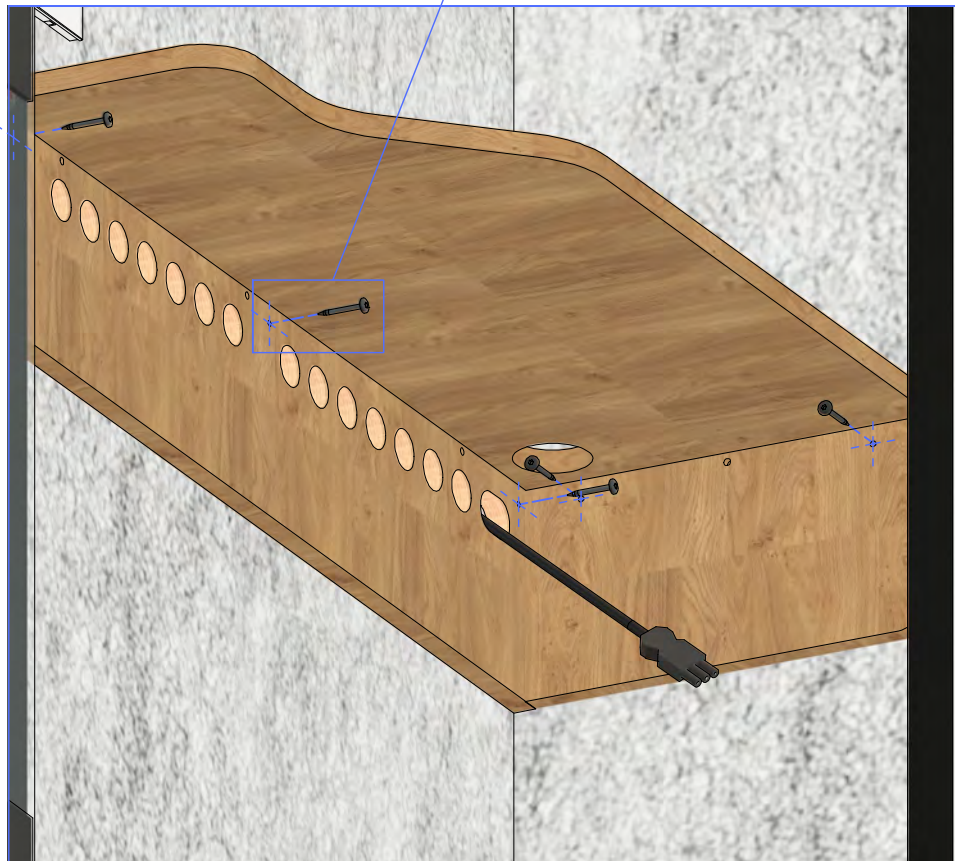

STEP 18.1

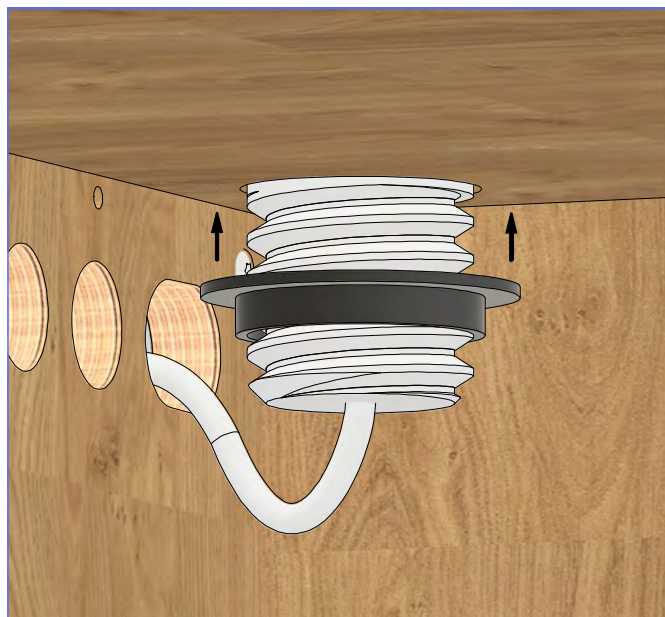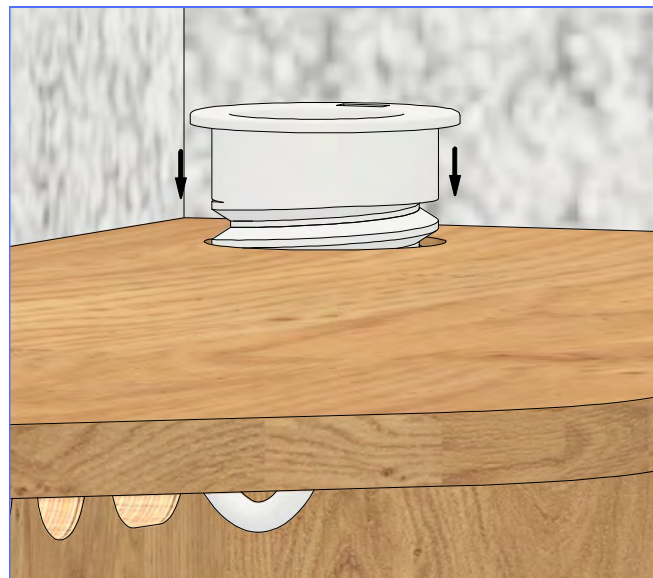

CONNECT & ROUTE OUTLET CABLE BACK INTO WALL CAVITY

STEP 19.1



CLEAN ALL SURFACES AND INSTALLATION AREA

CLEAN THE TABLE

REMOVE ANY REMAINING STICKERS OR DEBRIS

CLEAN THE GLASS INTERIOR

VACCUUM THE POD AND WORKING SPACE

CLEAN THE EXTERIOR GLASS AND PANELS